| | RHINO-RACK | | |
|----------------------|---|--|--|
| RCP55-BK Dodge Nitro | | | |
| Important: | 1. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. | | |
| | 2. Check the contents of kit before commencing fitment and report any discrepancies. | | |
| | 3. Place these instructions in the vehicle's glove box after installation is complete. | | |
| | 4. These instructions must be followed for warranty to be upheld. | | |
| Note: Cro | sbars and legs sold as separate. | | |

Important Information

| On Road Cargo Allowance | Off Road Cargo Allowance | Roof Allowance | Rack Weight |
|-------------------------|--------------------------|----------------|-------------|
| 63kg / 138lb | 42kg / 92lbs | 68kg / 150lbs | 5kg / 11lb |

Maximum carrying capacity: Two Crossbars; 68 kg (150 lbs) evenly distributed. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are re-fitted. Make sure to securely fasten any and all loads carried on your crossbars. Please ensure that all loads are evenly distributed over the crossbars and that the centre of gravity is kept as low as possible.

USE ONLY NON-STRETCH FASTENING ROPES OR STRAPS TO SECURE LOADS CARRIED.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M5: 3-4Nm (2-3lbs/ft), M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Sensitivity to crosswinds, behaviour in curves and braking.

The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons, we recommend you exercise extreme care when transporting wind-resisting loads; Special consideration must be taken into account when braking.

Please remove crossbars when putting vehicle through an automatic car wash.

Load Ratings:

Maximum permissible load is 68 kg (150 lbs) for two crossbars include the weight of the crossbars 5 kg (11 lbs). When crossbars are to be used in off-road conditions, please build a safety factor of 1.5 into this load limit for off-road use, two crossbars = 42 kg (92 lbs). Although the crossbars are tested and approved to AS1235-2000, road conditions can be much more rigorous. However, increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:

It is your responsibility to ensure these instructions are given to the end user.

Rhino-Rack Australia Pty. Ltd. 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 8846 1900 www.rhinorack.com.au

Document No: R1229 Prepared By: Kayle Everett Authorised By: Chris Murty Fit Time: 30min Issue No: 03 Issue Date: 19/04/2018

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.





