






Kit 1005

FORD Mondeo, 4-dr Sedan, 93-00

FORD Mondeo, 5-dr Estate, 93-00*





FORD Mondeo, 5-dr Hatchback, 93-00

 
 
 
 
 
* Without roofrailing

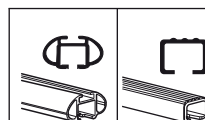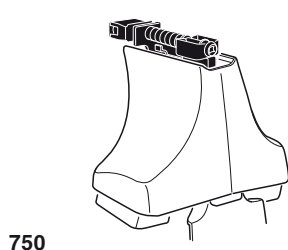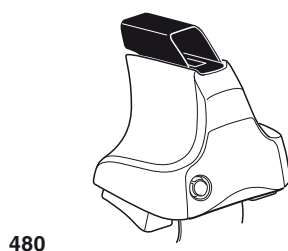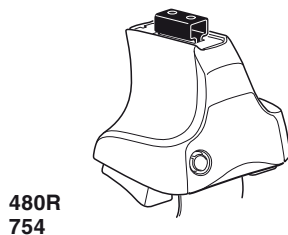



THULE[®]
SWEDEN

         ISO 11154-E

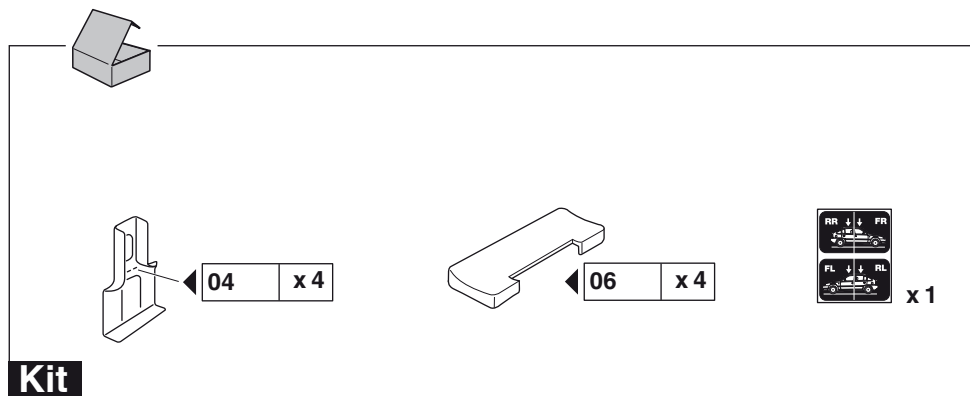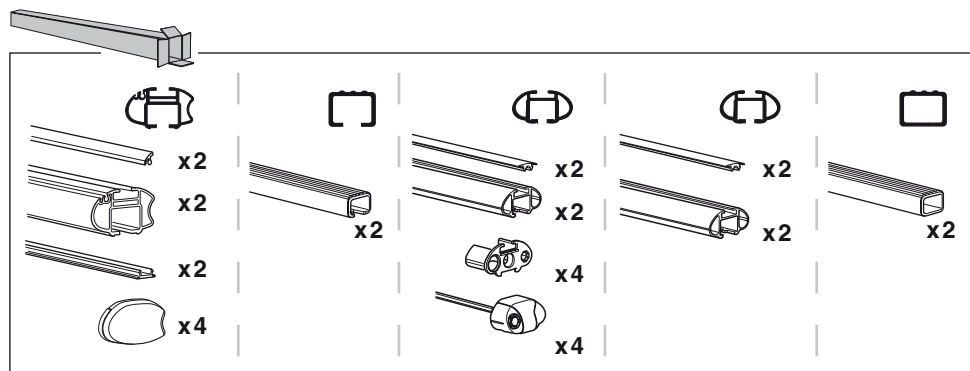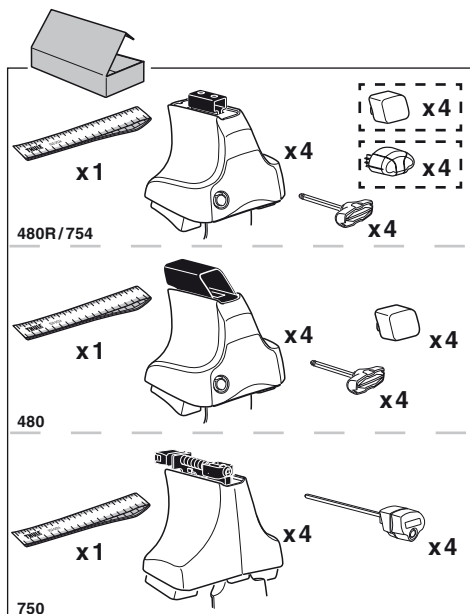
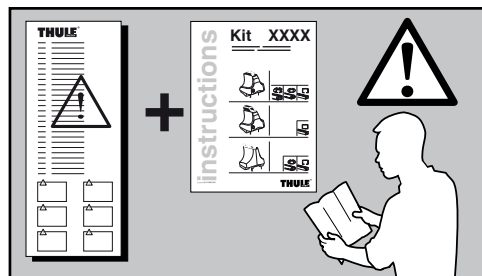


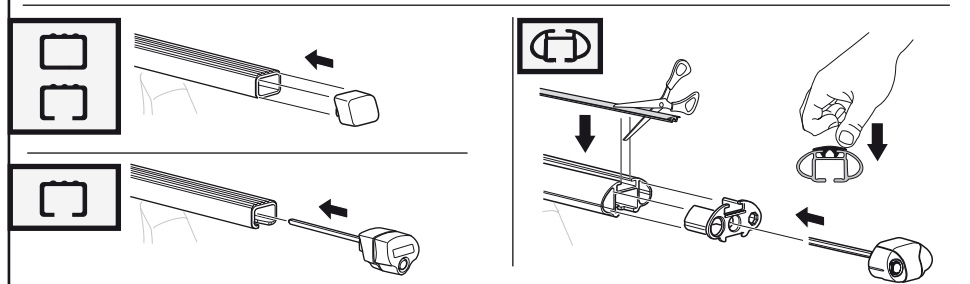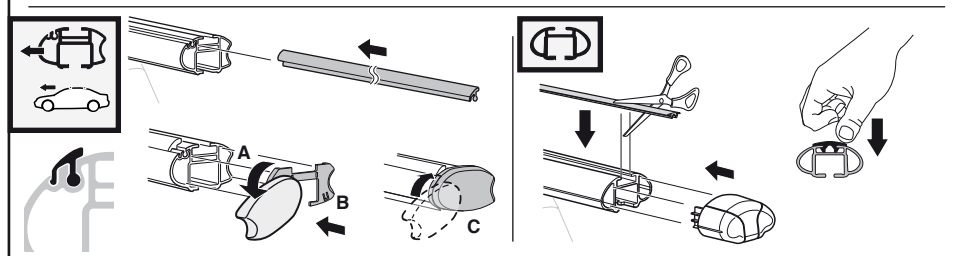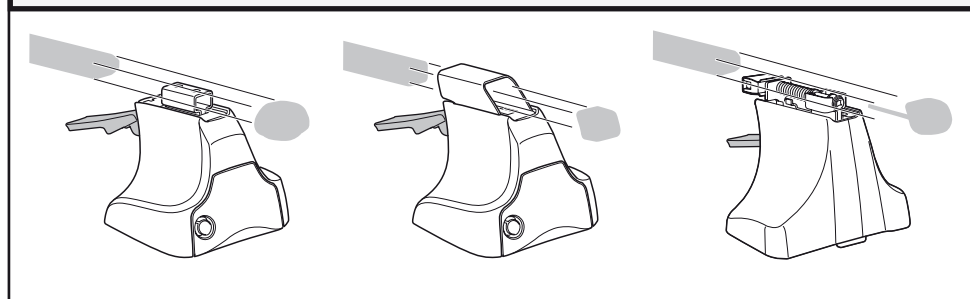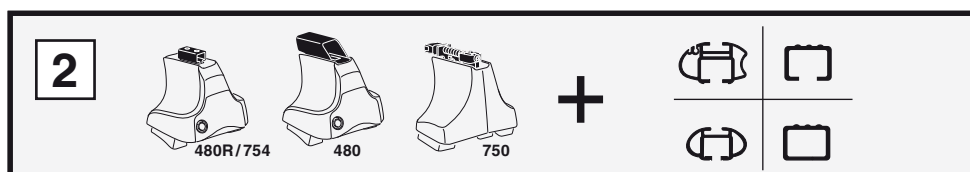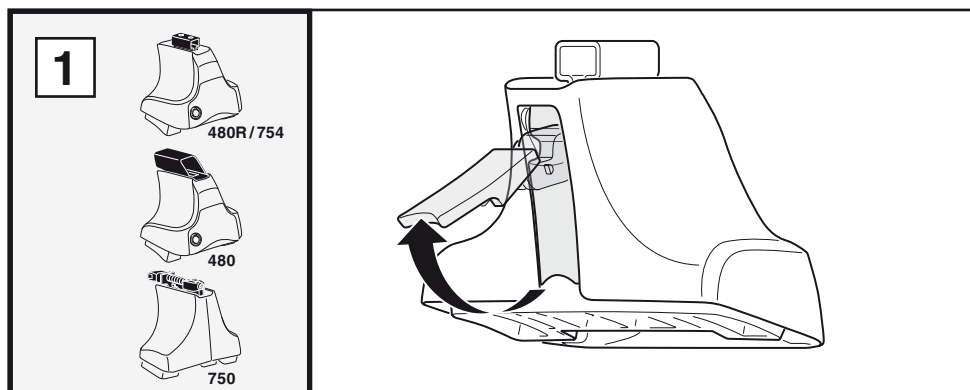

3

  

1

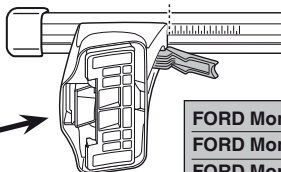  


2



	X
FORD Mondeo, 4-dr Sedan, 93-00	30
FORD Mondeo, 5-dr Estate, 93-00	30,5
FORD Mondeo, 5-dr Hatchback, 93-00	30

 1

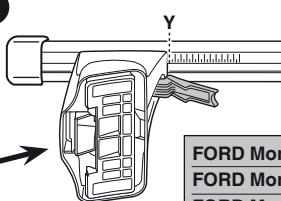

2



	Y
FORD Mondeo, 4-dr Sedan, 93-00	28,5
FORD Mondeo, 5-dr Estate, 93-00	28
FORD Mondeo, 5-dr Hatchback, 93-00	28,5

 


480R




480

1




2

 

	X inch	X mm
FORD Mondeo, 4-dr Sedan, 93-00	37 1/2"	951 mm
FORD Mondeo, 5-dr Estate, 93-00	37 5/8"	956 mm
FORD Mondeo, 5-dr Hatchback, 93-00	37 1/2"	951 mm

 1









2








	Y inch	Y mm
FORD Mondeo, 4-dr Sedan, 93-00	36 7/8"	936 mm
FORD Mondeo, 5-dr Estate, 93-00	36 5/8"	931 mm
FORD Mondeo, 5-dr Hatchback, 93-00	36 7/8"	936 mm

4

      FORD Mondeo, 4-dr Sedan, 93-00
 FORD Mondeo, 5-dr Estate, 93-00
 FORD Mondeo, 5-dr Hatchback, 93-00

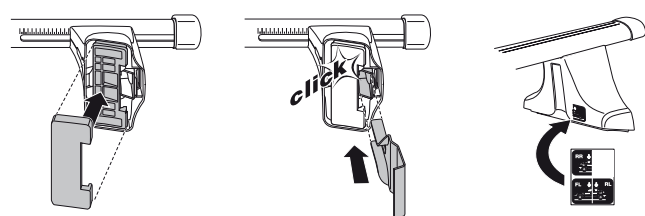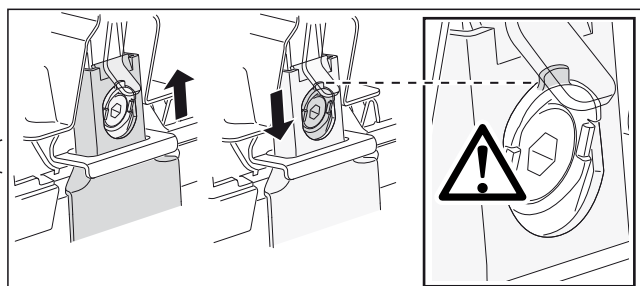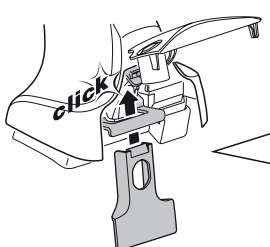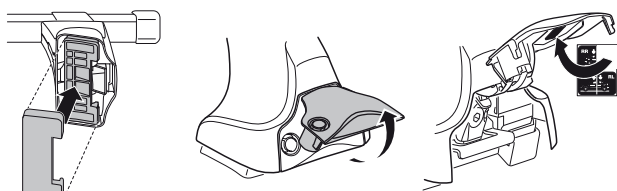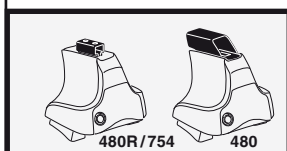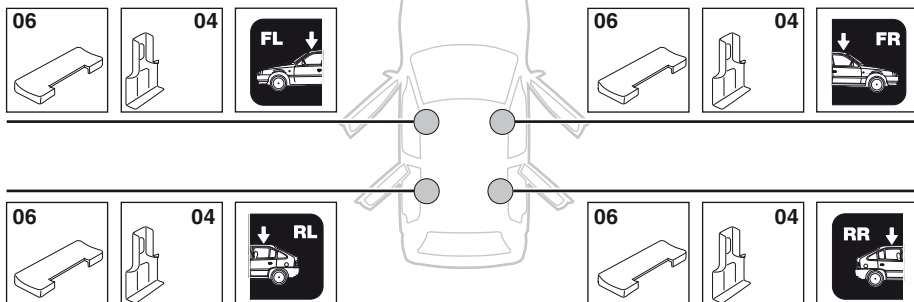

5

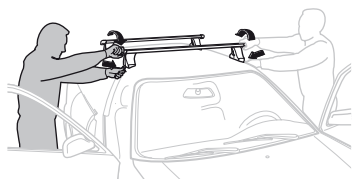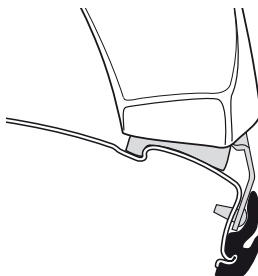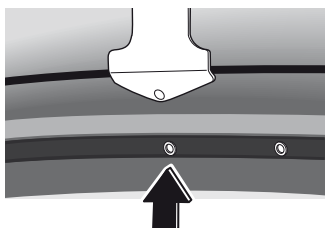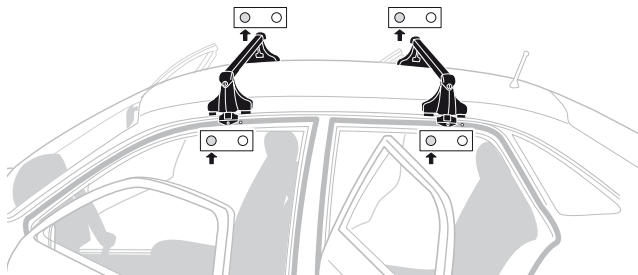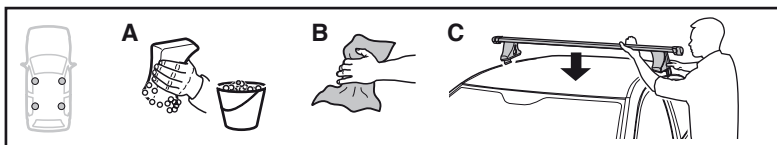     

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ

 
 
 
 
 
6





480R/754



480

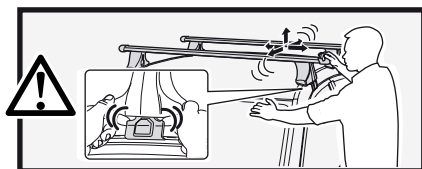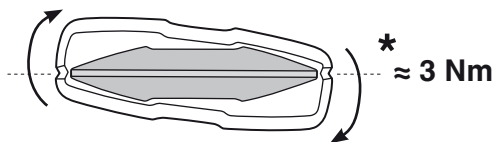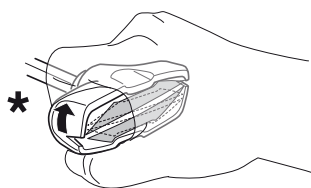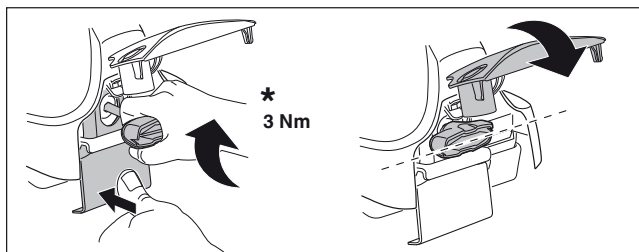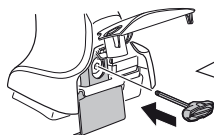


750

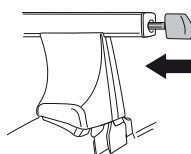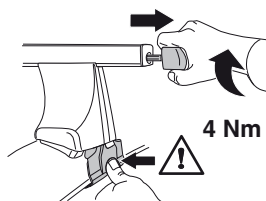  


i



 
1

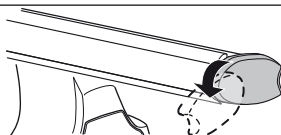


2

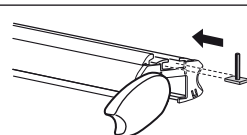 


i

 


1

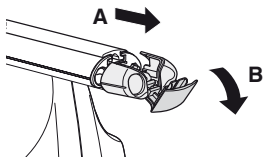 


2

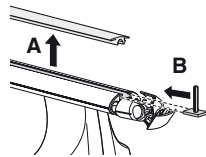 


i





 


1

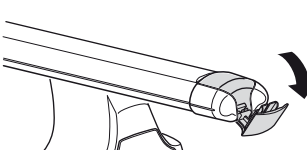 

2

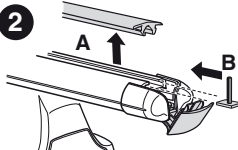 

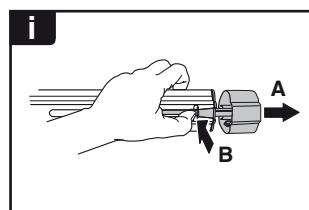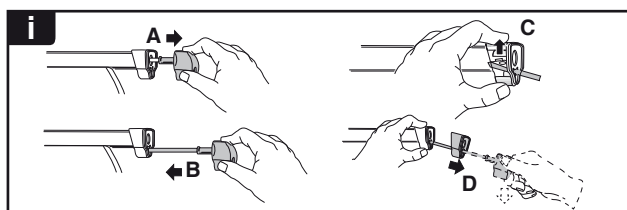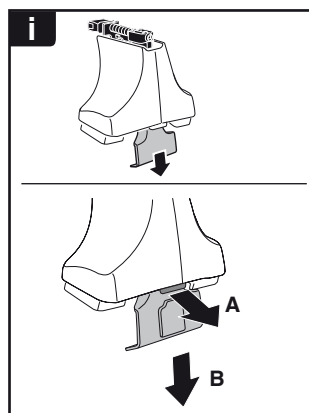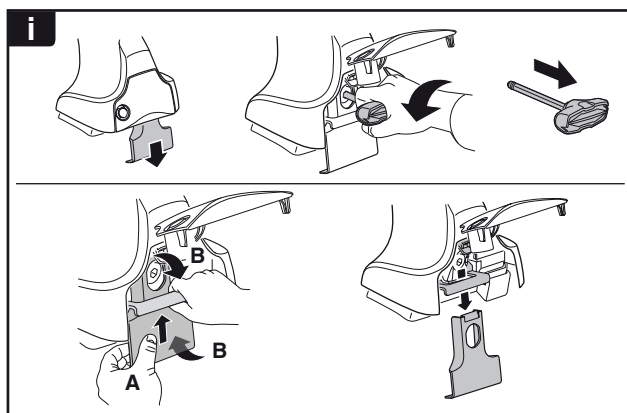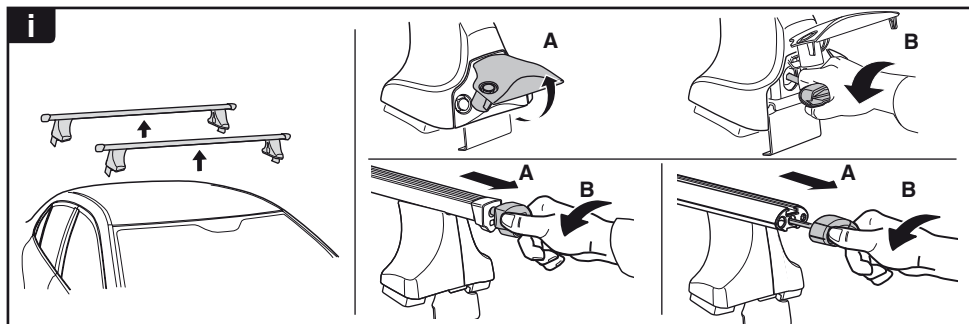     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA