



Kit 1034

MAZDA 323, 4-dr Sedan, 95-97


MAZDA Familia, 4-dr Sedan, 95-97

MAZDA Lantis, 4-dr Sedan, 95-97

 
 
**480R
754**

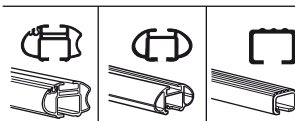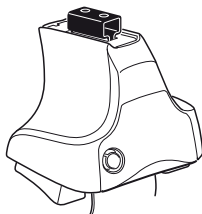

480




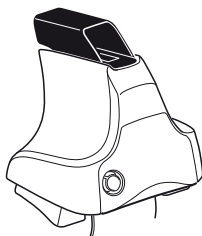 







750

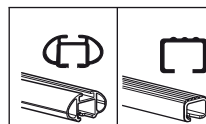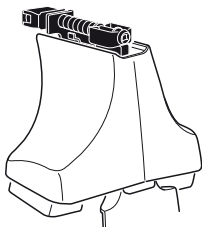  


THULE[®]
SWEDEN

         ISO 11154-E

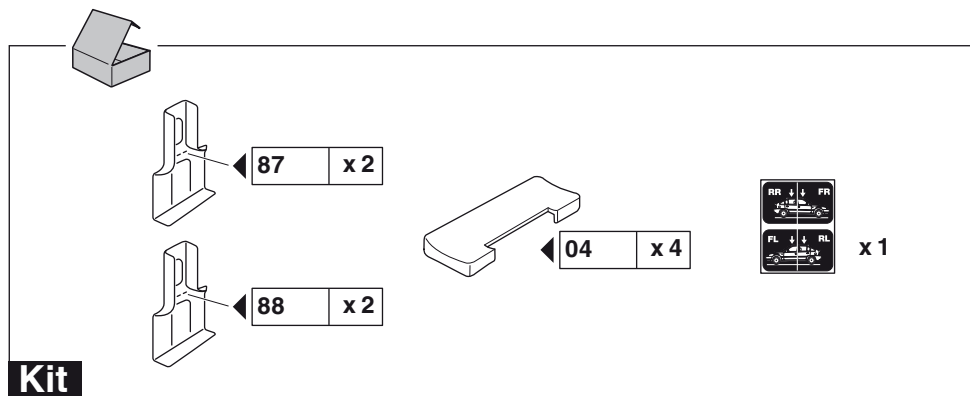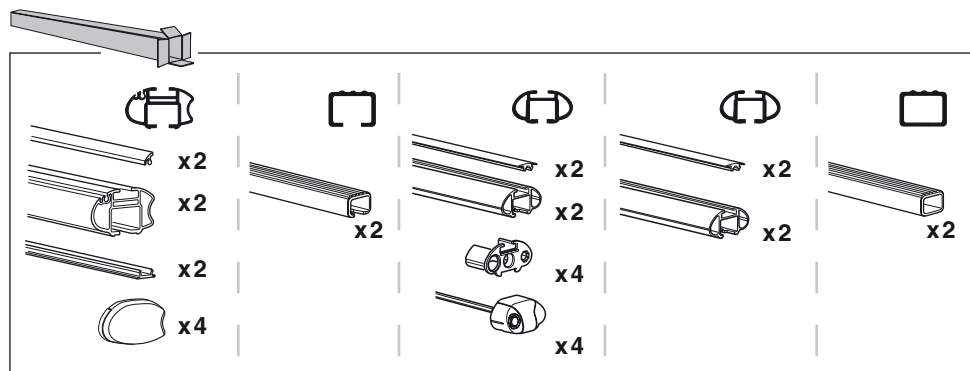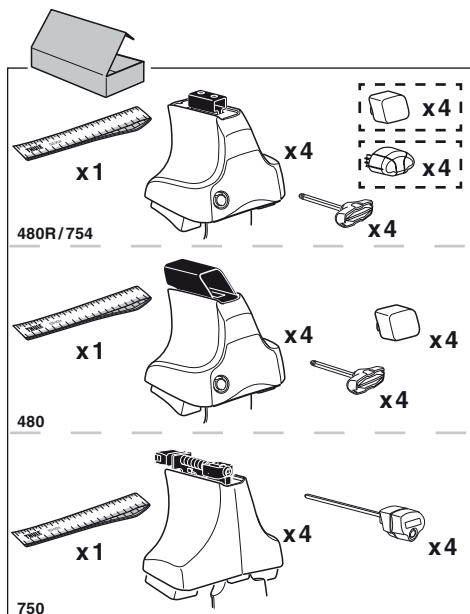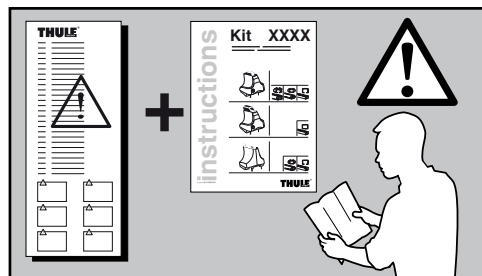


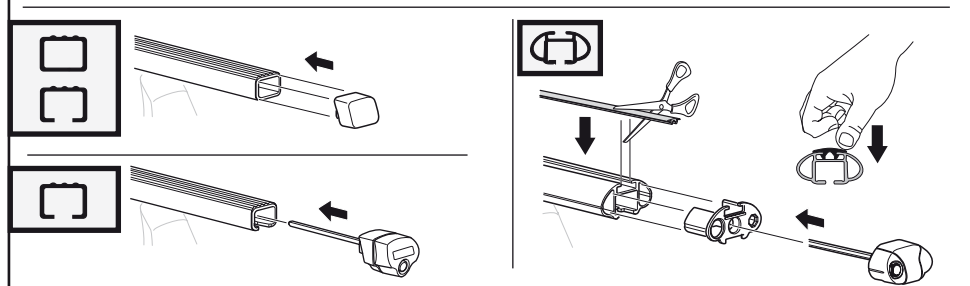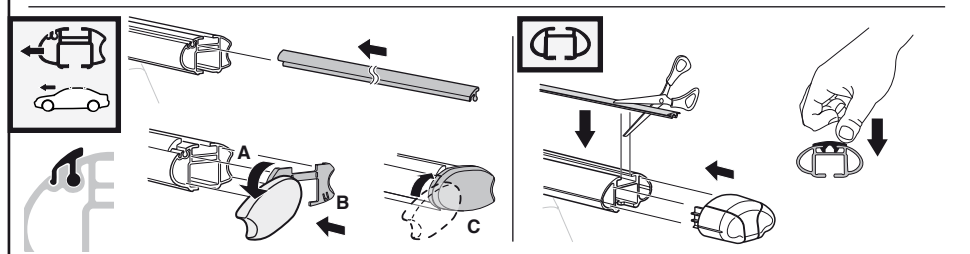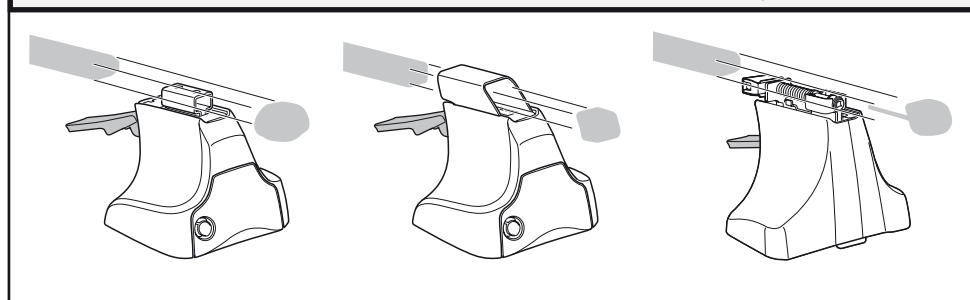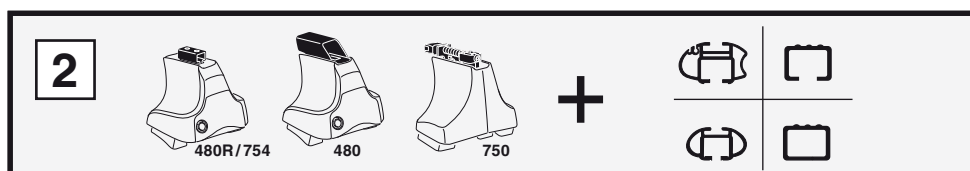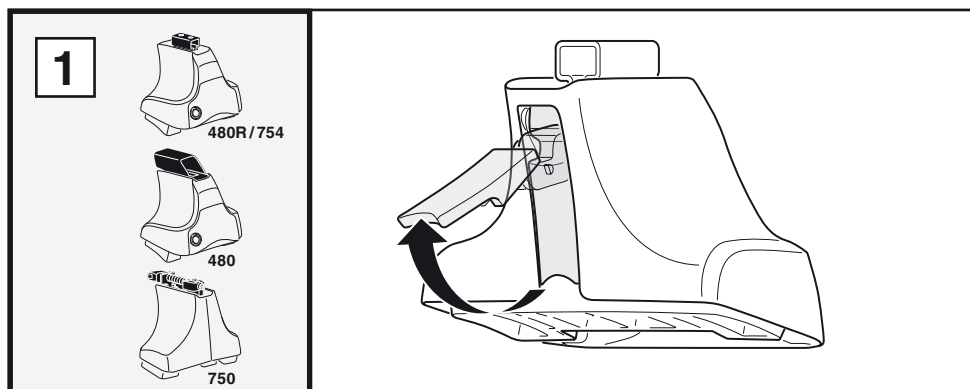

3

 


754

 

750



 1

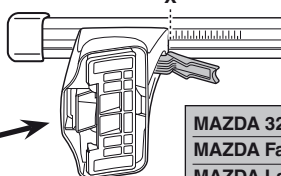


2




	X	
MAZDA 323, 4-dr Sedan, 95-97	31,5	
MAZDA Familia, 4-dr Sedan, 95-97	31,5	
MAZDA Lantis, 4-dr Sedan, 95-97	31,5	

 1

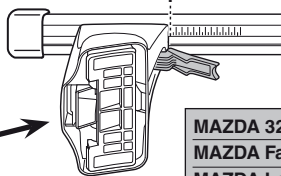

2

 

	Y	
MAZDA 323, 4-dr Sedan, 95-97	28	
MAZDA Familia, 4-dr Sedan, 95-97	28	
MAZDA Lantis, 4-dr Sedan, 95-97	28	

 


480R



480

1




2




	X inch	X mm
MAZDA 323, 4-dr Sedan, 95-97	38"	966 mm
MAZDA Familia, 4-dr Sedan, 95-97	38"	966 mm
MAZDA Lantis, 4-dr Sedan, 95-97	38"	966 mm

 1



2

 














	Y inch	Y mm
MAZDA 323, 4-dr Sedan, 95-97	36 ⁵ / ₈ "	931 mm
MAZDA Familia, 4-dr Sedan, 95-97	36 ⁵ / ₈ "	931 mm
MAZDA Lantis, 4-dr Sedan, 95-97	36 ⁵ / ₈ "	931 mm

4


MAZDA 323, 4-dr Sedan, 95-97

MAZDA Familia, 4-dr Sedan, 95-97

           
 
 
MAZDA Lantis, 4-dr Sedan, 95-97

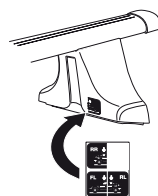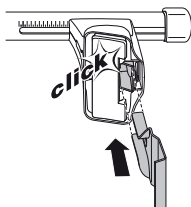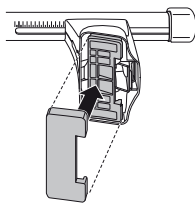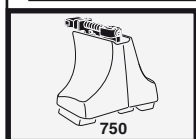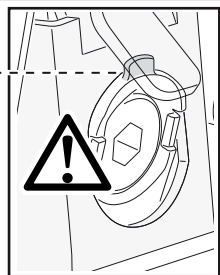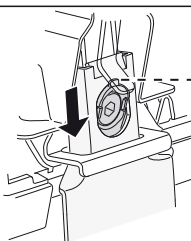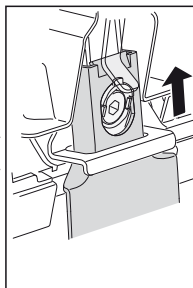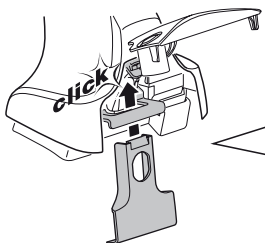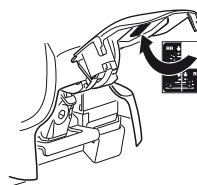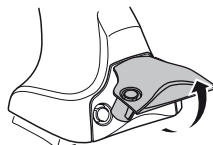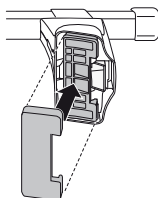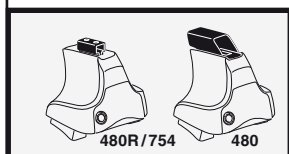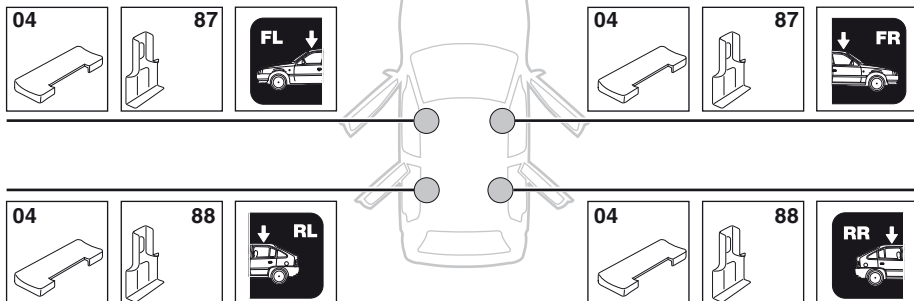

5

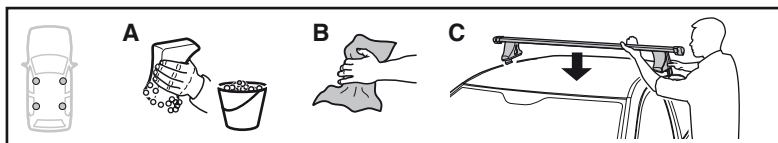 

	X mm	Y mm	X inch	Y inch
MAZDA 323, 4-dr Sedan, 95-97	210 mm	650 mm	8 1/4"	25 5/8"
MAZDA Familia, 4-dr Sedan, 95-97	210 mm	650 mm	8 1/4"	25 5/8"
MAZDA Lantis, 4-dr Sedan, 95-97	210 mm	650 mm	8 1/4"	25 5/8"

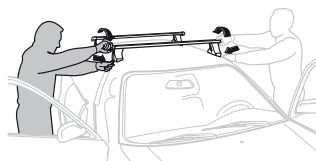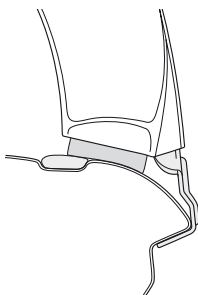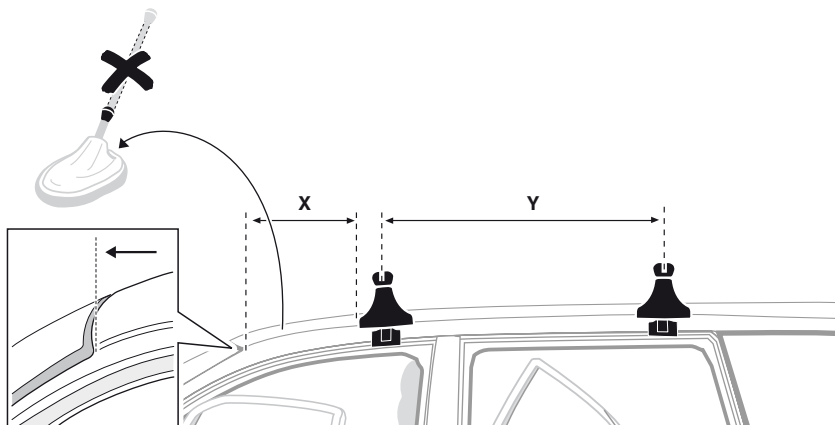   


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egy mástól függetlenül szorítandó
GR Σφιγγείτε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ





 
6





480R/754



     480

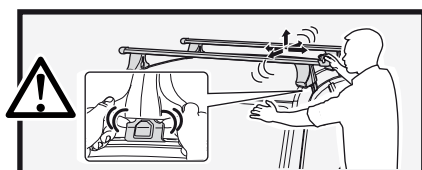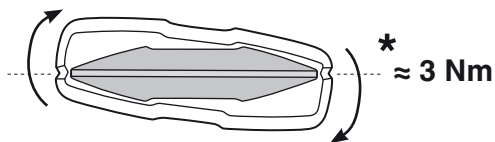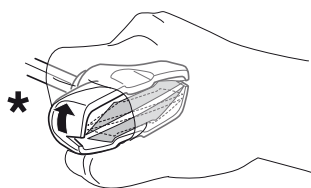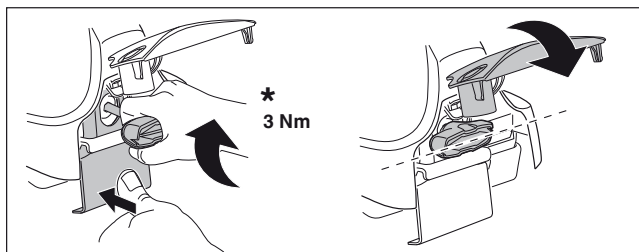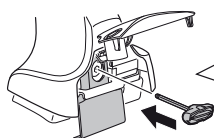

750

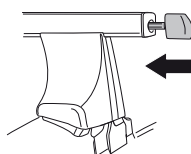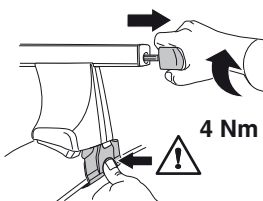  


i




1



 
2

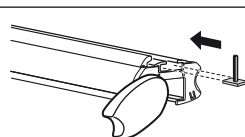


i

 


1

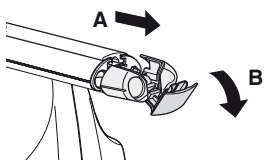 


2

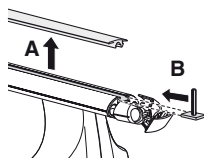 


i





 


1

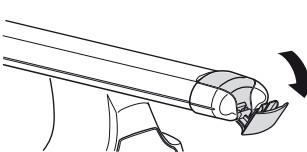 

2

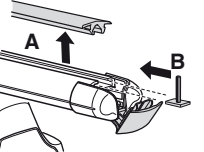 

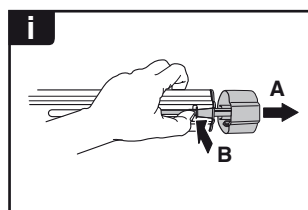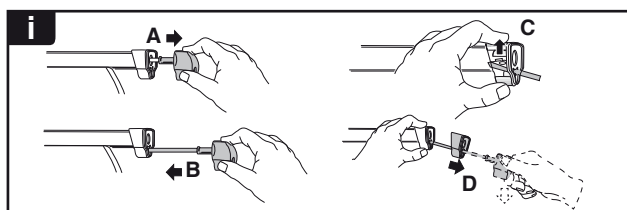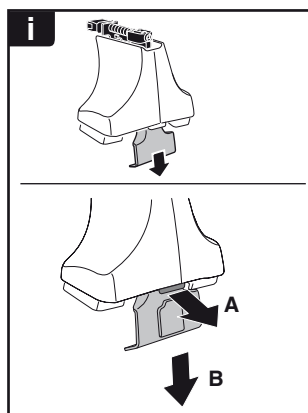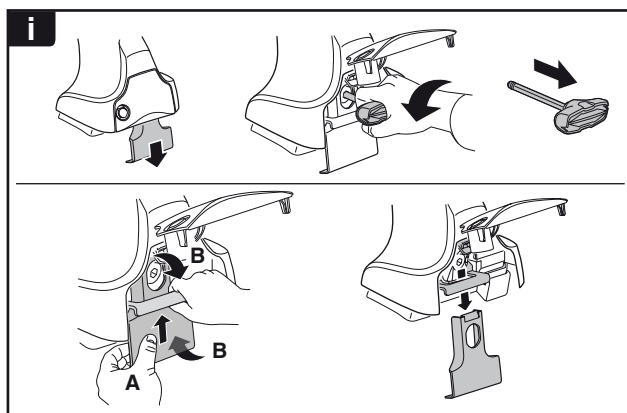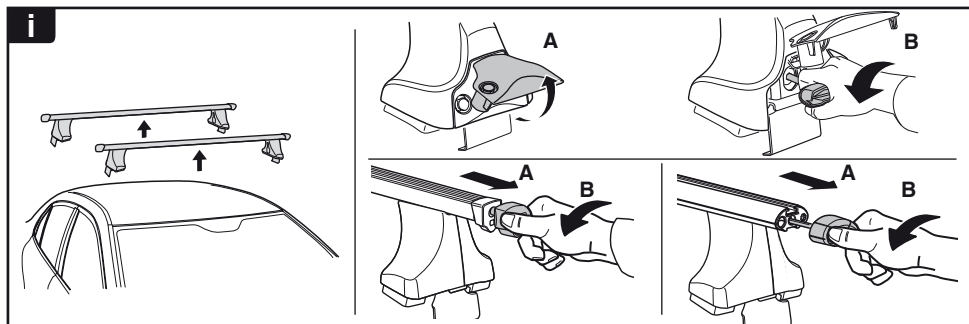     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA