

Kit 1047

HYUNDAI Accent, 3-dr Hatchback, 95-99

 
 
 
HYUNDAI Accent, 4-dr Sedan, 94-99

HYUNDAI Accent, 5-dr Hatchback, 95-99

HYUNDAI Pony, 3-dr Hatchback, 95-99

HYUNDAI Pony, 4-dr Sedan, 94-99

HYUNDAI Pony, 5-dr Hatchback, 95-99

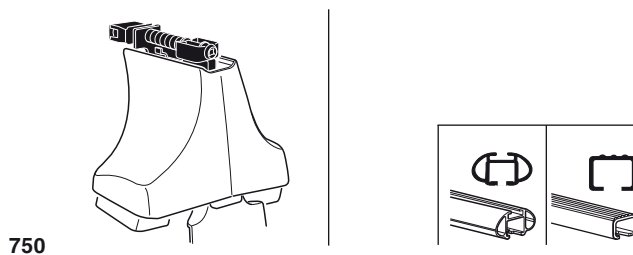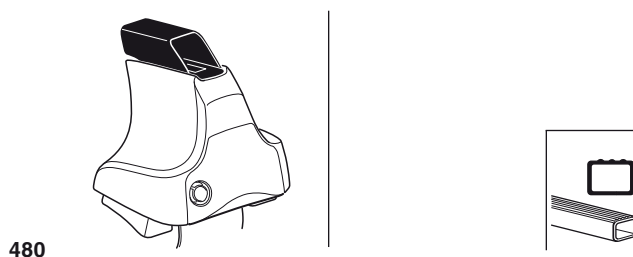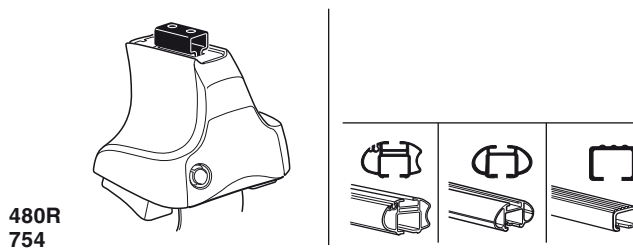

THULE[®]
SWEDEN

ISO 11154-E

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs = **Max. 75kg/165 lbs**

80 km/h 50 Mph
130 km/h 80 Mph
km/h Mph

THULE
40 km/h 25 Mph
80 km/h 50 Mph

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs = **Max. 75kg/165 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

 
 
 
 
 
xx kg / xx lbs + 7 kg / 15,4 lbs = **Max. 75kg/165 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**


xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs = **Max. 75kg/165 lbs**

xx kg / xx lbs + 7 kg / 15,4 lbs + 3 kg / 6,6 lbs = **Max. 50kg/110 lbs**

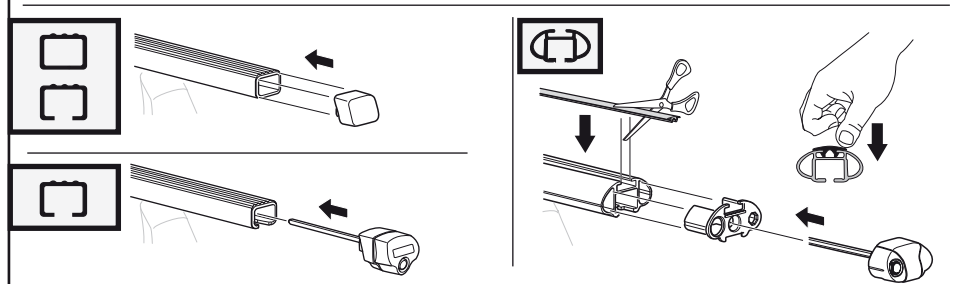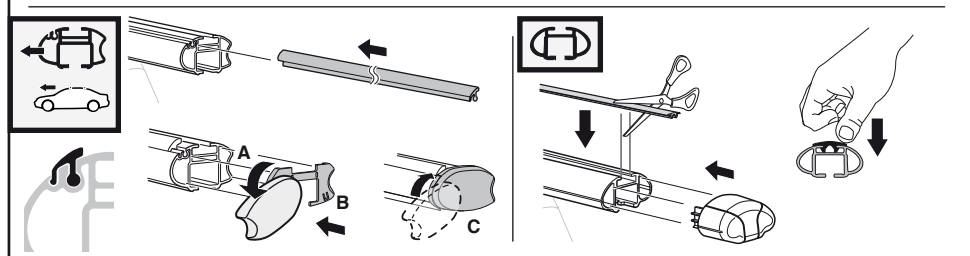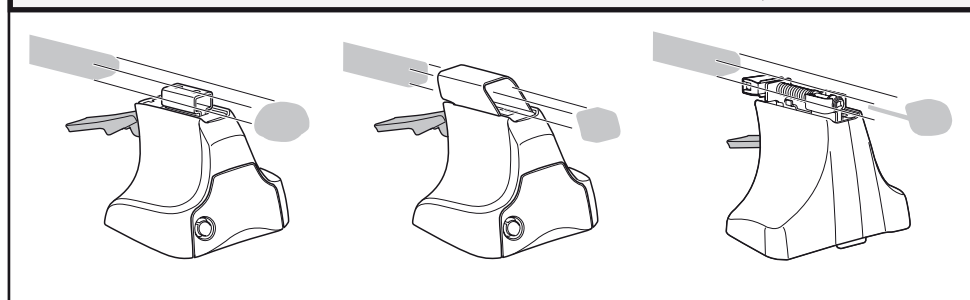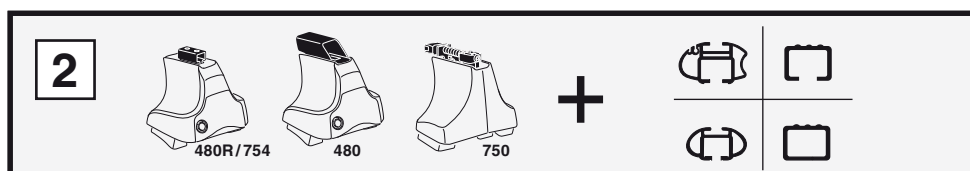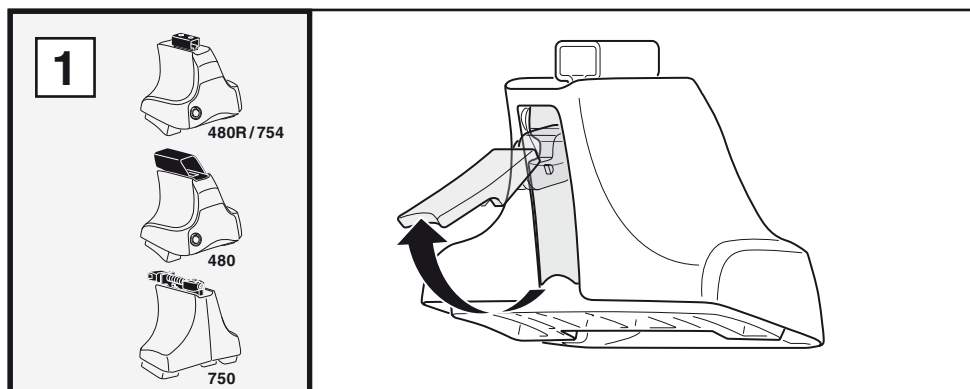

3

 



754



750



  1

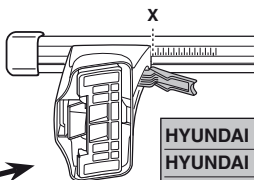


2



X

HYUNDAI Accent, 3-dr Hatchback, 95-99	22
HYUNDAI Accent, 4-dr Sedan, 94-99	22
HYUNDAI Accent, 5-dr Hatchback, 95-99	22
HYUNDAI Pony, 3-dr Hatchback, 95-99	22
HYUNDAI Pony, 4-dr Sedan, 94-99	22
HYUNDAI Pony, 5-dr Hatchback, 95-99	22

 1

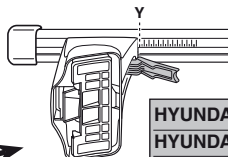


2



Y

HYUNDAI Accent, 3-dr Hatchback, 95-99	20
HYUNDAI Accent, 4-dr Sedan, 94-99	20
HYUNDAI Accent, 5-dr Hatchback, 95-99	20
HYUNDAI Pony, 3-dr Hatchback, 95-99	20
HYUNDAI Pony, 4-dr Sedan, 94-99	20
HYUNDAI Pony, 5-dr Hatchback, 95-99	20

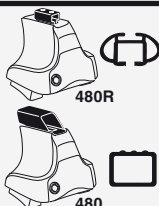 


480R



480

 1



2




X inch


X mm

HYUNDAI Accent, 3-dr Hatchback, 95-99	34 1/4"	871 mm
HYUNDAI Accent, 4-dr Sedan, 94-99	34 1/4"	871 mm
HYUNDAI Accent, 5-dr Hatchback, 95-99	34 1/4"	871 mm
HYUNDAI Pony, 3-dr Hatchback, 95-99	34 1/4"	871 mm
HYUNDAI Pony, 4-dr Sedan, 94-99	34 1/4"	871 mm
HYUNDAI Pony, 5-dr Hatchback, 95-99	34 1/4"	871 mm

 1



2

 

Y inch

Y mm



HYUNDAI Accent, 3-dr Hatchback, 95-99	33 1/2"	851 mm
HYUNDAI Accent, 4-dr Sedan, 94-99	33 1/2"	851 mm
HYUNDAI Accent, 5-dr Hatchback, 95-99	33 1/2"	851 mm
HYUNDAI Pony, 3-dr Hatchback, 95-99	33 1/2"	851 mm
HYUNDAI Pony, 4-dr Sedan, 94-99	33 1/2"	851 mm
HYUNDAI Pony, 5-dr Hatchback, 95-99	33 1/2"	851 mm

4

HYUNDAI Accent, 3-dr Hatchback, 95-99

HYUNDAI Pony, 3-dr Hatchback, 95-99

  SRA









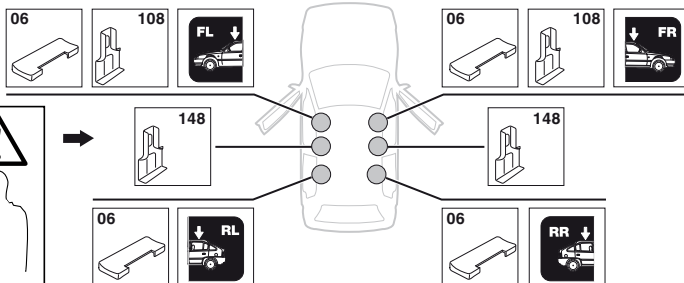
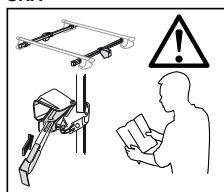


HYUNDAI Accent, 4-dr Sedan, 94-99


HYUNDAI Accent, 5-dr Hatchback, 95-99

HYUNDAI Pony, 4-dr Sedan, 94-99

         
 
HYUNDAI Pony, 5-dr Hatchback, 95-99

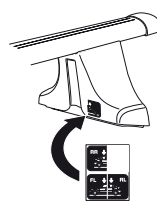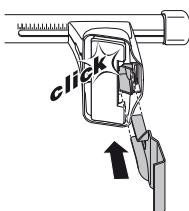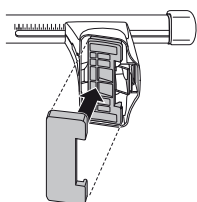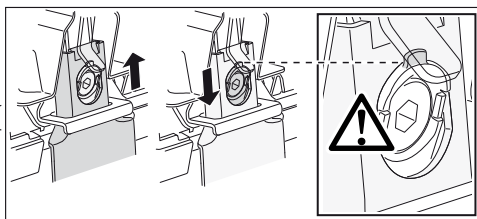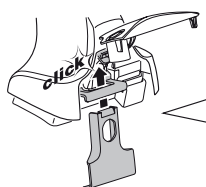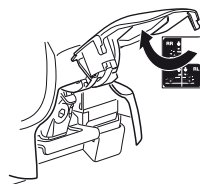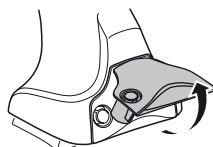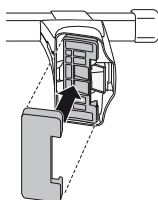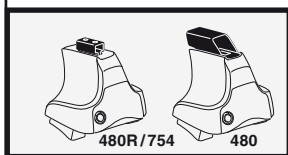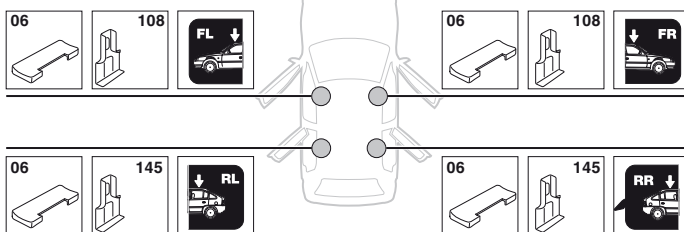

5



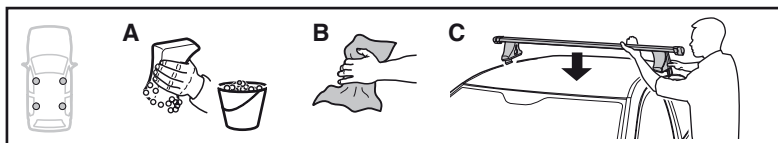 


	X mm	Y mm	X inch	Y inch
HYUNDAI Accent, 3-dr Hatchback, 95-99	160 mm	700 mm	6 1/4"	27 1/2"
HYUNDAI Accent, 4-dr Sedan, 94-99	160 mm	620 mm	6 1/4"	24 3/8"
HYUNDAI Accent, 5-dr Hatchback, 95-99	160 mm	620 mm	6 1/4"	24 3/8"
HYUNDAI Pony, 3-dr Hatchback, 95-99	160 mm	700 mm	6 1/4"	27 1/2"
HYUNDAI Pony, 4-dr Sedan, 94-99	160 mm	620 mm	6 1/4"	24 3/8"
HYUNDAI Pony, 5-dr Hatchback, 95-99	160 mm	620 mm	6 1/4"	24 3/8"

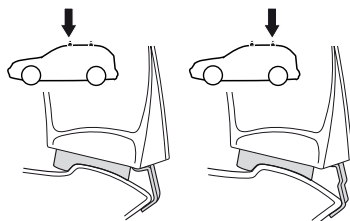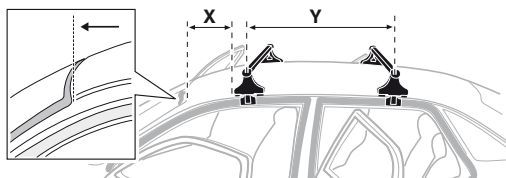  

HYUNDAI Accent, 3-dr Hatchback, 95-99

   
HYUNDAI Pony, 3-dr Hatchback, 95-99

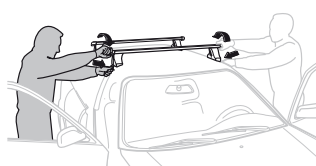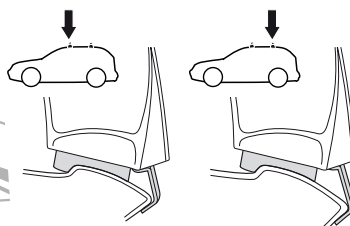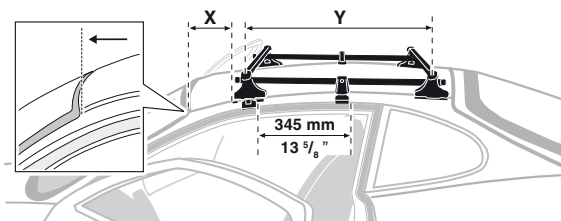

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvís
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ





 
6





480R/754



     480

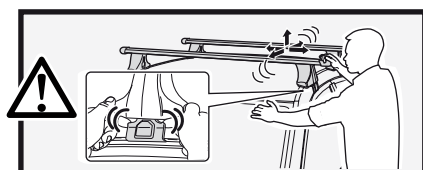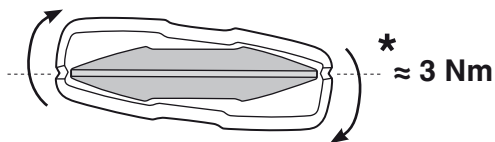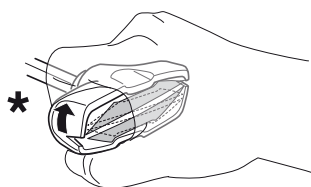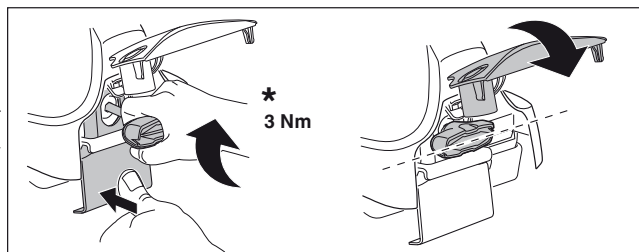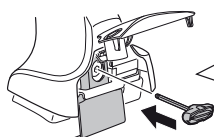

750

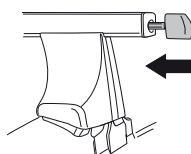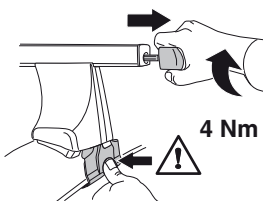  


i




1



 
2

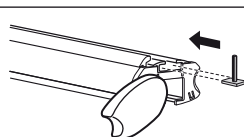


i

 


1

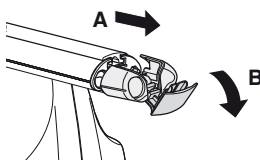 


2

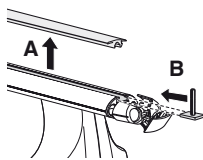 


i





 


1

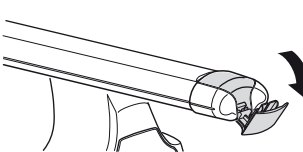 

2

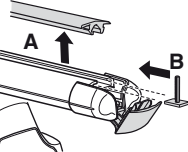 

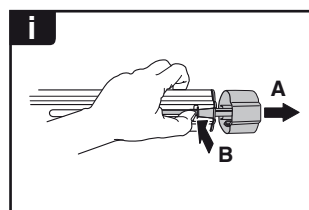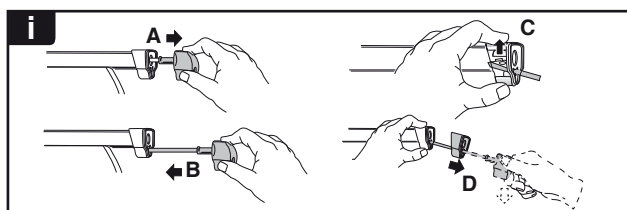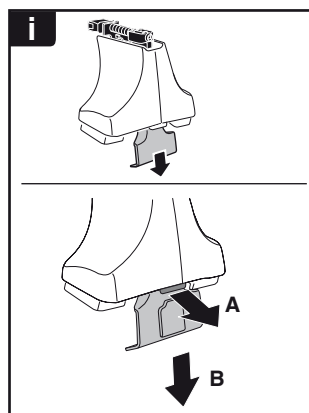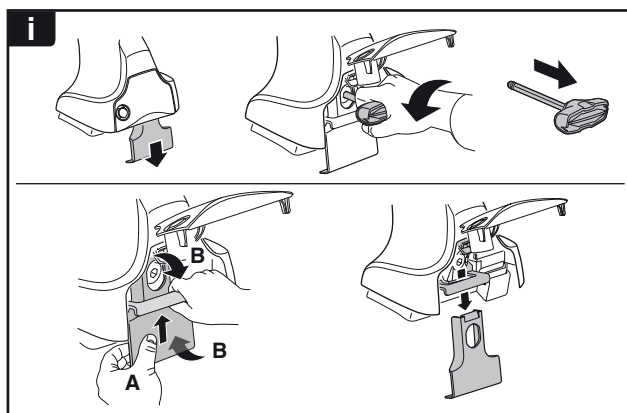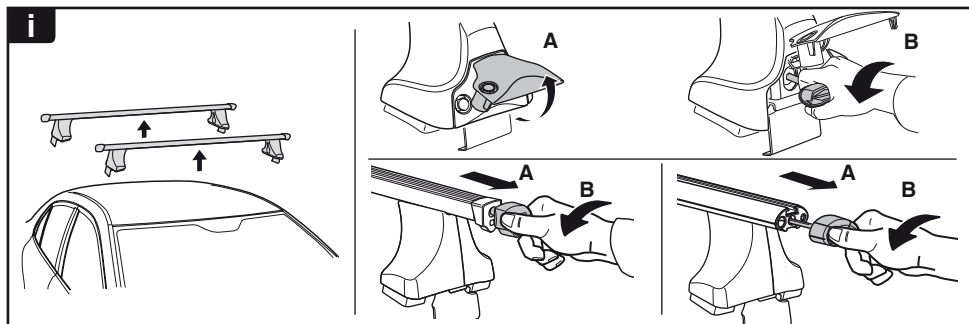     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		544 (x4)
		596 (x6)
		588 (x8)
NA		510 (x10)
EUR		452 (x12)
ASIA		