 
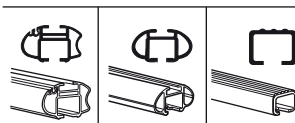 


Kit 1056

 
 
CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06



480R
754

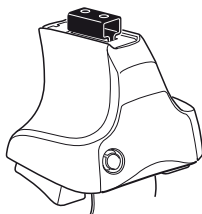

480

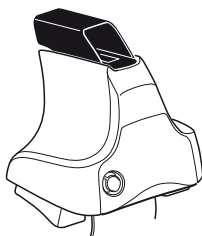

750




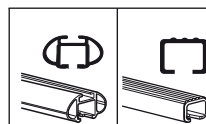 
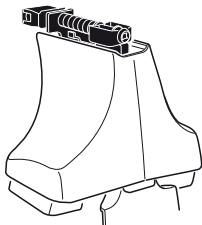 







THULE[®]
SWEDEN

ISO 11154-E


 **xx kg
xx lbs** +  **7 kg / 15,4 lbs** = **Max.
55kg/121 lbs**

           xx kg
xx lbs +  7 kg / 15,4 lbs = **Max.**
60kg/132 lbs

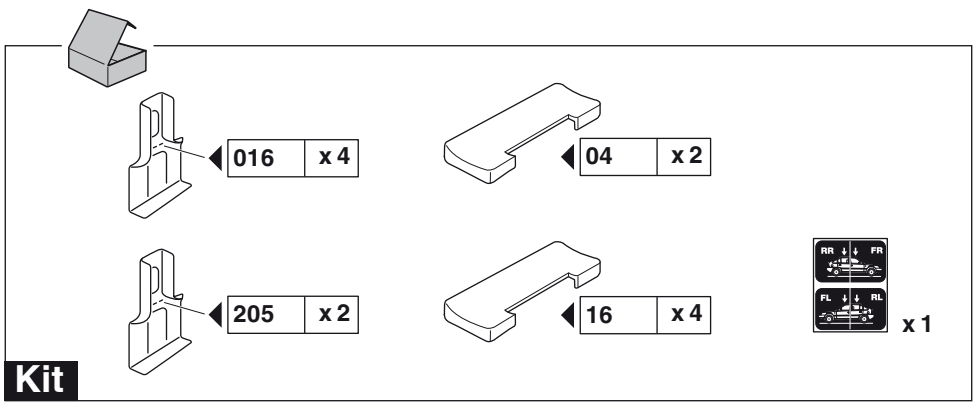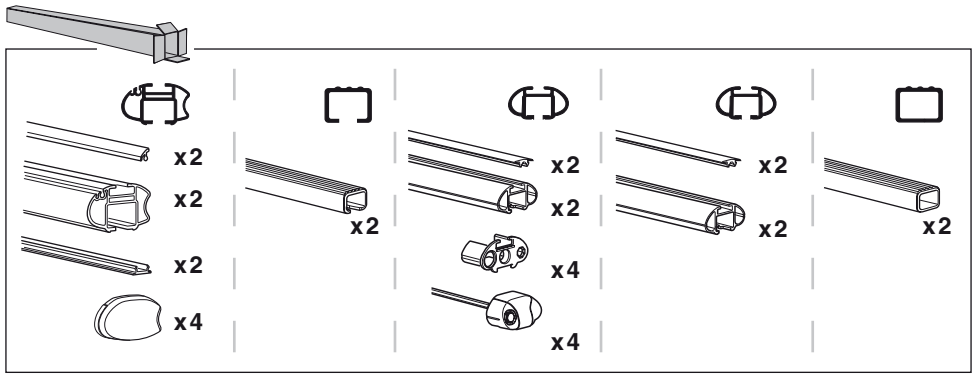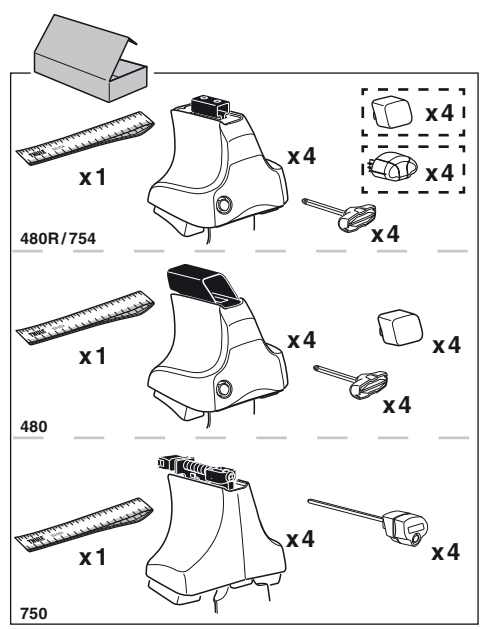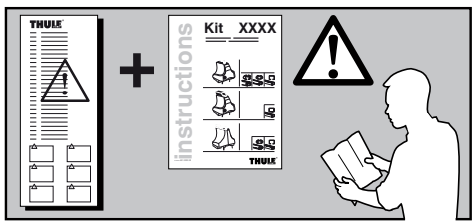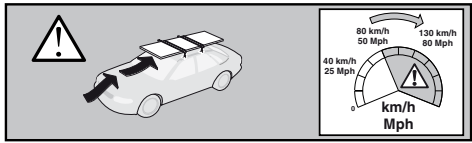


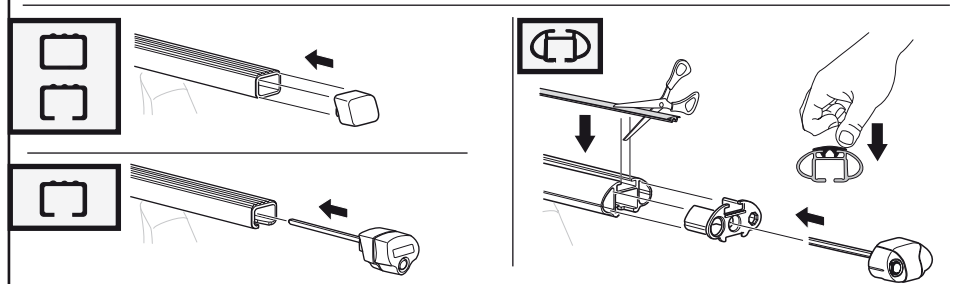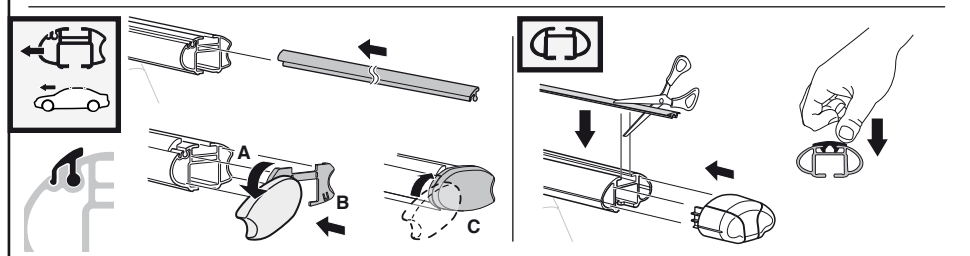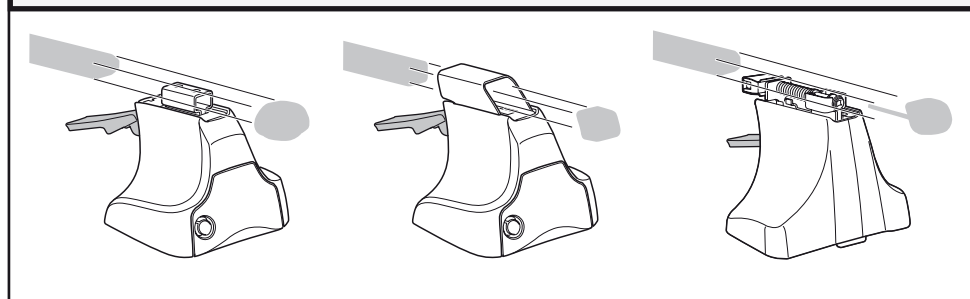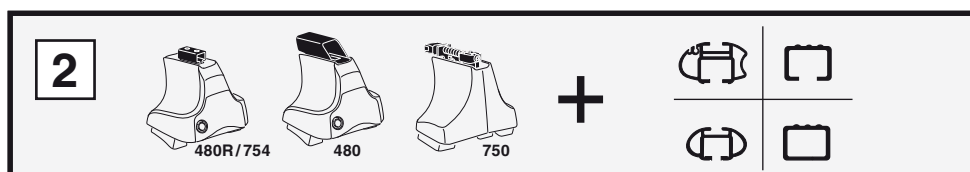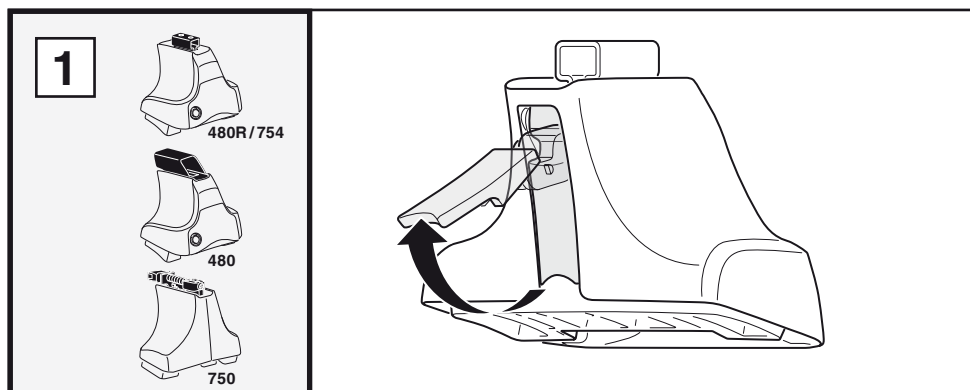

3

 


754

 


750



 1

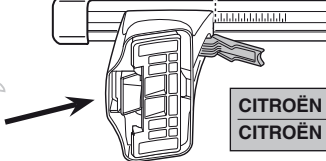

2

 

X

 
CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

21

CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

21

1

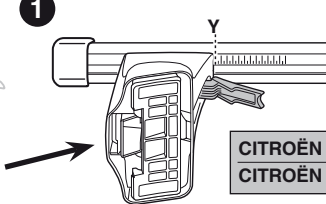

2



Y

CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

21

CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

18,5

 


480R



480

1



2



X inch/mm

X inch X mm

CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

33 7/8"

 
861 mm

CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

33 7/8"

861 mm

1



2



Y inch/mm

Y inch Y mm

CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

33 7/8"

861 mm

 
CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

32 7/8"







836 mm

4


CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

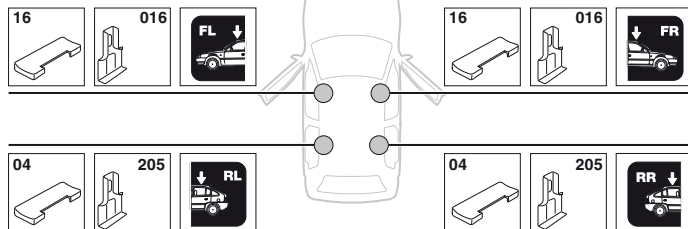

      CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

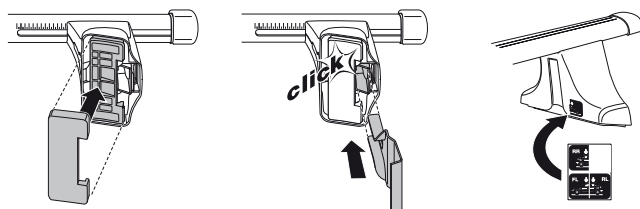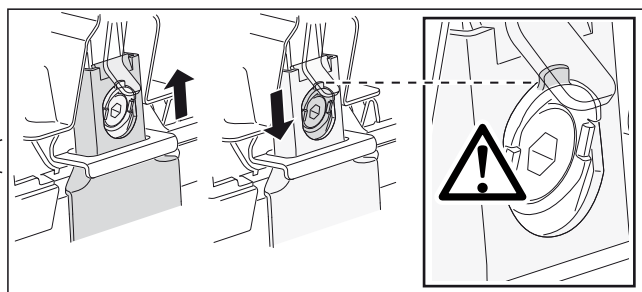
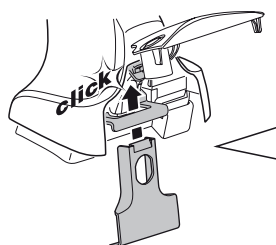
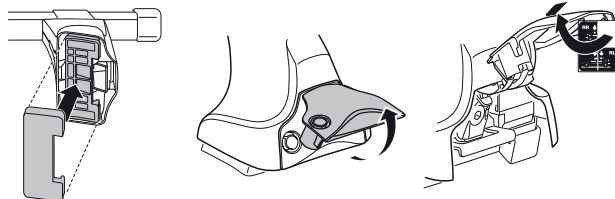
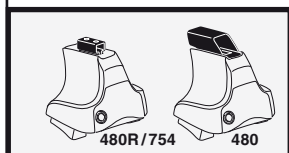
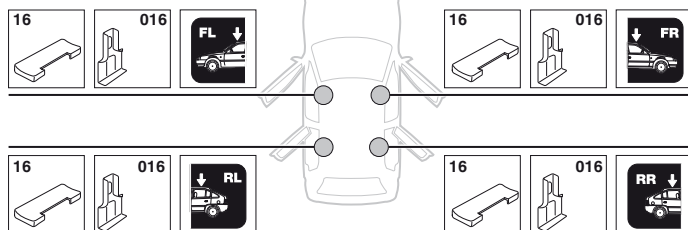


5





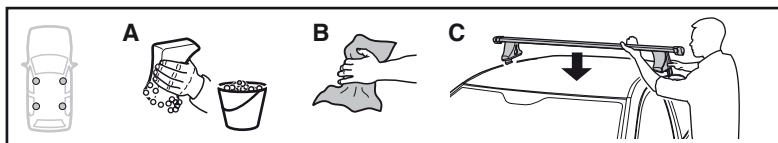 


	X mm	Y mm	X inch	Y inch
CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06	140 mm	660 mm	5 1/2"	26"
CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06	140 mm	660 mm	5 1/2"	26"

     CITROËN Xsara, 3-dr Hatchback, 98-00, 01-06

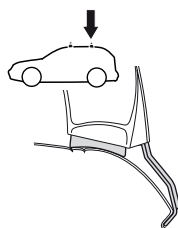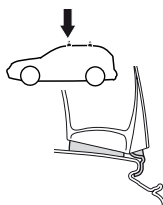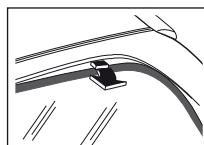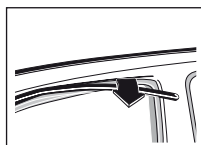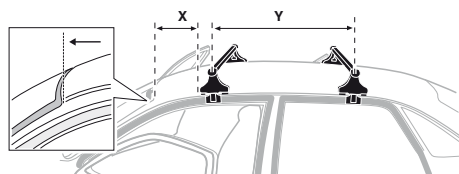

     CITROËN Xsara, 5-dr Hatchback, 98-00, 01-06

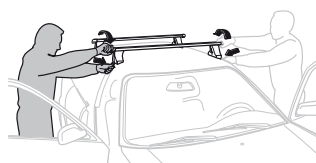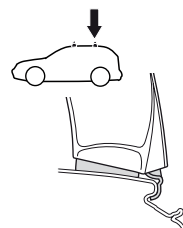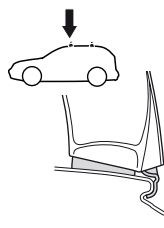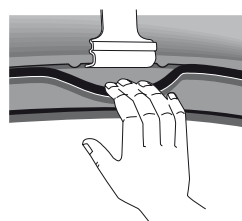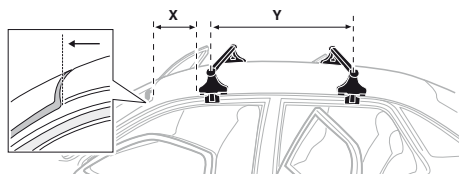

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pielvelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól fűggetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นโนแบบสลับ

 
 
 
 
 
6





480R/754



480

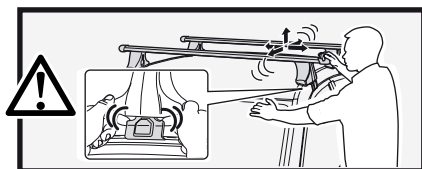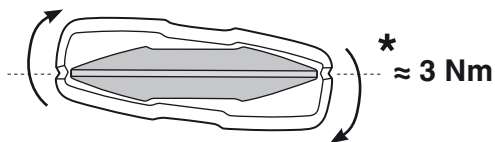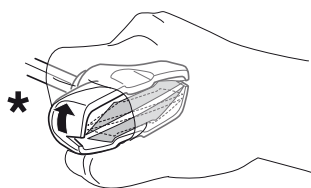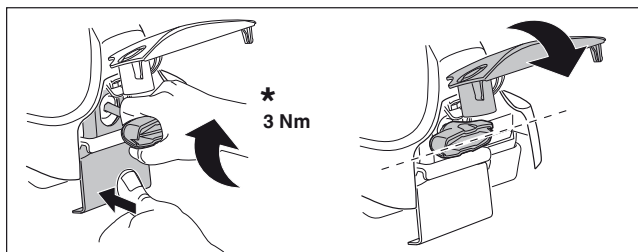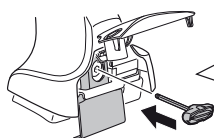


750

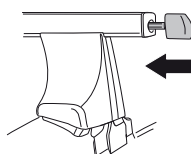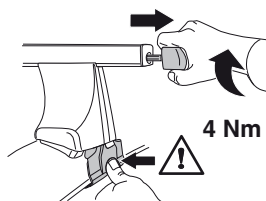  


i



 
1

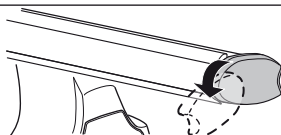


2

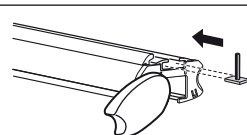 


i

 


1

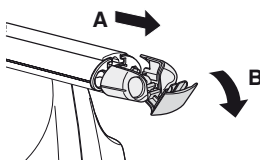 


2

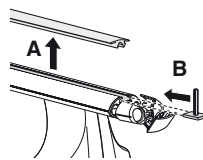 


i





 


1

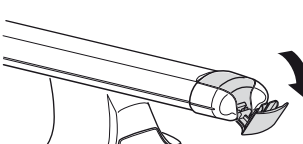 

2

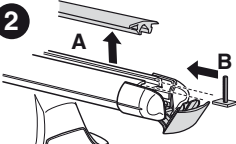 

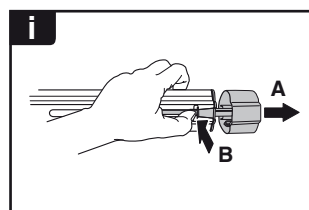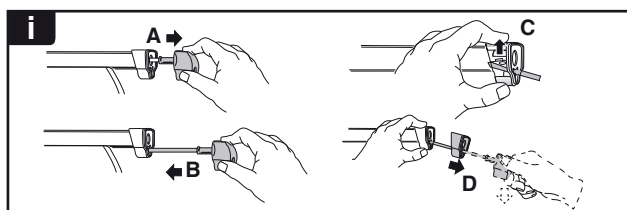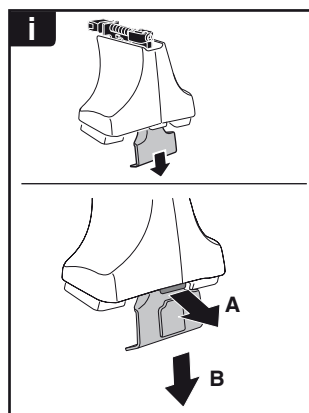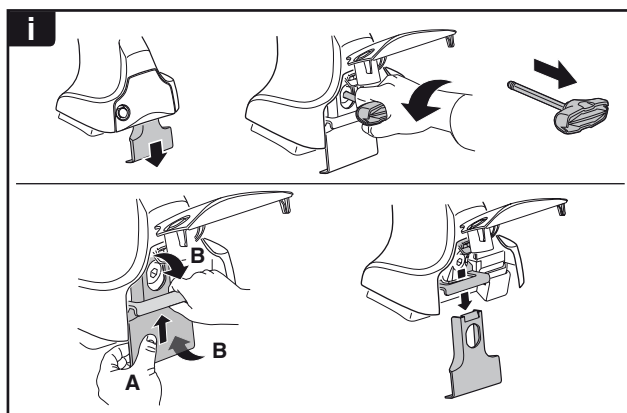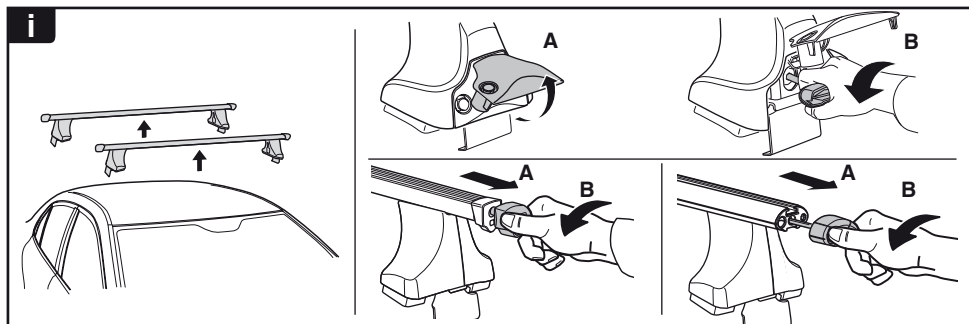     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		