 
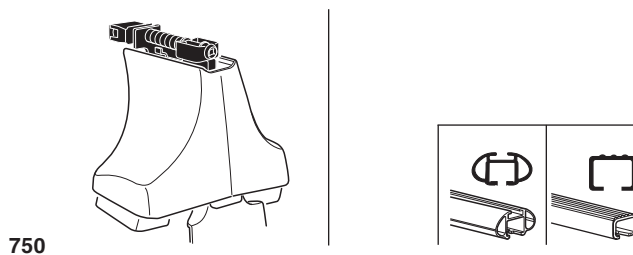 
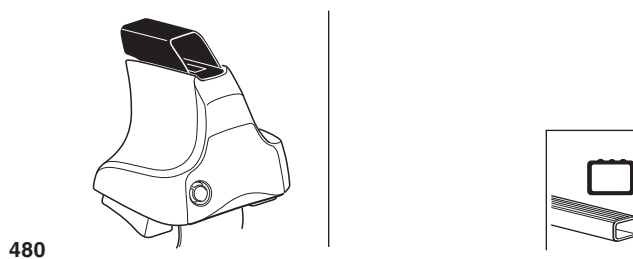 







Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04


TOYOTA Hilux, 2-dr Pickup extended, 98-04

     TOYOTA Hilux, 4-dr Pickup double cab, 98-04

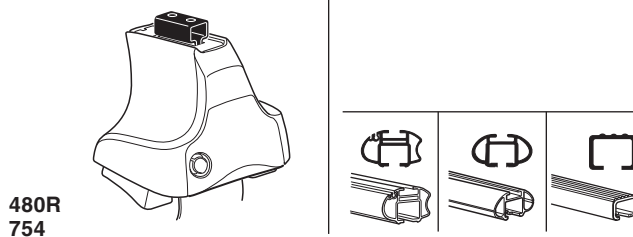


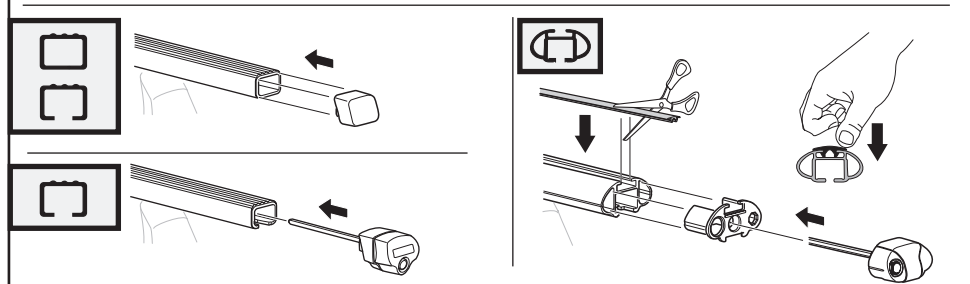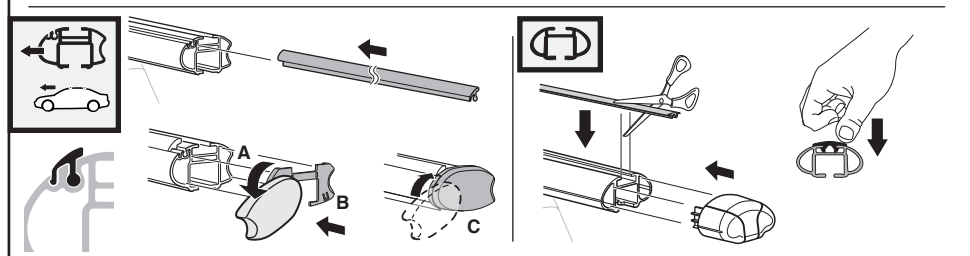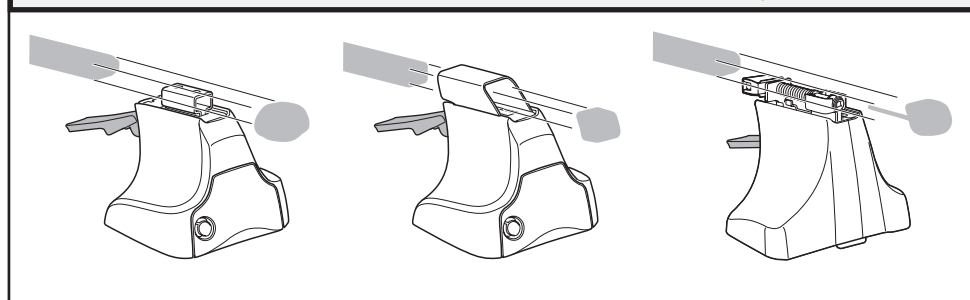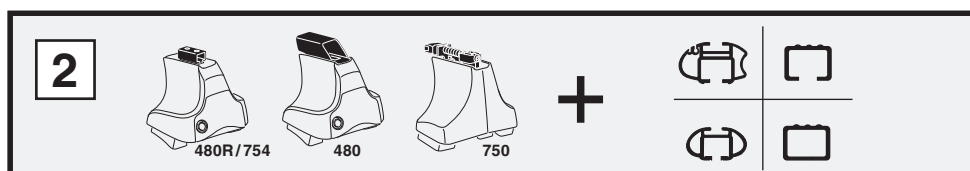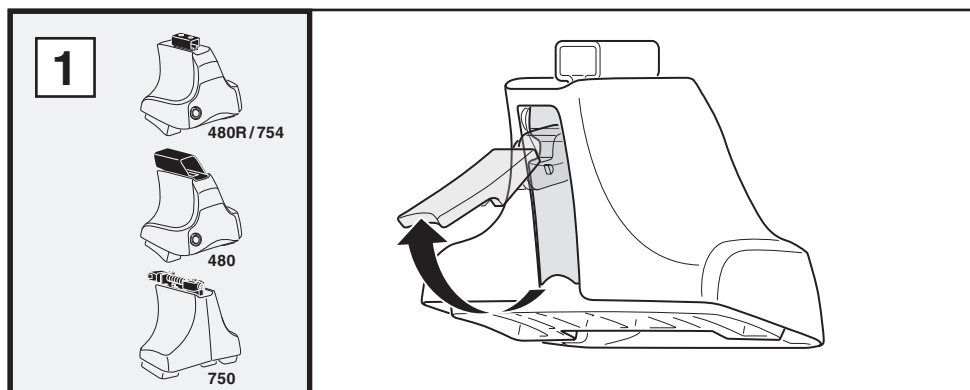

3


 


754

 

750

  1

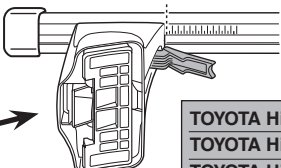


2



X

TOYOTA Hilux, 2-dr Pickup, 98-04	33,5
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 1

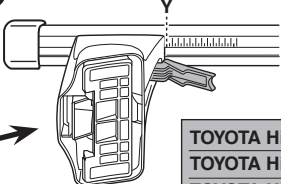

2



Y

TOYOTA Hilux, 2-dr Pickup, 98-04	—
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 


480R



480

1




2




X inch X mm

TOYOTA Hilux, 2-dr Pickup, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 7/8"	986 mm

 1



2

 


Y inch Y mm














TOYOTA Hilux, 2-dr Pickup, 98-04	—	—
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 7/8"	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 7/8"	986 mm

4

 TOYOTA Hilux, 2-dr Pickup, 98-04













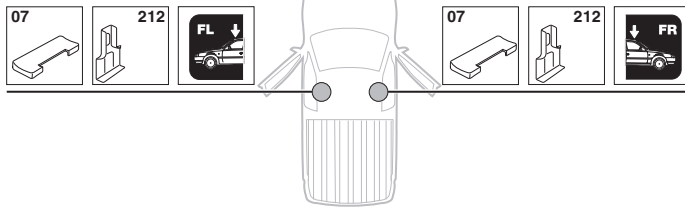


             TOYOTA Hilux, 2-dr Pickup extended, 98-04

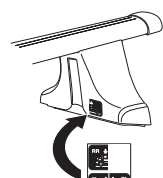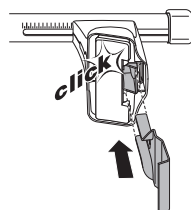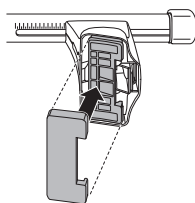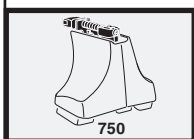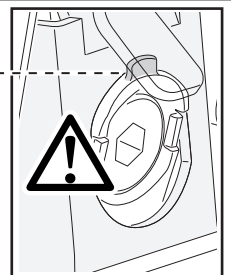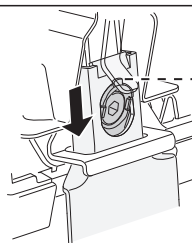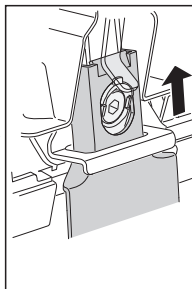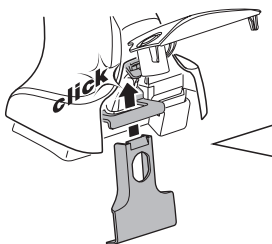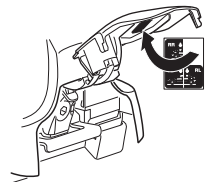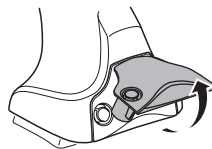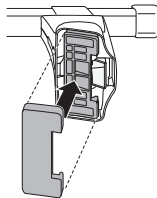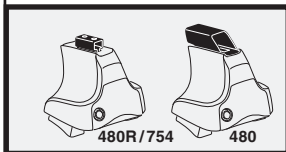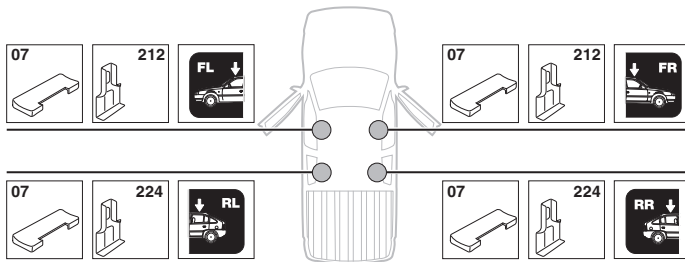


4

             TOYOTA Hilux, 4-dr Pickup double cab, 98-04

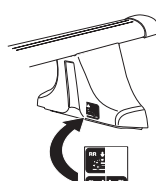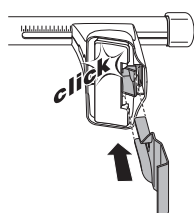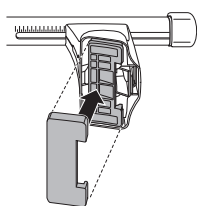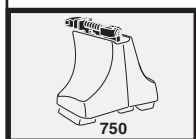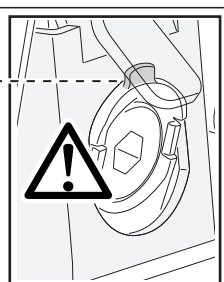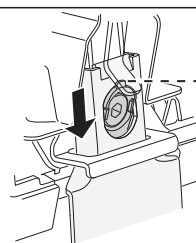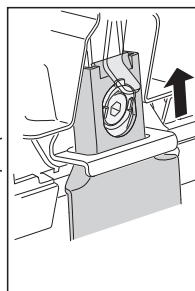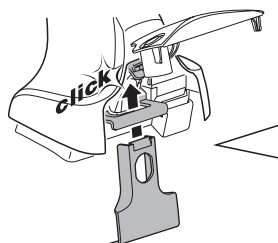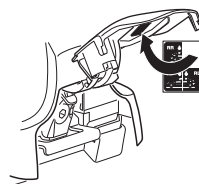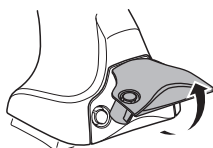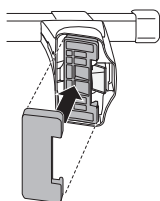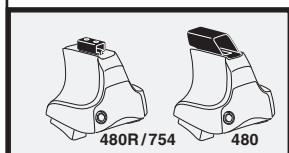
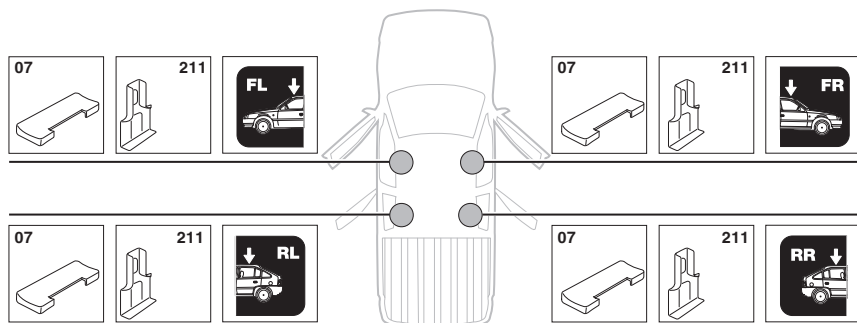


5




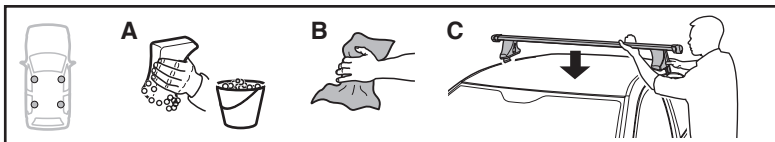 


	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 2-dr Pickup, 98-04	230 mm	–	9"	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	230 mm	600 mm	9"	23 5/8"

  TOYOTA Hilux, 2-dr Pickup, 98-04

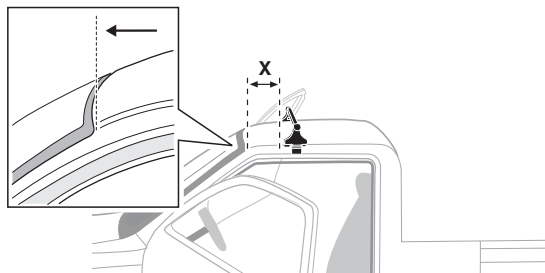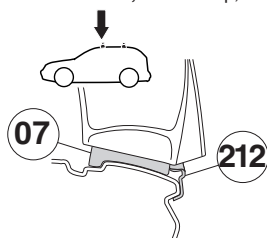

    
TOYOTA Hilux, 2-dr Pickup extended, 98-04

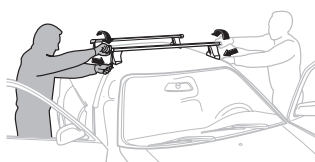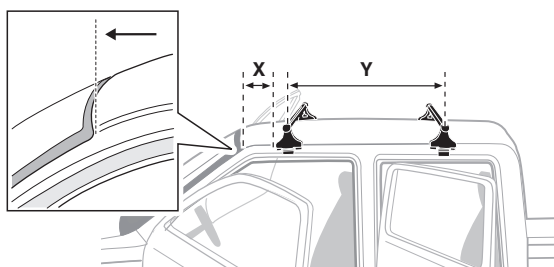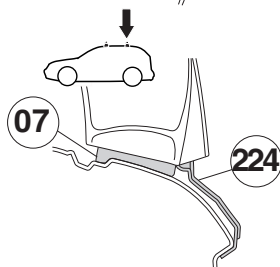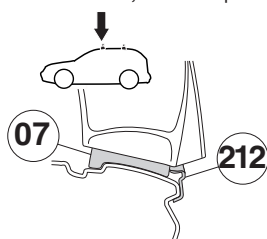

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно





CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขั้นในแบบสลับ

 5

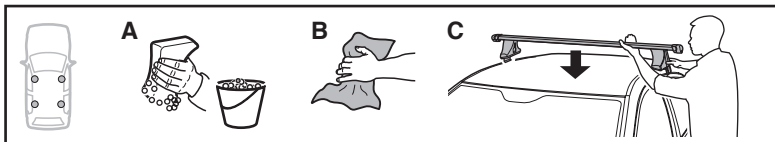

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	300 mm	700 mm	11 ³ / ₄ "	27 ¹ / ₂ "

    TOYOTA Hilux, 4-dr Pickup double cab, 98-04

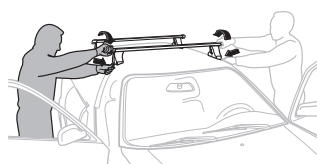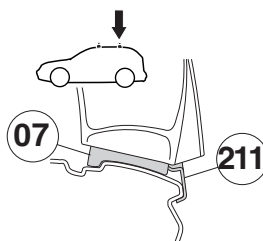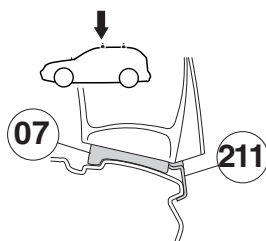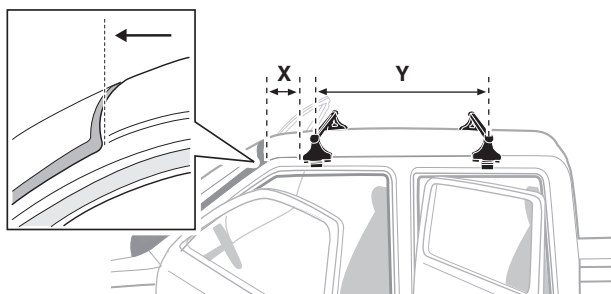


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokrétla bagażnika dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egyarástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ


 
6






480R/754








  480

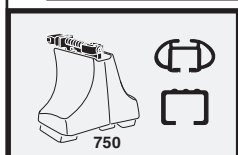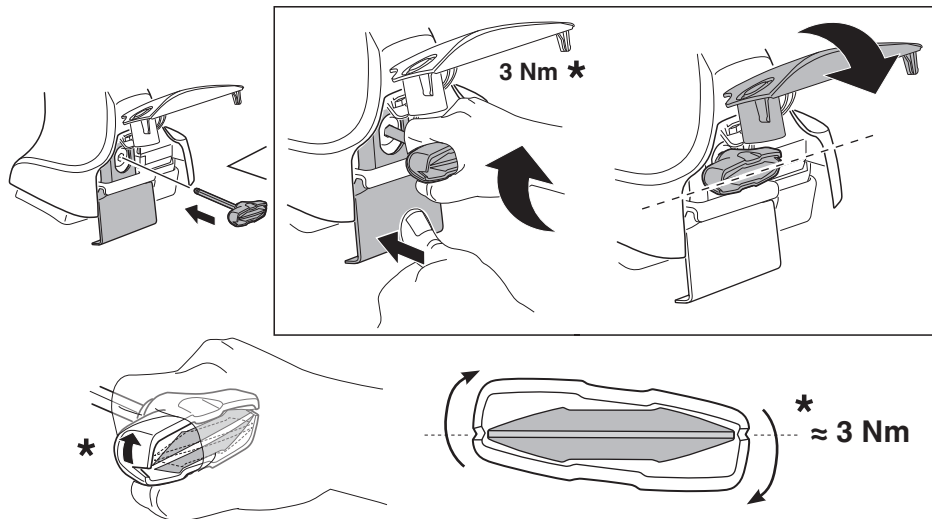

750

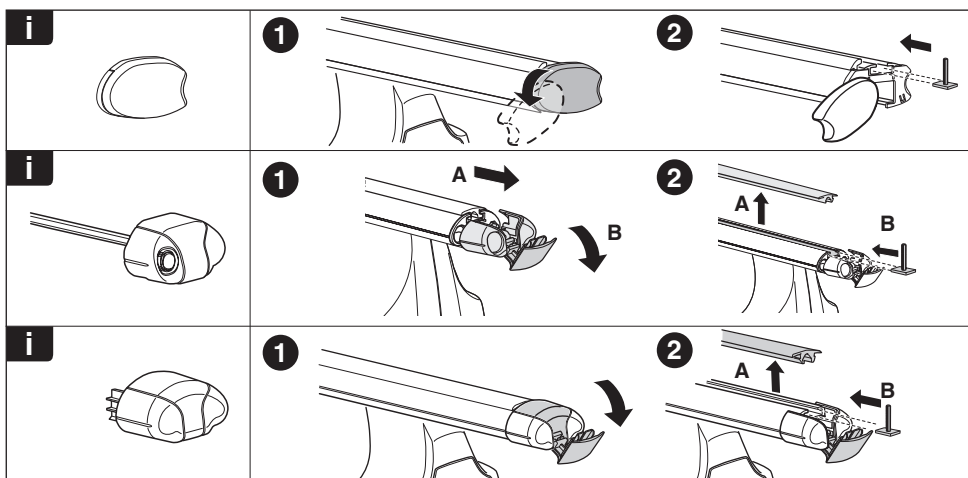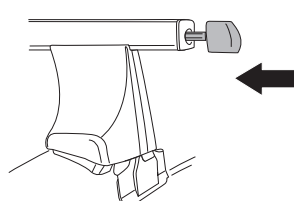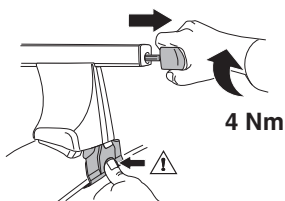   

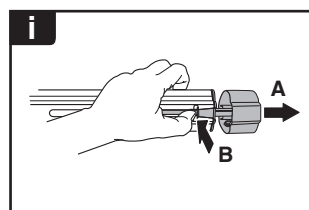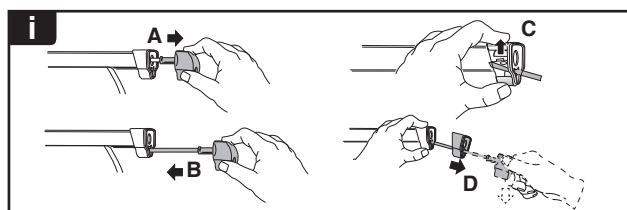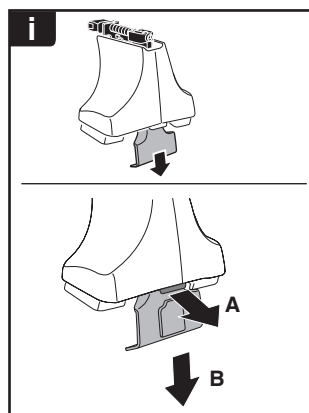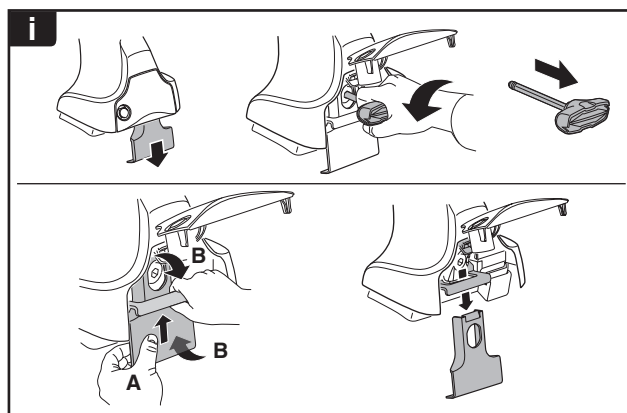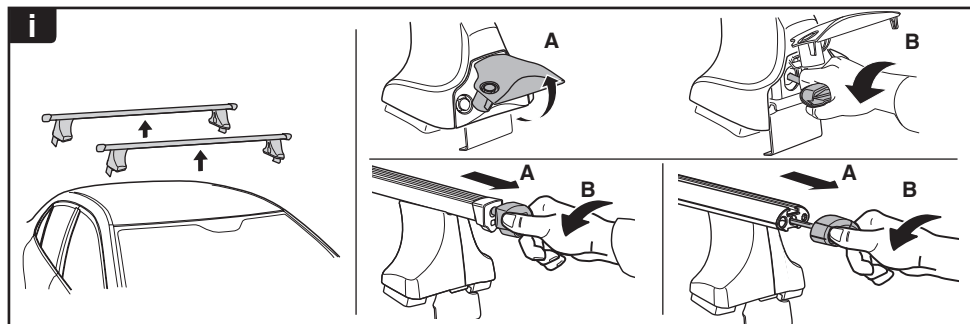     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		

 
 
 
 
 
ww ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
 NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

 
 
 
info@thule.com
 customer.service@thule.com

 
www.thule.com

 www.thuleprofessional.com
info@thule.com
customer.service@thule.com

NA ▶  Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
 Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

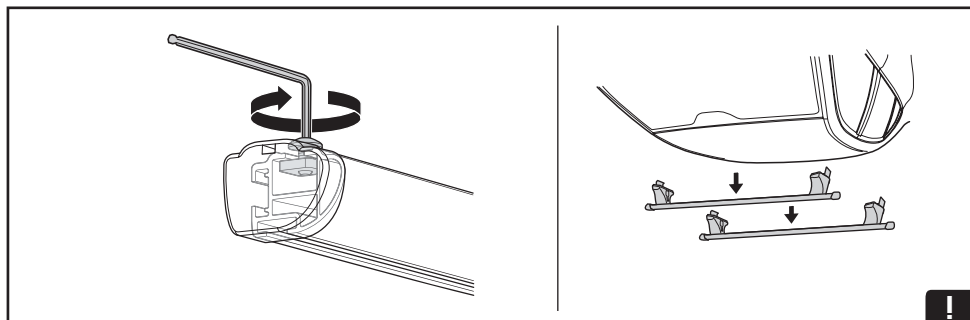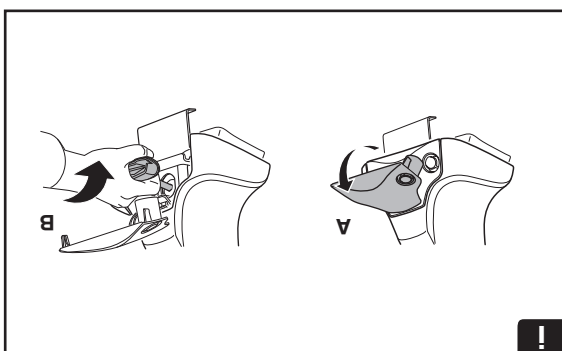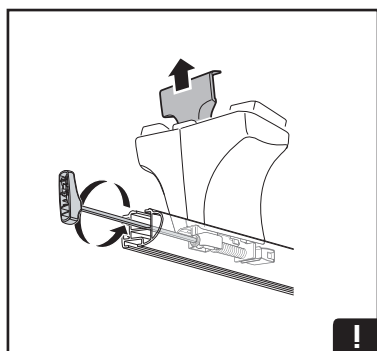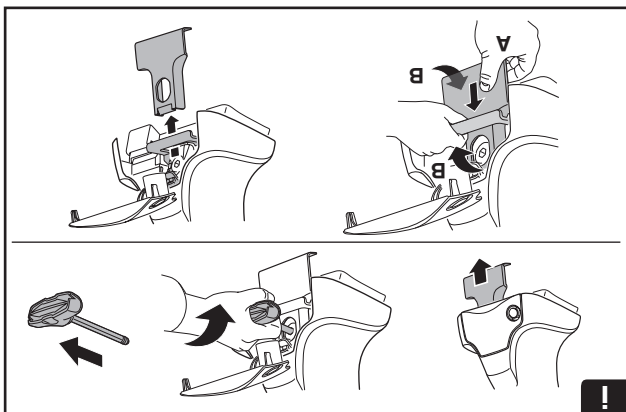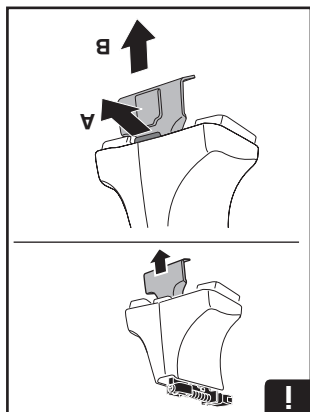

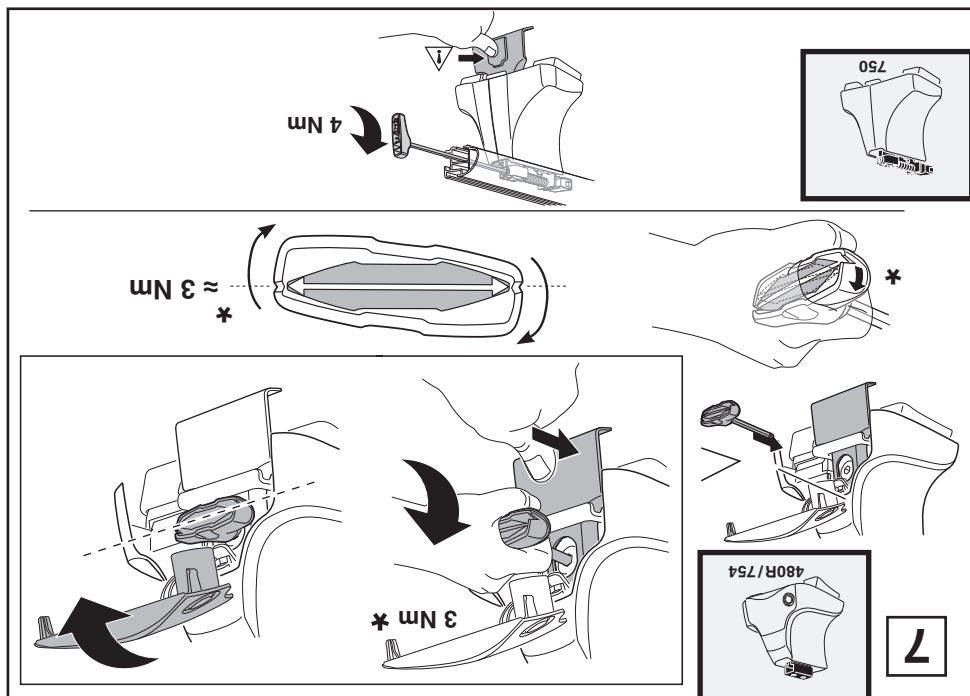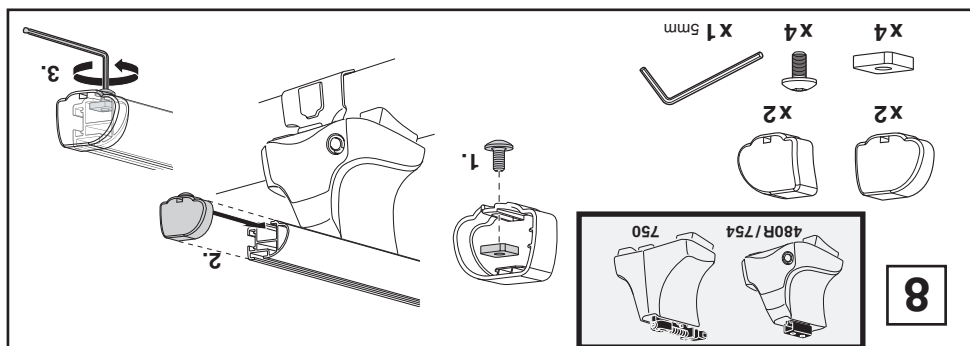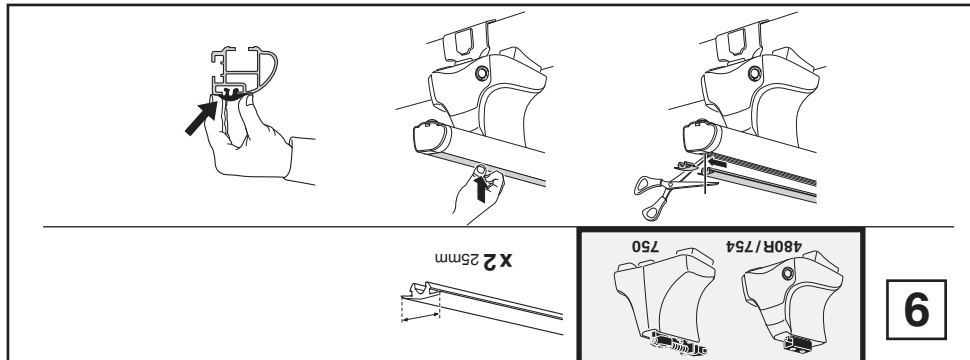

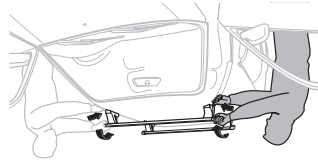



GB/US
D
F
NL
I
E
PT
S
FIN
EST
LAT
LT
PL
RU

Tighien alternately
Die Schrauben abwechselnd
anziehen
Serrer alternativement
chaque côté
Afwisselend aan de linker- en de
rechterkant aandraaien
Alternare il serraggio delle viti
Aperte alternativamente
Dra àt växelvis
Kierra vuorotellen
Pivõldage vaheldumisi
Pivõldet paritus
Uzskūnēkite pakārtomis
Śruby dokręcaj naprzemiennie
Затягивайте попеременно

中文
交替拧紧


CZ
SK
SLO
HR
HU
GR
TR
Ymk
Pokrētia bagaznīka dokrēcaj
dokrēcaj naprzemiennie.
Dokahijte striedavo
Privijajte izmenično.
Náizmenično zatęgnętie
Egyezmestől fűggetlenül
szorítandó
Zphlyette evadad,
Dönędümü sığın

 
 
한국어
편갈아 가며 조이십시오.
日本語
交互に締め付けてください。
മുതലമുതലായി

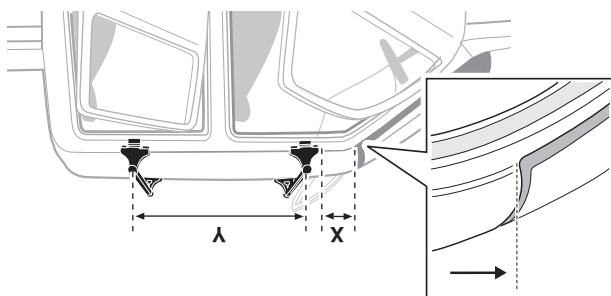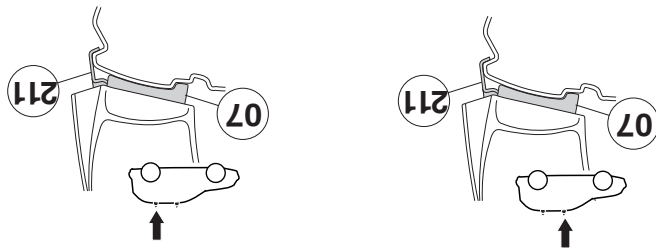


TOYOTA Hilux, 4-dr Pickup double cab, 98-04

TOYOTA Hilux, 4-dr Pickup double cab, 98-04			
X mm	Y mm	X mm	Y mm
300	700	11 3/4	27 1/2
		X inch	Y inch


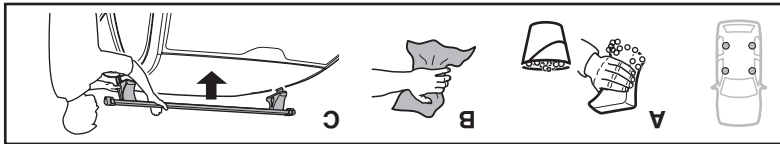 


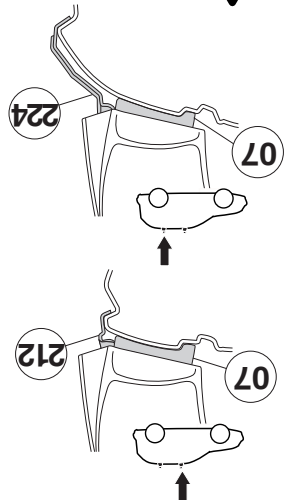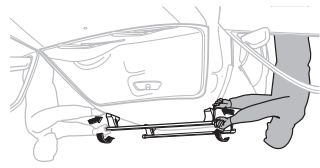  

 
TOYOTA Hilux, 2-dr Pickup extended, 98-04

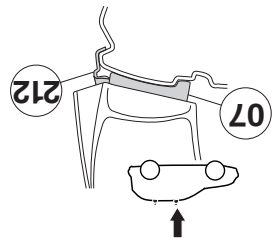




















TOYOTA Hilux, 2-dr Pickup, 98-04

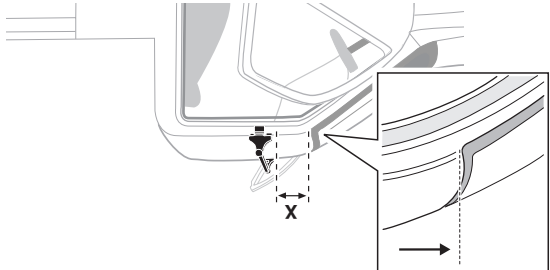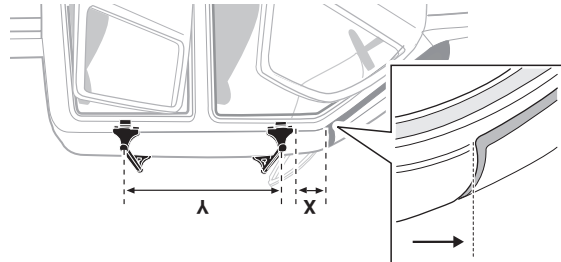  
















TOYOTA Hilux, 2-dr Pickup, 98-04	230 mm	600 mm	9"	23 5/8"
TOYOTA Hilux, 2-dr Pickup extended, 98-04	230 mm	600 mm	9"	23 5/8"

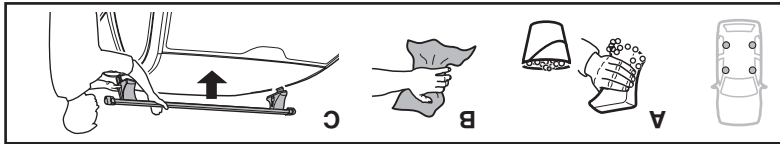 



- GB/US Tighen alternately
D Die Schrauben abwechselnd
anziehen
F Serrer alternativement chaque côté
Nl Afwisselend aan de linker- en de
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Apretar alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pļaušiet pārmēus
LT Užskinkite pakaitomis
PL Śrubę dokręcaj naprzemiennie
RU Затягивайте попеременно
- CZ Pokrýtá bagazníka dokręcaj
SK dokręcaj naprzemiennie.
SK Dotahujte striedavo
SLO Privijajte izmenično.
HR Natizajte zategnute
HU Egymástól fuggelentül
GR szorítandó
TR Donusmalı sıkın
GR Zfityete evadaç
中文 交替拧紧
한국어 편감아 가며 조이십시오.
日本語 交互に締め付けてください。
Українська щільно затягуйте

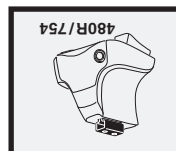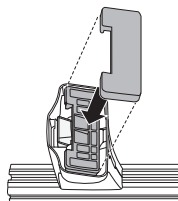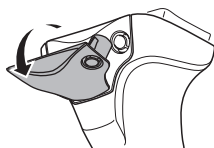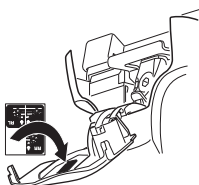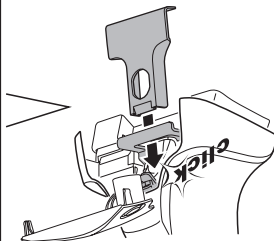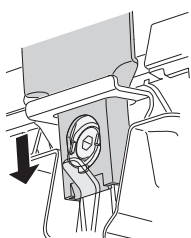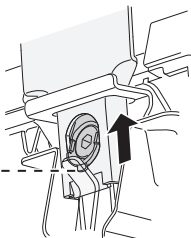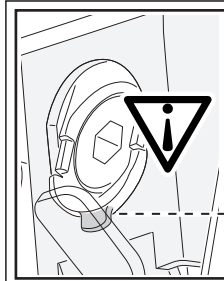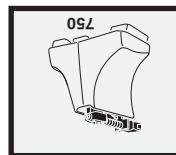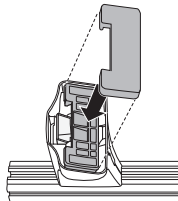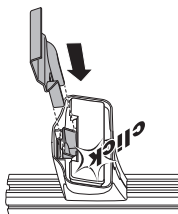                  
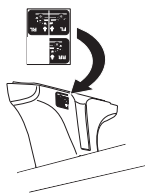 


              
 
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

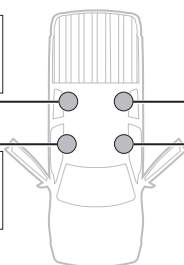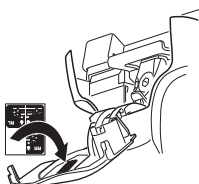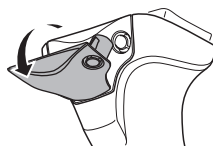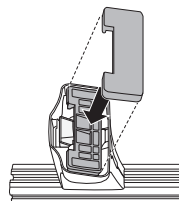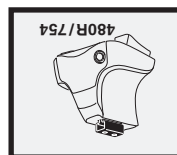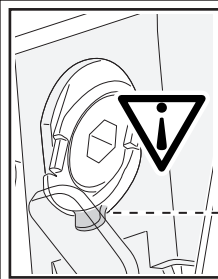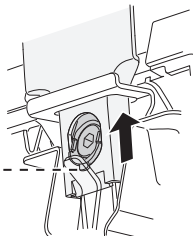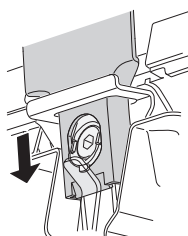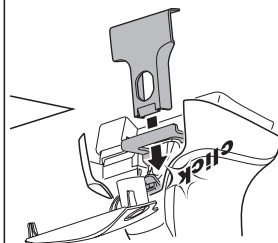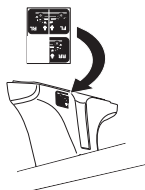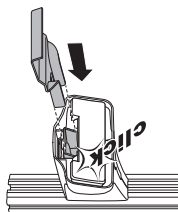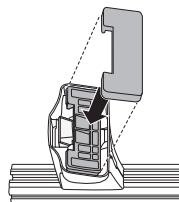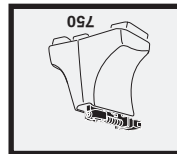

     
 
TOYOTA Hilux, 2-dr Pickup extended, 98-04

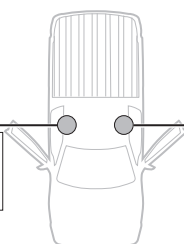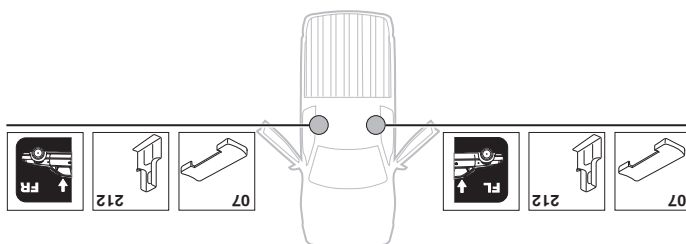

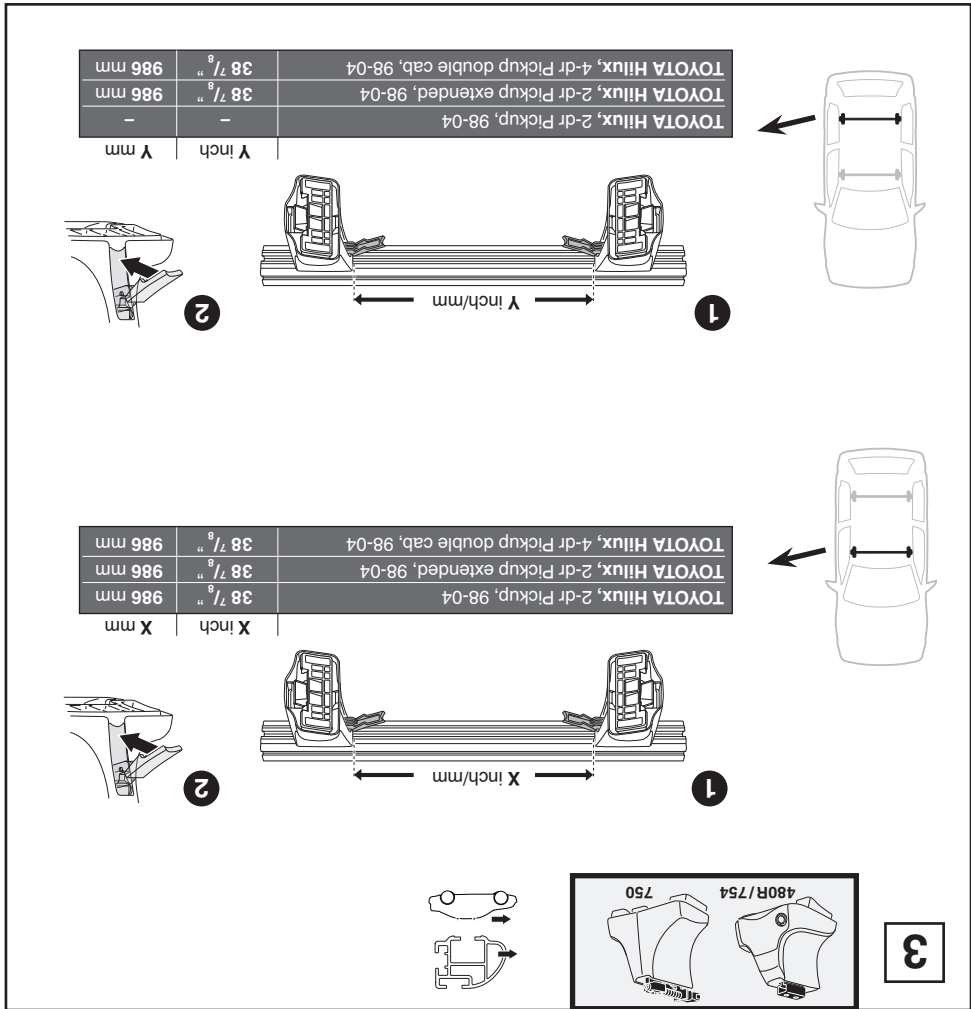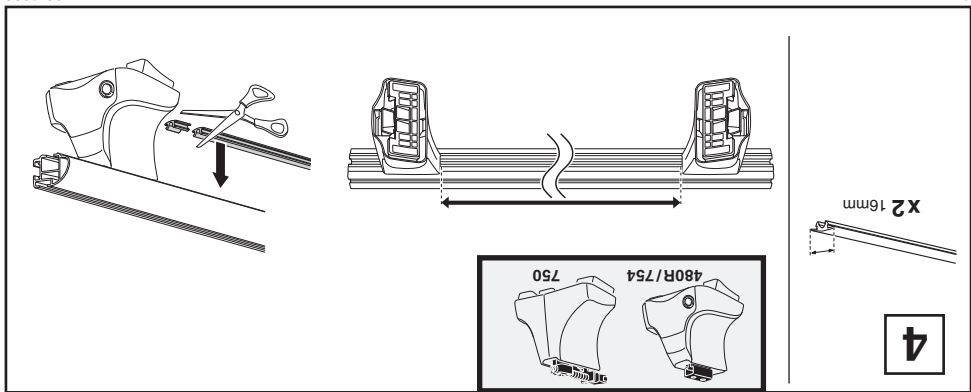


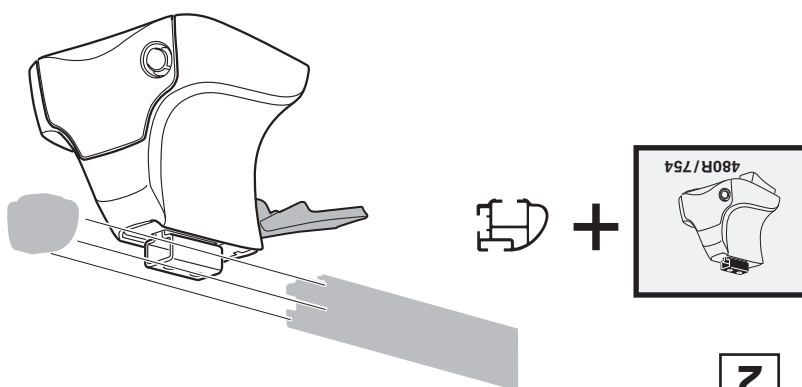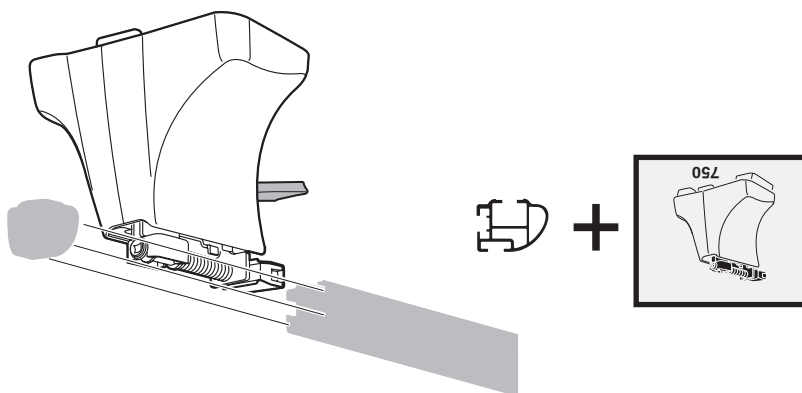

2

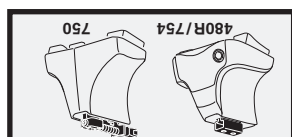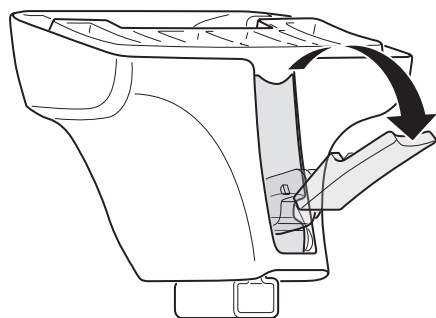  


1

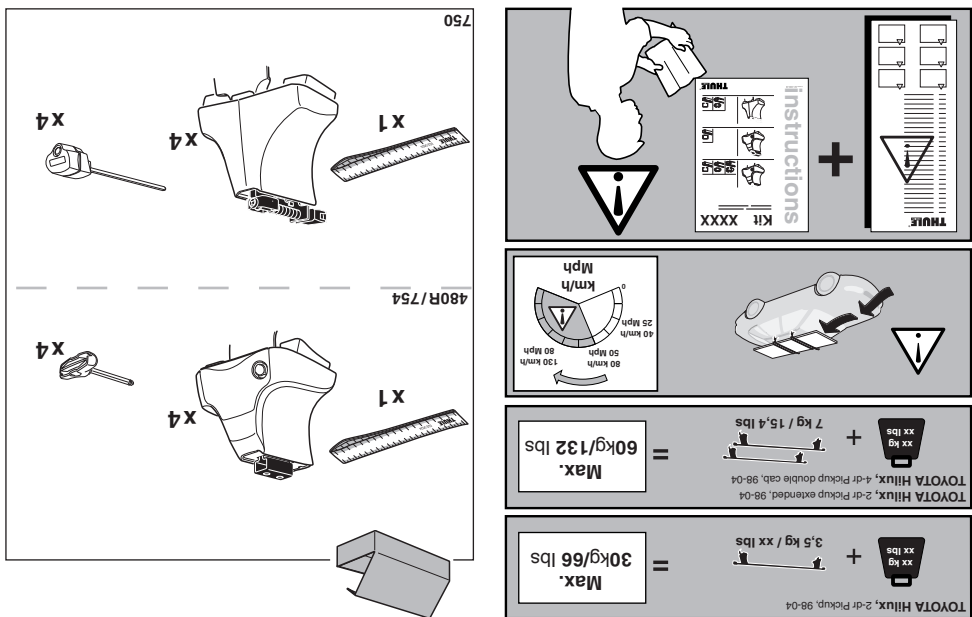 



instructions

Kit 1083

 
TOYOTA Hilux, 2-dr Pickup, 98-04
TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

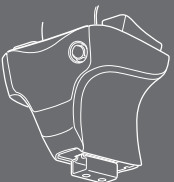

480R
754

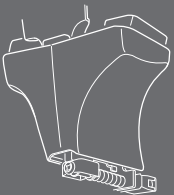  

750

 

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN

®