 
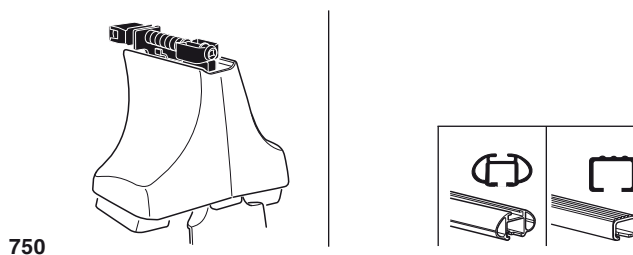 
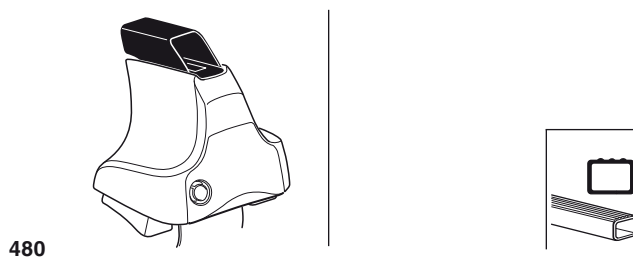 


Kit 1085

TOYOTA 4 Runner, 3-dr SUV, 90-95

 
TOYOTA 4 Runner, 5-dr SUV, 90-95

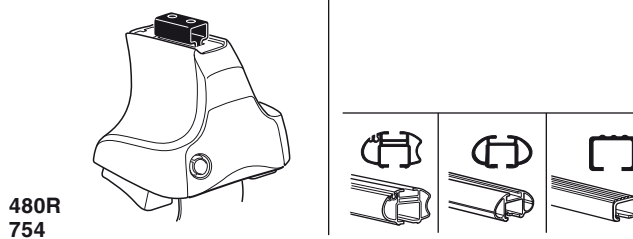

 

 $\text{xx kg} / \text{xx lbs}$
 $+$
 $7 \text{ kg} / 15,4 \text{ lbs}$
 $=$

Max.
75kg
Max.
165 lbs



 $3 \text{ kg} / 6,6 \text{ lbs}$




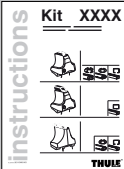

80 km/h 130 km/h
 50 Mph 80 Mph
 40 km/h 25 Mph
 0 km/h Mph

  
 $+$



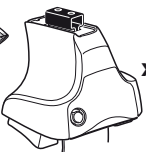


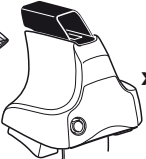 




 $\times 4$

 
 $\times 4$

480R/754














480

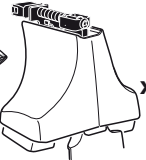
750


    	 $\times 2$  $\times 2$  $\times 2$  $\times 4$	 $\times 2$	 $\times 2$  $\times 2$  $\times 4$  $\times 4$	 $\times 2$  $\times 2$	 $\times 2$
--	--	--	--	--	---

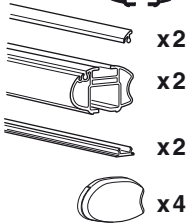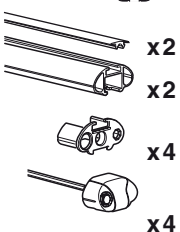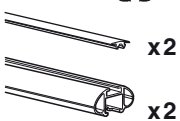        


 $\leftarrow$

173

  $\times 4$







 $\leftarrow$

45


 $\times 4$


 $\times 1$

     
Kit

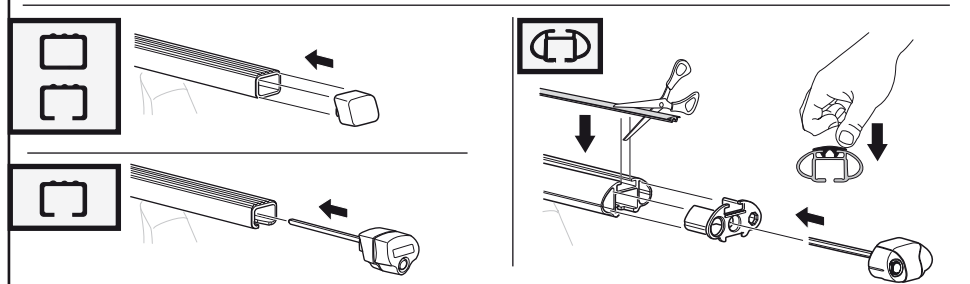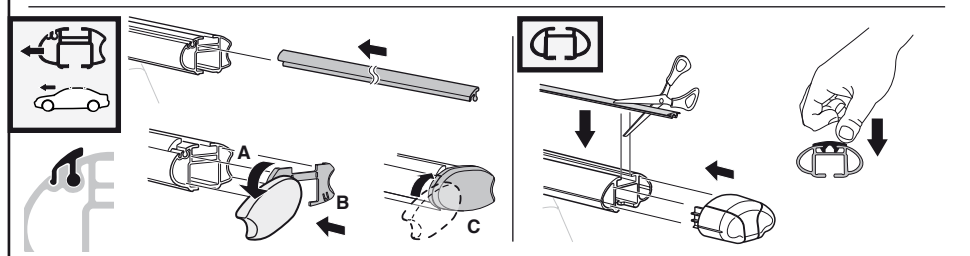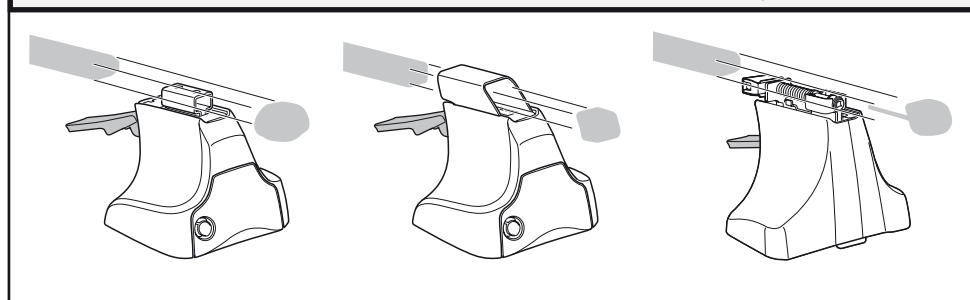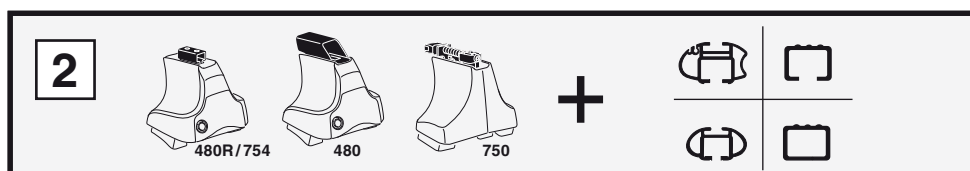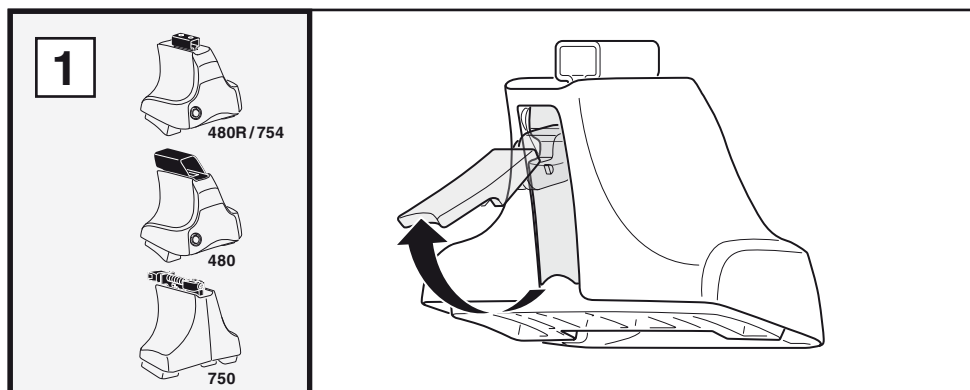

3

 


754

 

750

 1

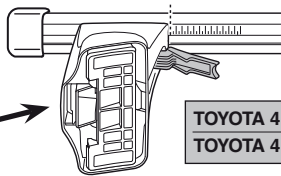


2




X	
TOYOTA 4 Runner, 3-dr SUV, 90-95	31,5
TOYOTA 4 Runner, 5-dr SUV, 90-95	31,5

 1

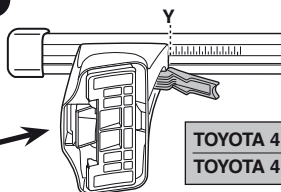

2

 

Y	
TOYOTA 4 Runner, 3-dr SUV, 90-95	30,5
TOYOTA 4 Runner, 5-dr SUV, 90-95	30,5

 


480R




480

1




2

 

	X inch	X mm
TOYOTA 4 Runner, 3-dr SUV, 90-95	38"	966 mm
TOYOTA 4 Runner, 5-dr SUV, 90-95	38"	966 mm

 1



2





	Y inch	Y mm
TOYOTA 4 Runner, 3-dr SUV, 90-95	37 ⁵ / ₈ "	956 mm
TOYOTA 4 Runner, 5-dr SUV, 90-95	37 ⁵ / ₈ "	956 mm






4

TOYOTA 4 Runner, 3-dr SUV, 90-95

  
SRA

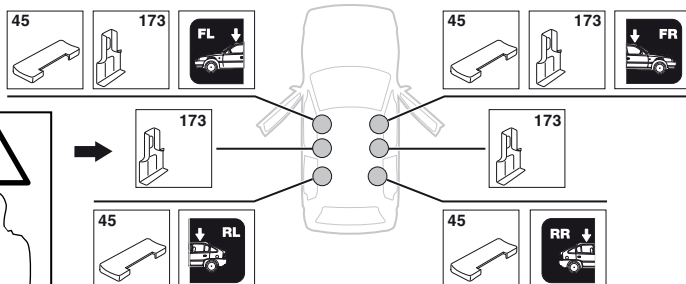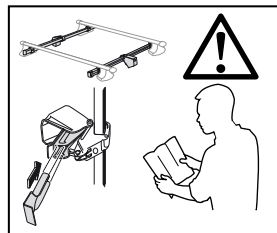


TOYOTA 4 Runner, 5-dr SUV, 90-95

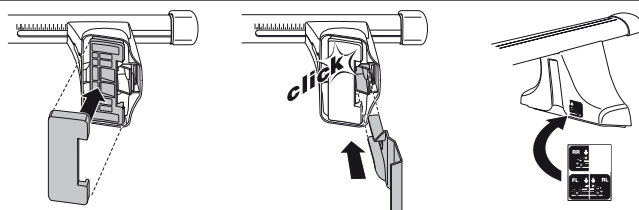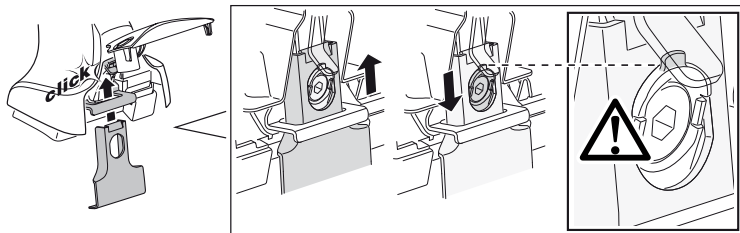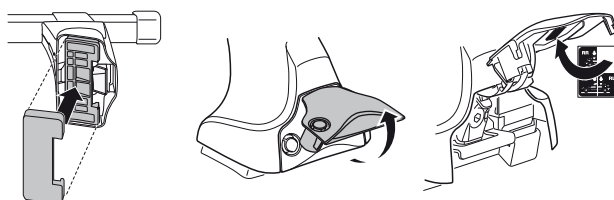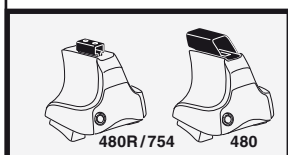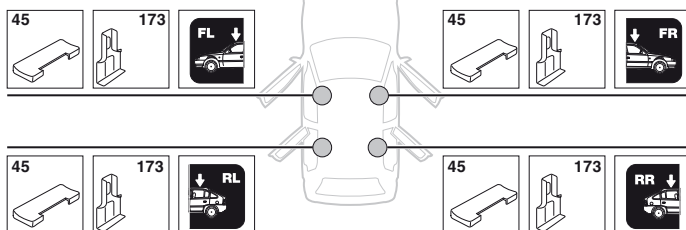     



5

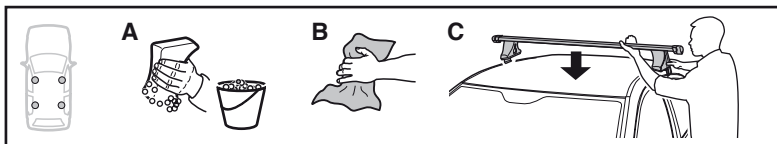 

	X mm	Y mm	X inch	Y inch
TOYOTA 4 Runner, 3-dr SUV, 90-95	200 mm	700 mm	7 7/8"	27 1/2"
TOYOTA 4 Runner, 5-dr SUV, 90-95	300 mm	700 mm	11 3/4"	27 1/2"

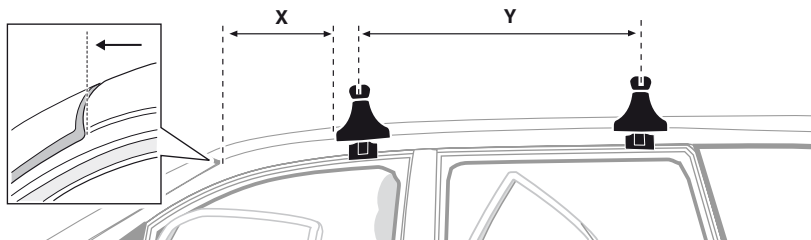 

TOYOTA 4 Runner, 3-dr SUV, 90-95

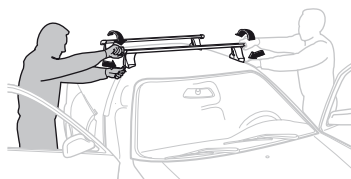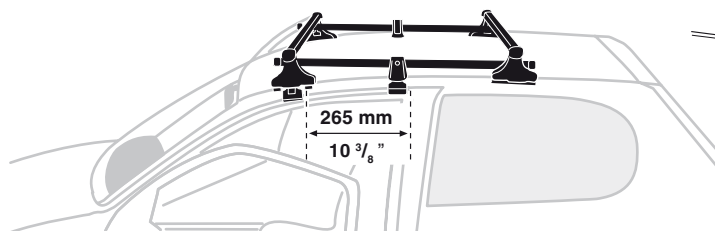  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciat pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ

 
 
 
 
 
6





480R/754



480

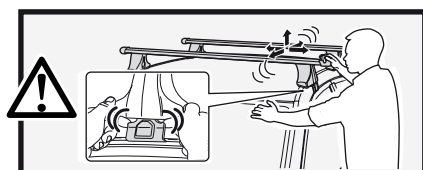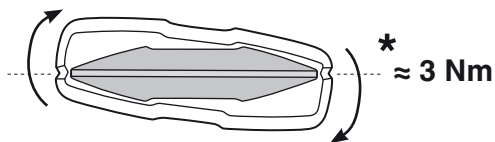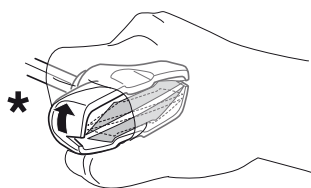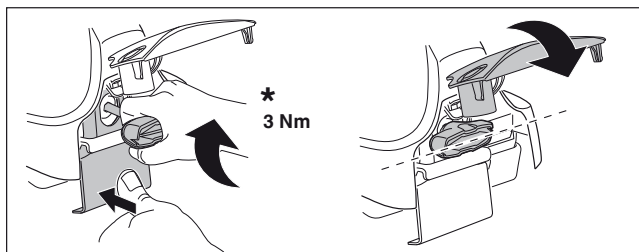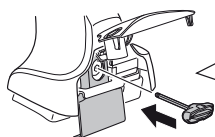

750

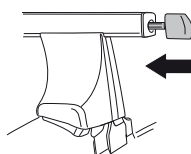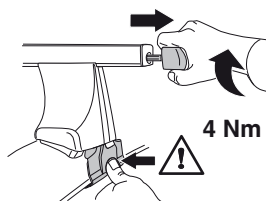  


i




1



 
2

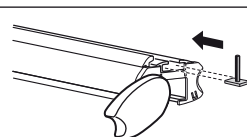


i

 

1

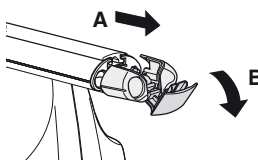 


2

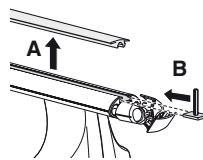 


i








 1

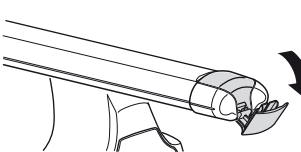

2

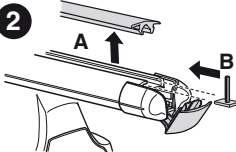 

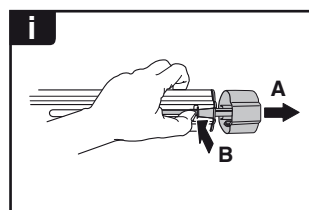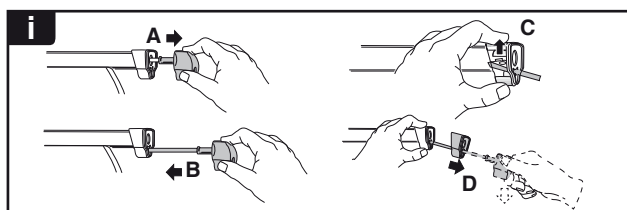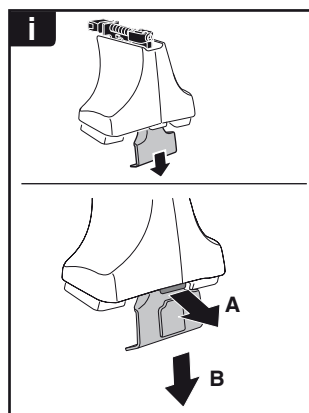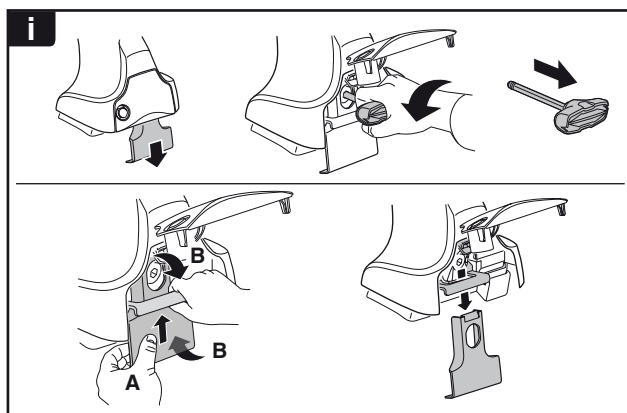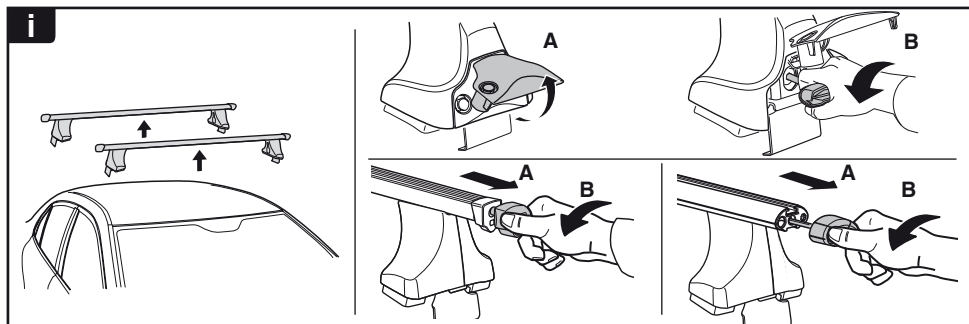     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		