

Kit 1107

DAEWOO Lanos, 4-dr Sedan, 97-03

 
 
 
 
 
DAEWOO Lanos, 5-dr Hatchback, 97-03

DAEWOO Lanos, 3-dr Hatchback, 98-03

DAEWOO Leganza, 4-dr Sedan, 97-02

DAEWOO Nubira, 4-dr Sedan, 97-99

DAEWOO Nubira II, 4-dr Sedan, 00-02

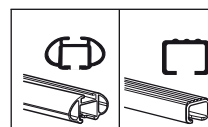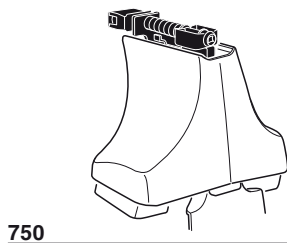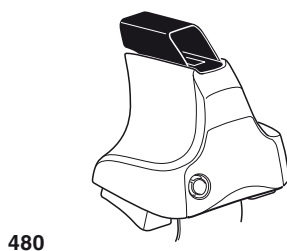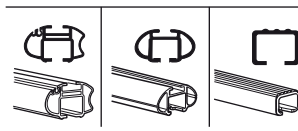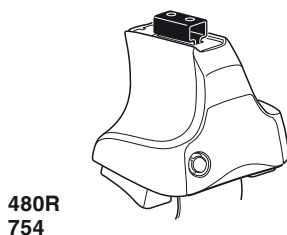

THULE[®]
SWEDEN

ISO 11154-E






Max. 75kg
Max. 165 lbs

Kit XXXX
instructions




480R/754

480

    
 
750

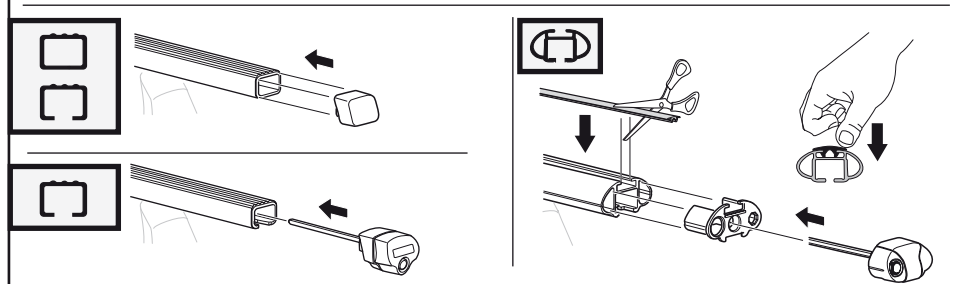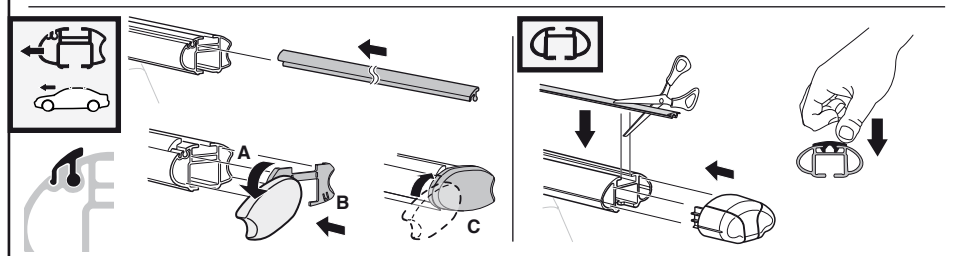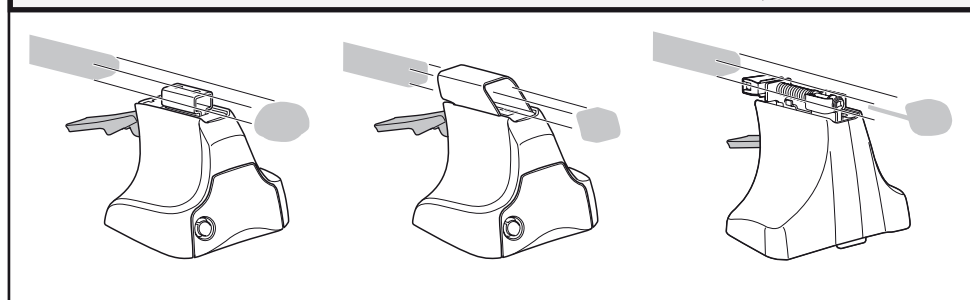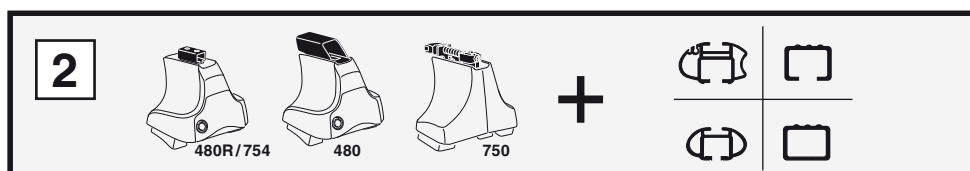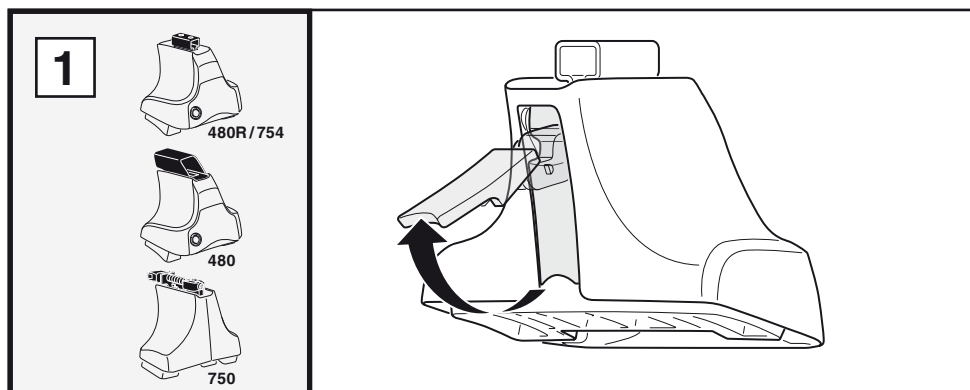


3

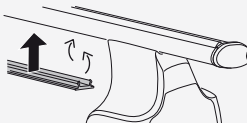   

1

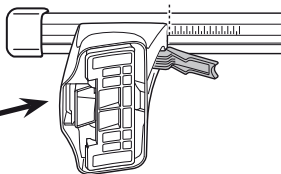  


2

 


	X
DAEWOO Lanos, 4-dr Sedan, 97-03	22,5
DAEWOO Lanos, 5-dr Hatchback, 97-03	22,5
DAEWOO Lanos, 3-dr Hatchback, 98-03	23
DAEWOO Leganza, 4-dr Sedan, 97-02	32
DAEWOO Nubira, 4-dr Sedan, 97-99	27,5
DAEWOO Nubira II, 4-dr Sedan, 00-02	27,5

 1

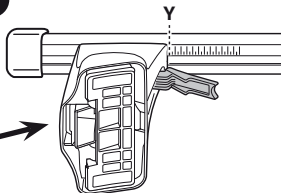

2

 

	Y
DAEWOO Lanos, 4-dr Sedan, 97-03	22
DAEWOO Lanos, 5-dr Hatchback, 97-03	22
DAEWOO Lanos, 3-dr Hatchback, 98-03	21,5
DAEWOO Leganza, 4-dr Sedan, 97-02	29
DAEWOO Nubira, 4-dr Sedan, 97-99	26,5
DAEWOO Nubira II, 4-dr Sedan, 00-02	26,5

3



 
480R




480



1




2

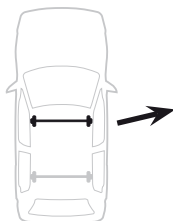 


	X inch	X mm
DAEWOO Lanos, 4-dr Sedan, 97-03	34 ¹ / ₂ "	876 mm
DAEWOO Lanos, 5-dr Hatchback, 97-03	34 ¹ / ₂ "	876 mm
DAEWOO Lanos, 3-dr Hatchback, 98-03	34 ⁵ / ₈ "	881 mm
DAEWOO Leganza, 4-dr Sedan, 97-02	38 ¹ / ₄ "	971 mm
DAEWOO Nubira, 4-dr Sedan, 97-99	36 ¹ / ₂ "	926 mm
DAEWOO Nubira II, 4-dr Sedan, 00-02	36 ¹ / ₂ "	926 mm

 1

















2

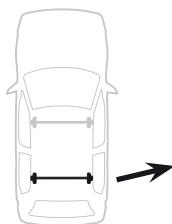 

	Y inch	Y mm
DAEWOO Lanos, 4-dr Sedan, 97-03	34 ¹ / ₄ "	871 mm
DAEWOO Lanos, 5-dr Hatchback, 97-03	34 ¹ / ₄ "	871 mm
DAEWOO Lanos, 3-dr Hatchback, 98-03	34 ¹ / ₈ "	866 mm
DAEWOO Leganza, 4-dr Sedan, 97-02	37 "	941 mm
DAEWOO Nubira, 4-dr Sedan, 97-99	36 ¹ / ₈ "	916 mm
DAEWOO Nubira II, 4-dr Sedan, 00-02	36 ¹ / ₈ "	916 mm

              SRA

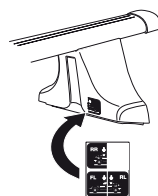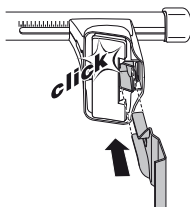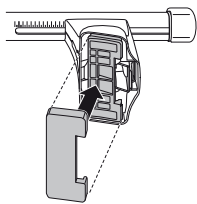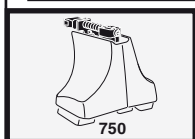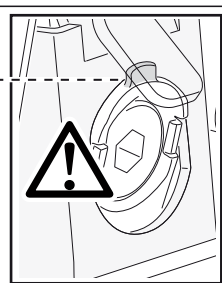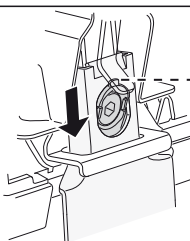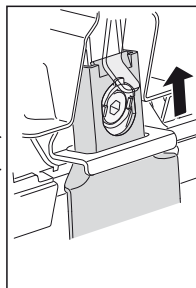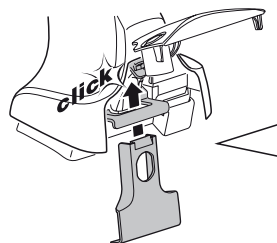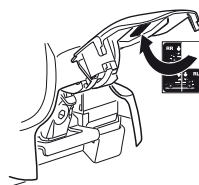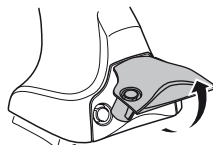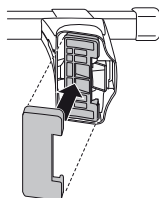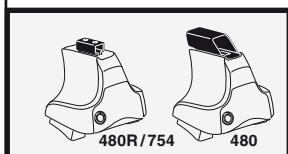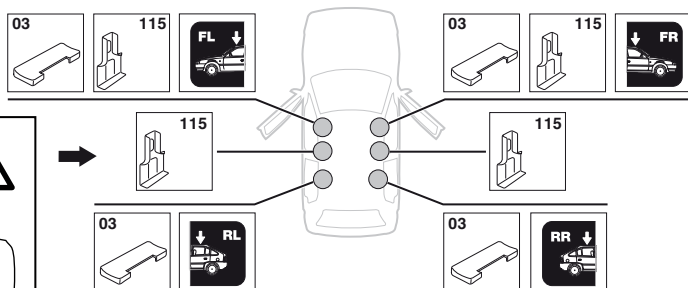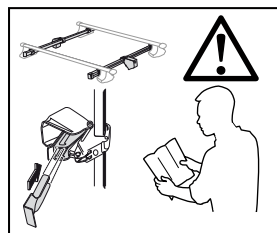


4

DAEWOO Lanos, 4-dr Sedan, 97-03







DAEWOO Lanos, 5-dr Hatchback, 97-03

DAEWOO Nubira, 4-dr Sedan, 97-99


 
DAEWOO Nubira II, 4-dr Sedan, 00-02

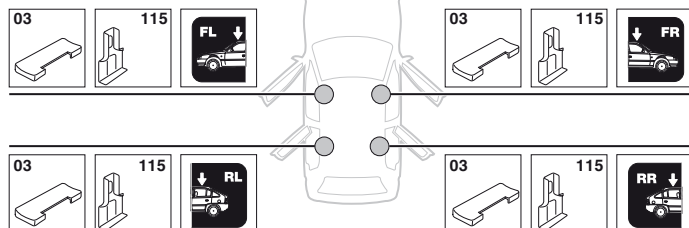



DAEWOO Leganza, 4-dr Sedan, 97-02

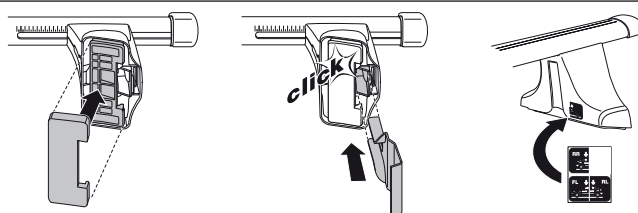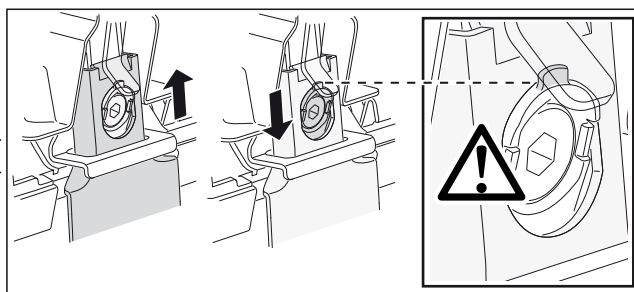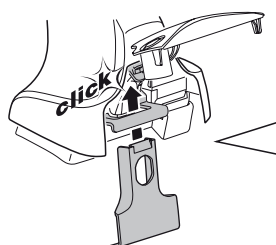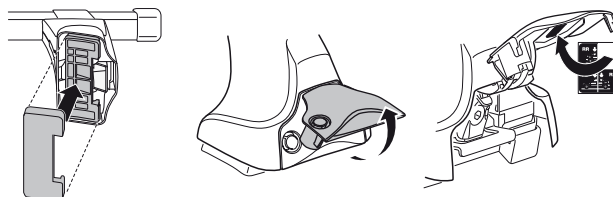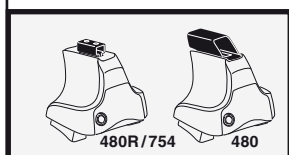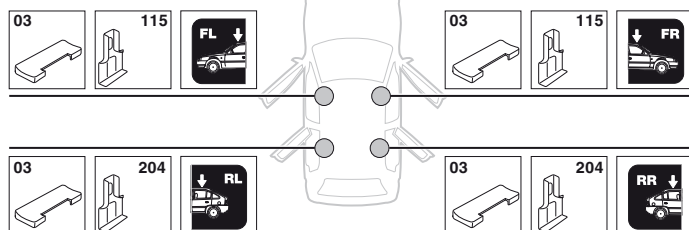      

5

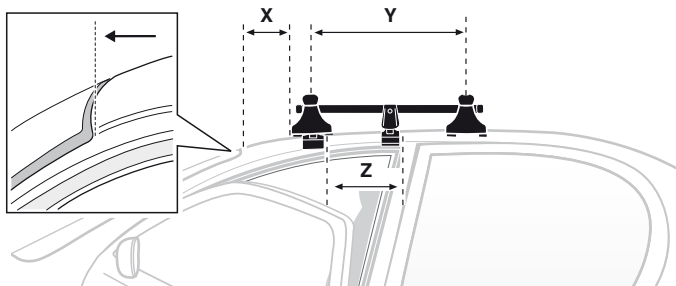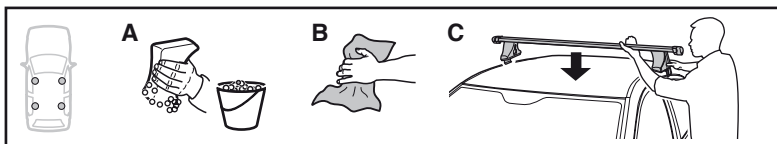  



	X mm	Y mm	Z mm	X inch	Y inch	X inch
DAEWOO Lanos, 3-dr Hatchback, 98-03	190 mm	700 mm	360 mm	7 1/2"	27 1/2"	14 1/8"

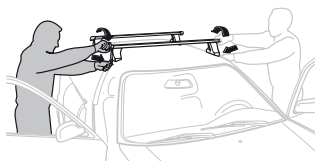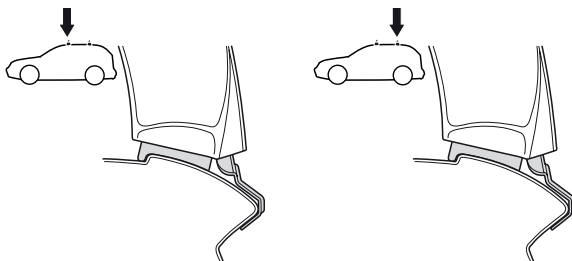  

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно


CZ Pokrétla багажníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függgetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขึ้นในแบบสลับ

  5

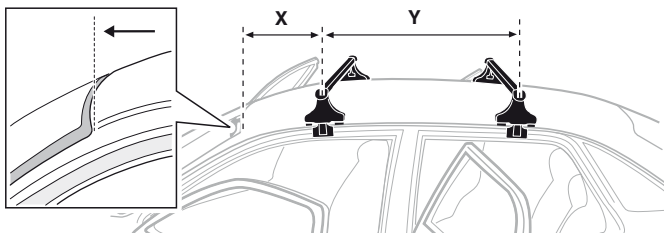
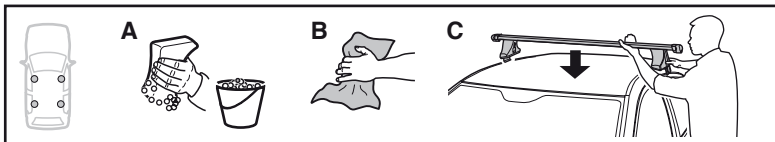


	X mm	Y mm	X inch	Y inch
DAEWOO Lanos, 4-dr Sedan, 97-03	200 mm	600 mm	7 7/8"	23 5/8"
DAEWOO Lanos, 5-dr Hatchback, 97-03	200 mm	550 mm	7 7/8"	21 5/8"
DAEWOO Leganza, 4-dr Sedan, 97-02	200 mm	650 mm	7 7/8"	25 5/8"
DAEWOO Nubira, 4-dr Sedan, 97-99	180 mm	650 mm	7 1/8"	25 5/8"
DAEWOO Nubira II, 4-dr Sedan, 00-02	180 mm	650 mm	7 1/8"	25 5/8"

 DAEWOO Lanos, 4-dr Sedan, 97-03
DAEWOO Lanos, 5-dr Hatchback, 97-03
DAEWOO Nubira, 4-dr Sedan, 97-99
DAEWOO Nubira II, 4-dr Sedan, 00-02

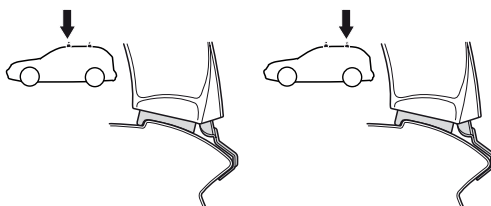

DAEWOO Leganza, 4-dr Sedan, 97-02

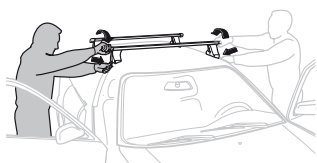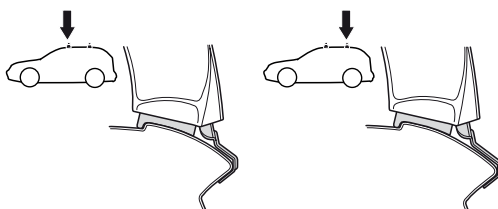  

GB/US	Tighten alternately	CZ	Pokřetla bagażnika dokręcaj dokręcaj naprzemiennie.
D	Die Schrauben abwechselnd anziehen	SK	Dofahujte striedavo
F	Serrer alternativement chaque côté	SLO	Privijajte izmenično.
NL	Afwisselend aan de linker- en de rechterkant aandraaien	HR	Naizmjenično zategnite
I	Alternare il serraggio delle viti	HU	Egy mástól függetlenül szorítandó
E	Apretar alternativamente	GR	Σφιγγείτε εναλλάξ
PT	Apertar alternadamente	TR	Dönüşümlü sıkın
S	Dra åt växelvis	中文	交替拧紧
FIN	Kierrä vuorotellen	한국어	번갈아 가며 조이십시오.
EST	Pinguldage vaheldumisi	日本語	交互に締め付けてください。
LAT	Pievelciet pamišus	ไทย	ขันในแบบสลับ
LIT	Užsukinkite pakaitomis		
PL	Śruby dokręcaj naprzemiennie		
RU	Затягивайте попеременно		

 
 
 
 
 
6





480R/754



480

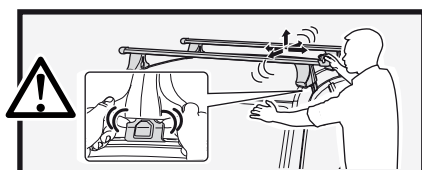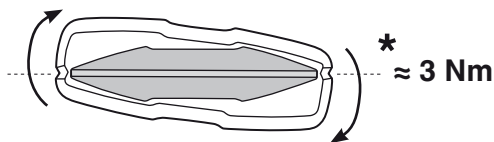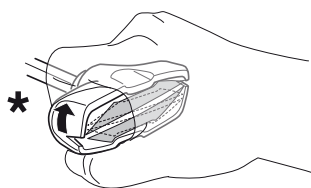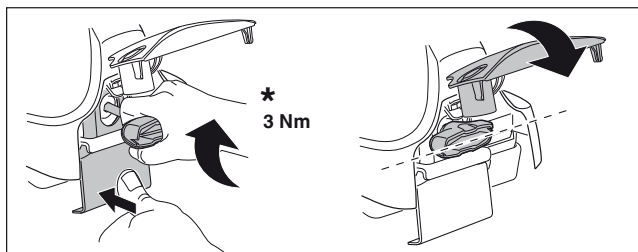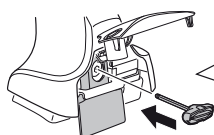

750

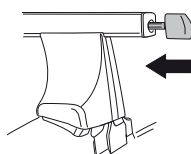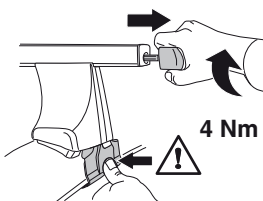  


i




1



 
2

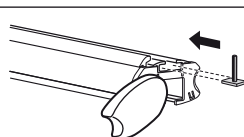


i

 


1

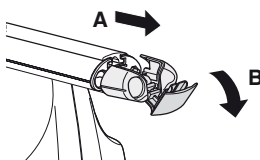 


2

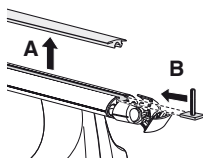 


i





 


1

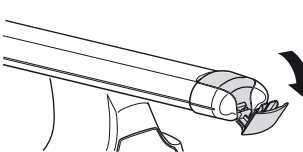 

2

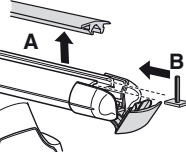 

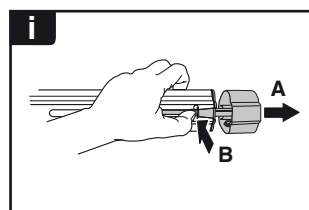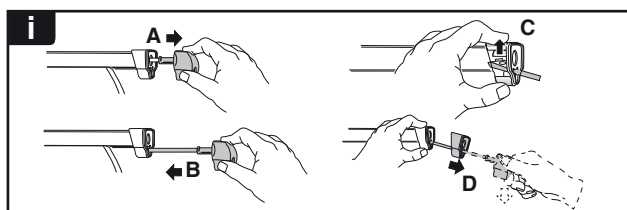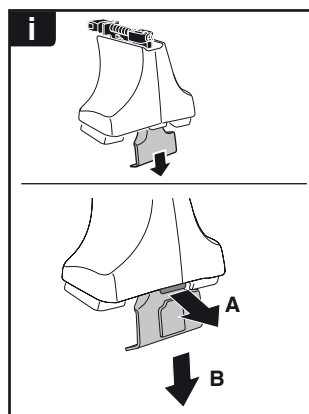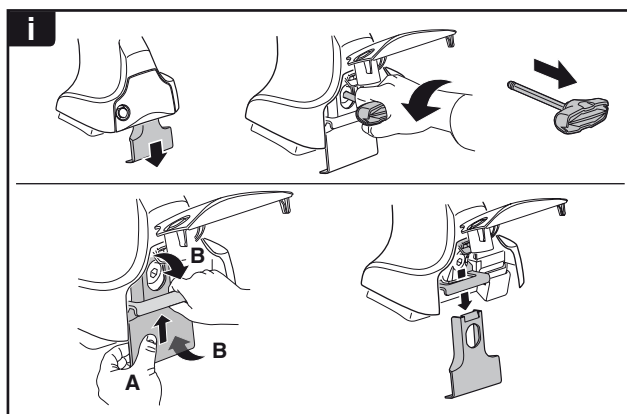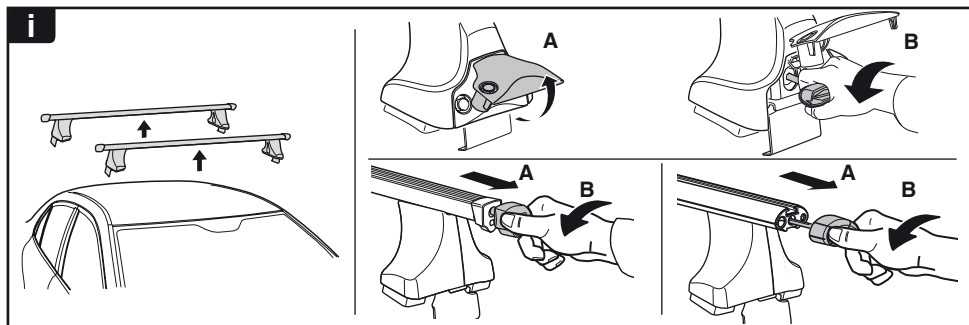     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		