 
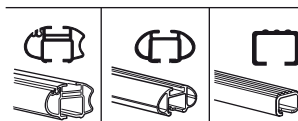 



Kit 1132

ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07



480R
754

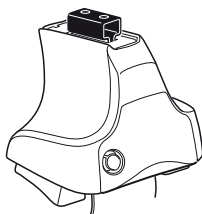

 480

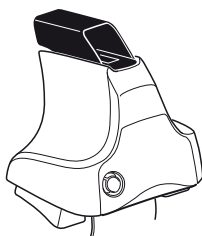

750

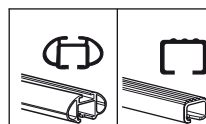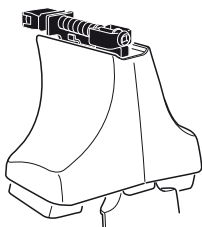  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
75kg**
**Max.
165 lbs**

Kit XXXX
instructions

480R/754
x1
x4
x4
x4

480
x1
x4
x4
x4

750
x1
x4
x4

x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x4	x4	x4	x4	x4

 
150 **x4**

04 **x4**

x1

Kit

1




480R/754



480



 750

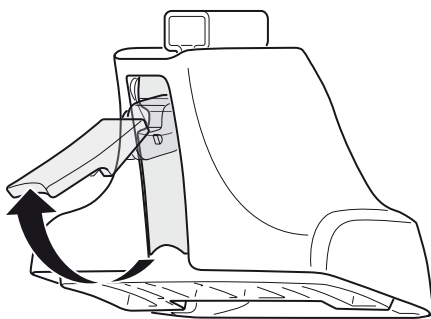

2



480R/754

 
 
 
 
 
 
 
 
 
 
 
 
 
 


480




750


+

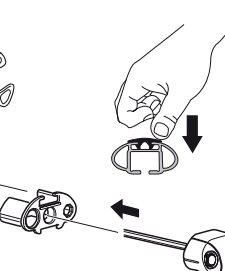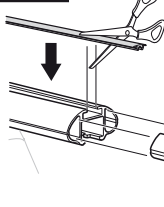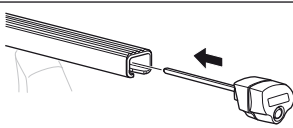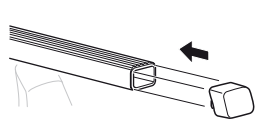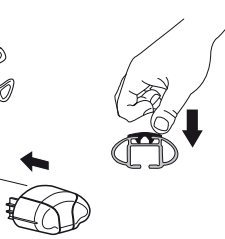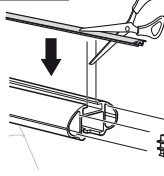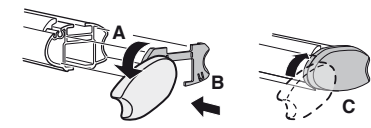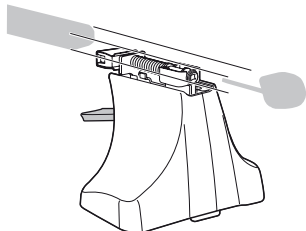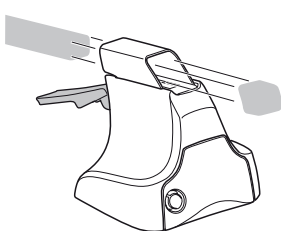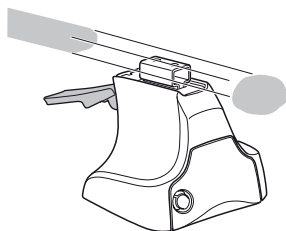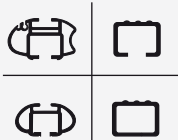

3

 



754

 

750



  1

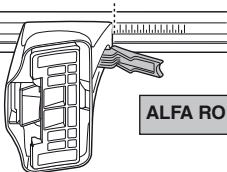

2

 
 


ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07


X

30,5

1

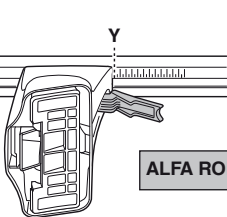

2

 

ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

Y

32,5

 


480R




480

1



2

 

ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

 
X inch

X mm

37 ⁵/₈ "

956 mm

1



2



ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

Y inch

 
 
 
 
 
 
 
 
 
 
 
 
 
Y mm

38 ³/₈ "


976 mm

4





ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07

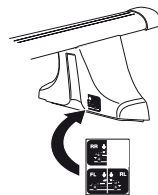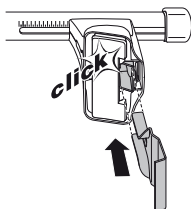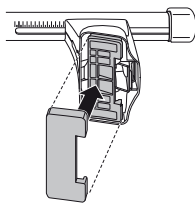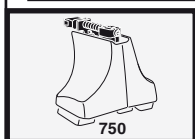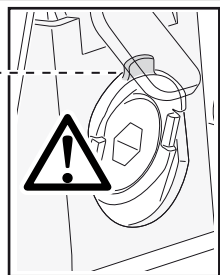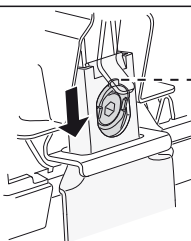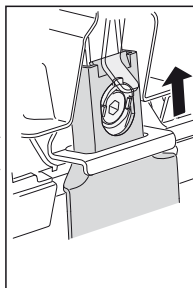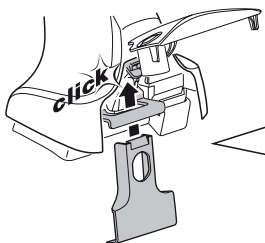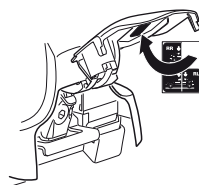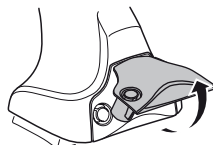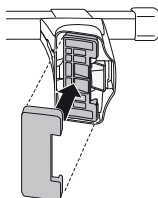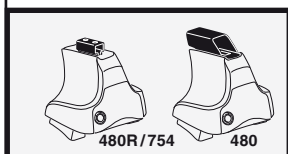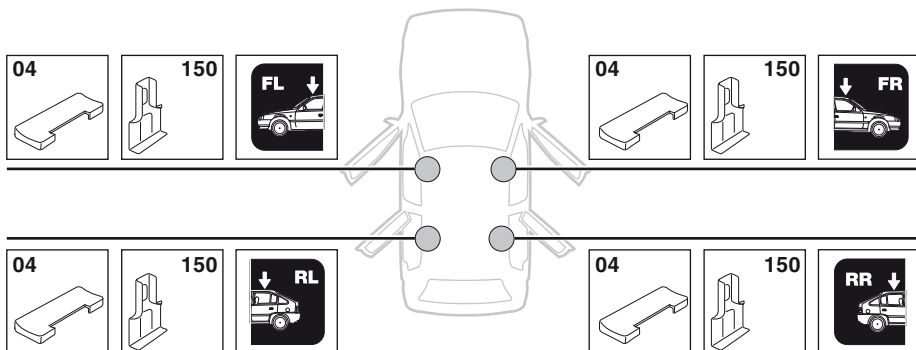

5

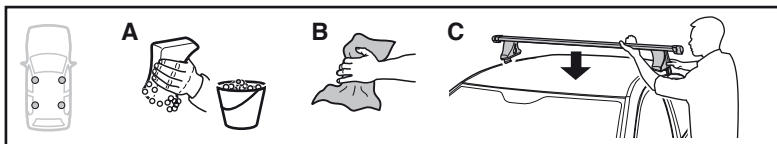 

	X mm	Y mm	X inch	Y inch
ALFA ROMEO 166, 4-dr Sedan, 98-03, 04-07	200 mm	650 mm	7 ⁷ / ₈ "	25 ⁵ / ₈ "

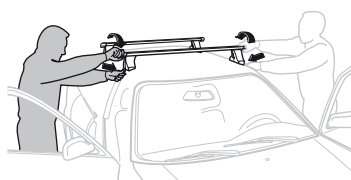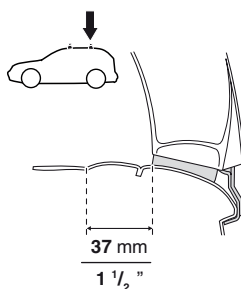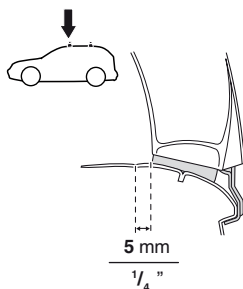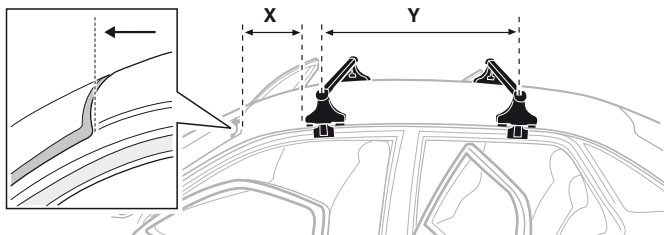    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta bagažníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754




480

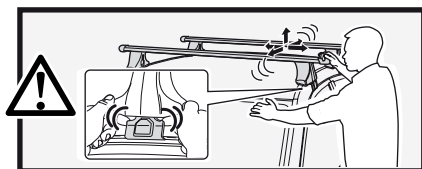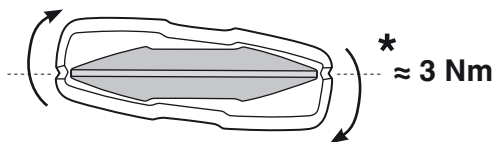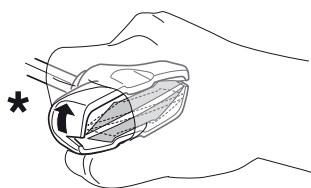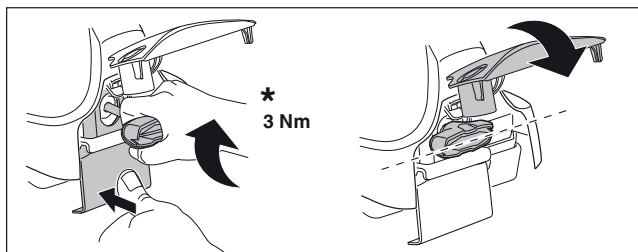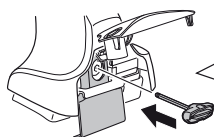




750

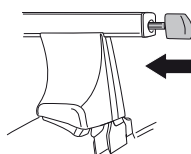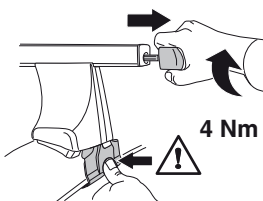  




i





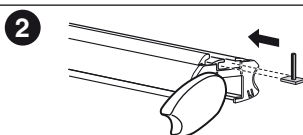 


i

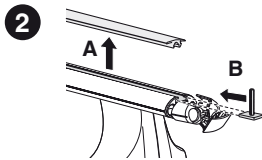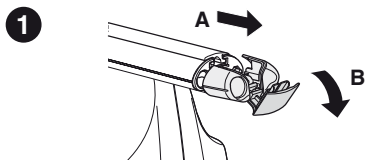   

i

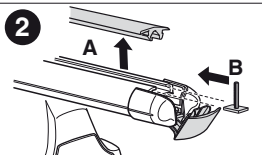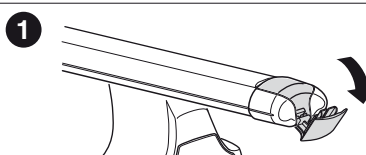   

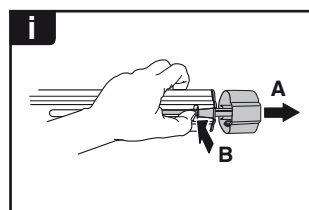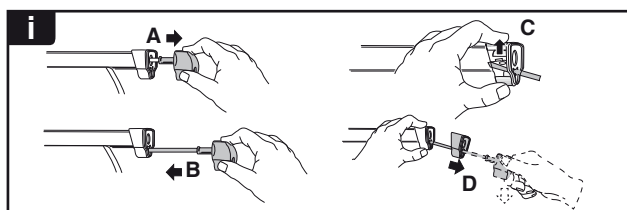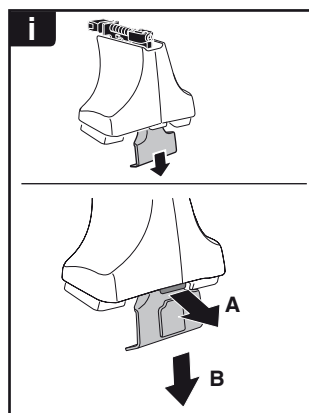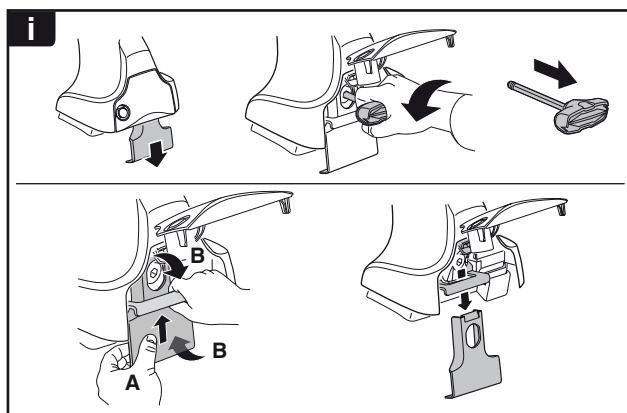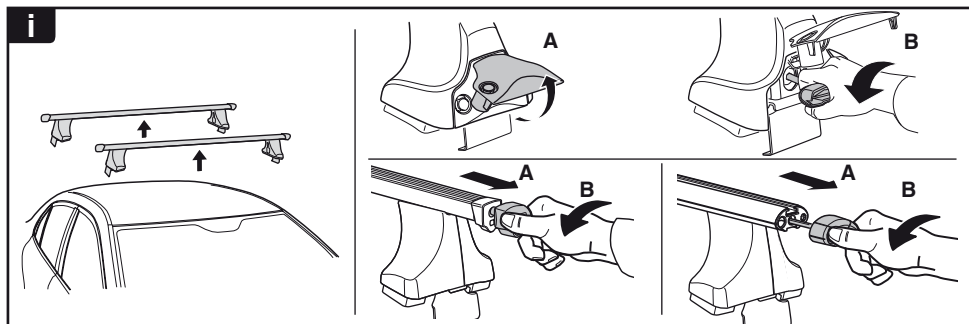     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		