



Kit 1152

LEXUS IS 200, 4-dr Sedan, 99-05


LEXUS IS 300, 4-dr Sedan, 00-05

TOYOTA Altezza, 4-dr Sedan, 99-05

 
 
**480R
754**

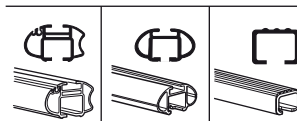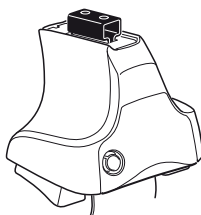

480

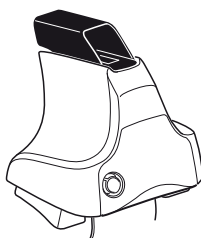 

750

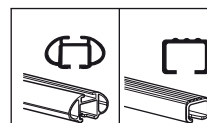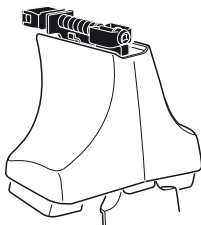  

480R/754

x1

x4

x4

480

x1

x4

 
 
x4

750

x1

x4


x4


   x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2
---	---	---	---	---



 **284** **x 2**





 
 **285** **x 2**

 **23** **x 2**

 
 **24** **x 2**

 **x 1**

    
 
Kit

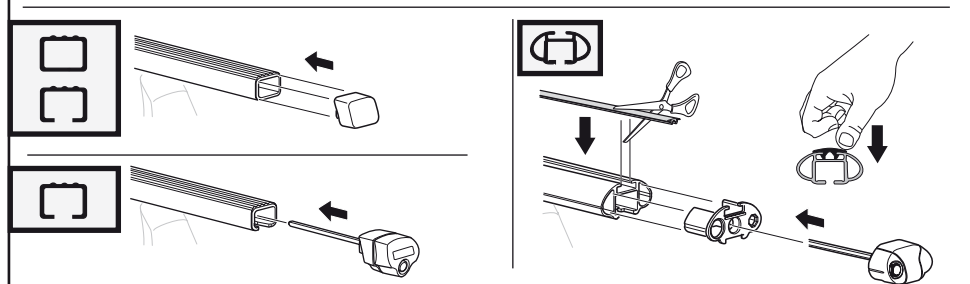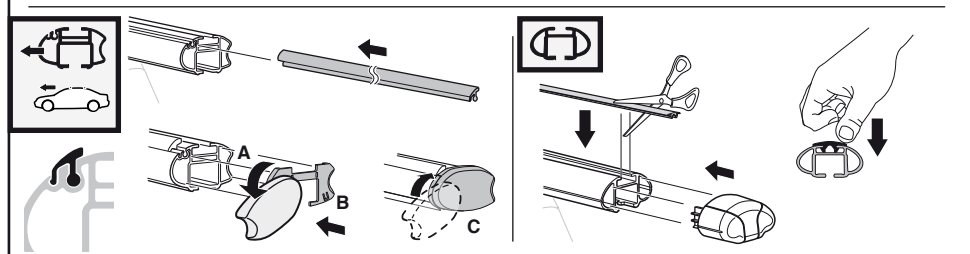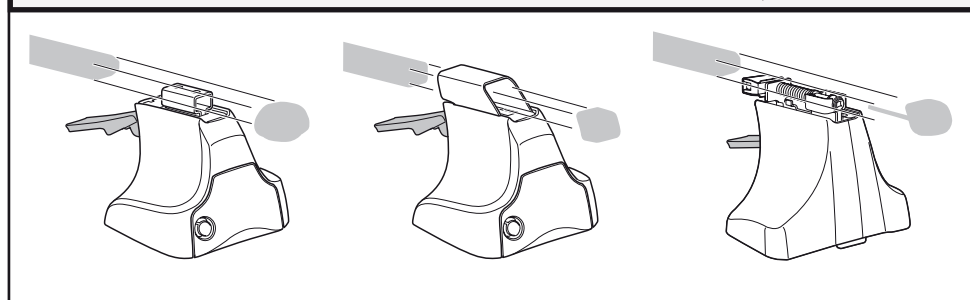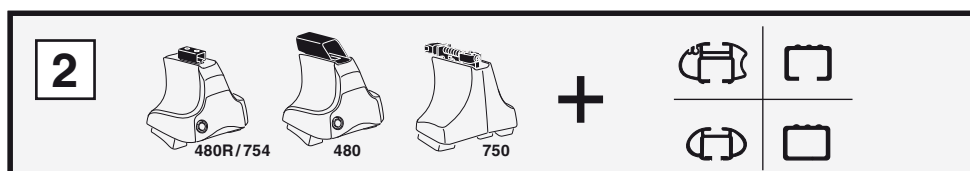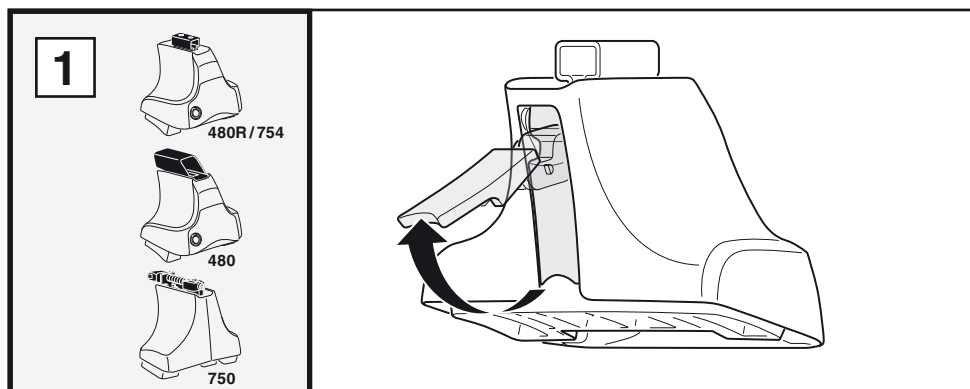

3

 


754

  

750

 1

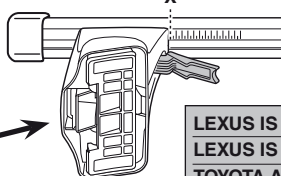


2




	X
LEXUS IS 200, 4-dr Sedan, 99-05	33
LEXUS IS 300, 4-dr Sedan, 00-05	33
TOYOTA Altezza, 4-dr Sedan, 99-05	33

 1

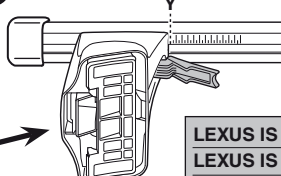

2

 

	Y
LEXUS IS 200, 4-dr Sedan, 99-05	31,5
LEXUS IS 300, 4-dr Sedan, 00-05	31,5
TOYOTA Altezza, 4-dr Sedan, 99-05	31,5

 


480R



480

1




2




	X inch	X mm
LEXUS IS 200, 4-dr Sedan, 99-05	38 ⁵ / ₈ "	981 mm
LEXUS IS 300, 4-dr Sedan, 00-05	38 ⁵ / ₈ "	981 mm
TOYOTA Altezza, 4-dr Sedan, 99-05	38 ⁵ / ₈ "	981 mm

 1



2

 














	Y inch	Y mm
LEXUS IS 200, 4-dr Sedan, 99-05	38 "	966 mm
LEXUS IS 300, 4-dr Sedan, 00-05	38 "	966 mm
TOYOTA Altezza, 4-dr Sedan, 99-05	38 "	966 mm

4


LEXUS IS 200, 4-dr Sedan, 99-05

LEXUS IS 300, 4-dr Sedan, 00-05

          
 
 
 
TOYOTA Altezza, 4-dr Sedan, 99-05

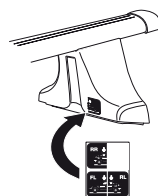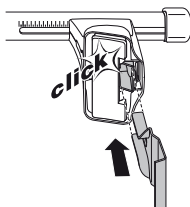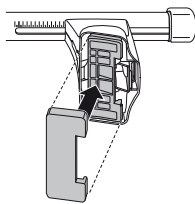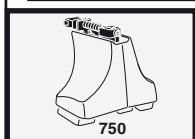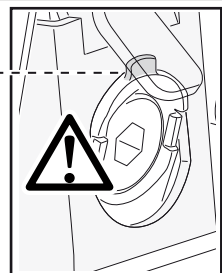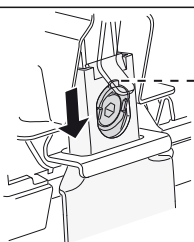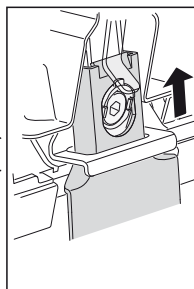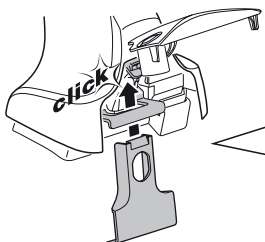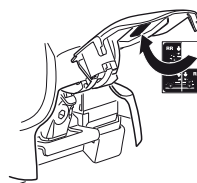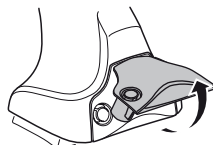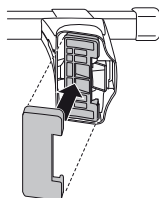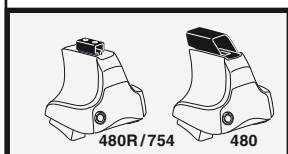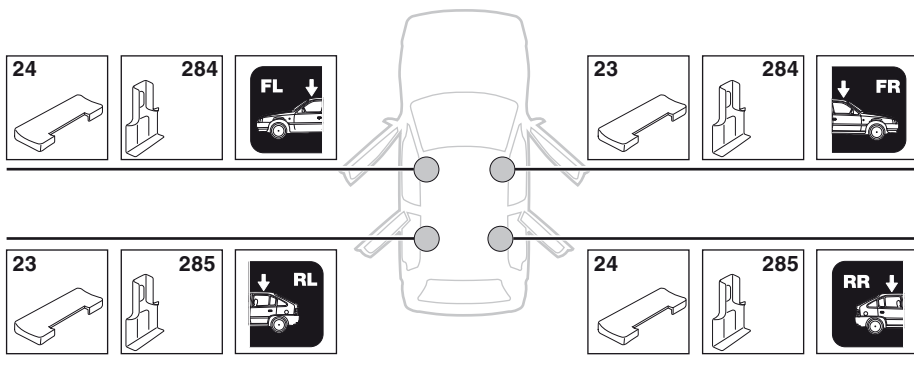

5

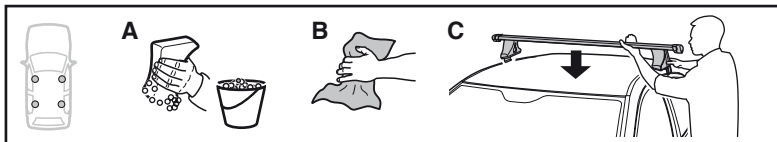 

	X mm	Y mm	X inch	Y inch
LEXUS IS 200, 4-dr Sedan, 99-05	170 mm	700 mm	6 3/4"	27 1/2"
LEXUS IS 300, 4-dr Sedan, 00-05	170 mm	700 mm	6 3/4"	27 1/2"
TOYOTA Altezza, 4-dr Sedan, 99-05	170 mm	700 mm	6 3/4"	27 1/2"

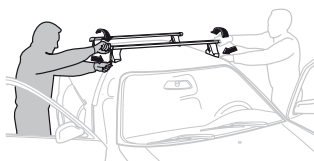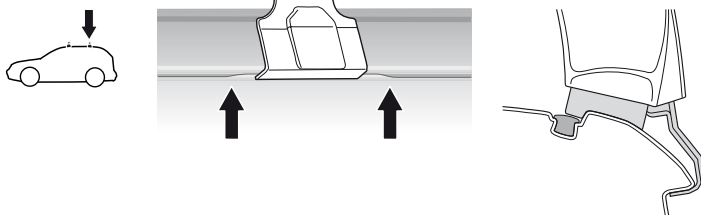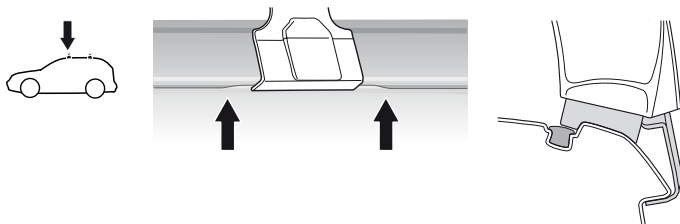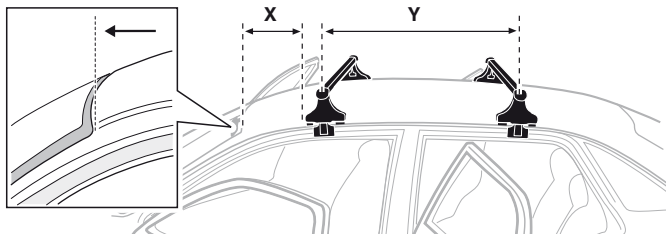    

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egy mástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

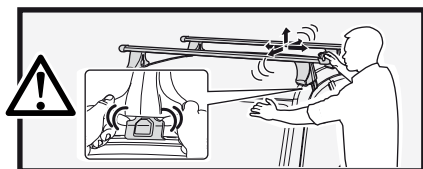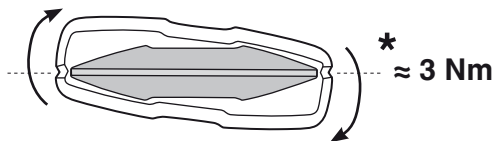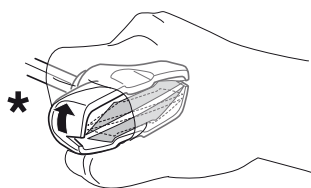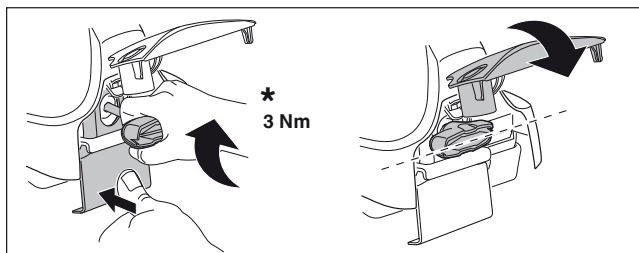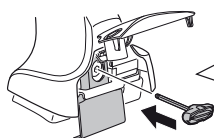

750

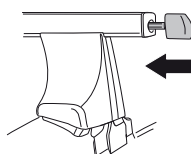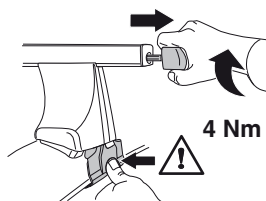  


i




1



 
2

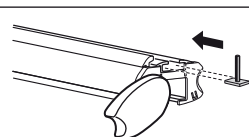


i

 

1

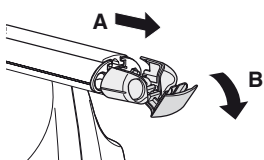 


2

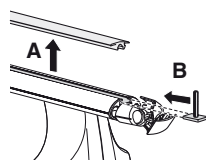 


i








 1

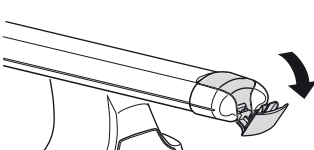

2

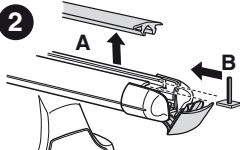 

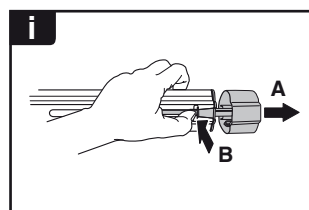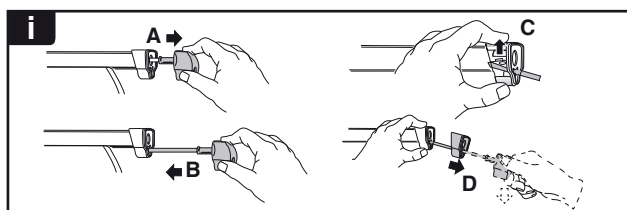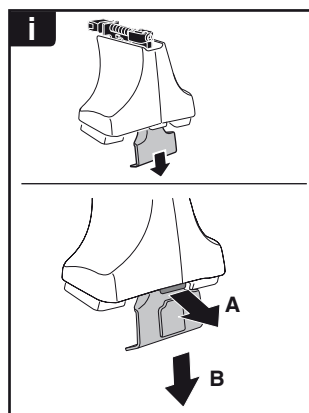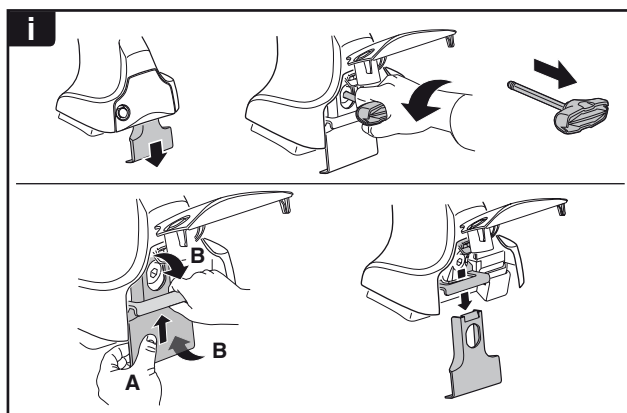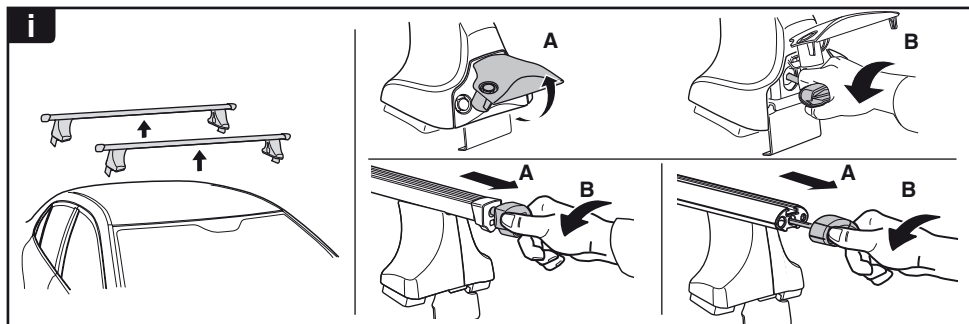     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		