 
 


Kit 1202

 
 
HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08*

* Without roof railing



**480R
754**

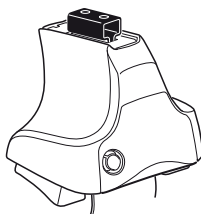

480

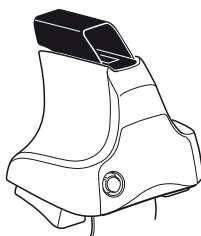

750

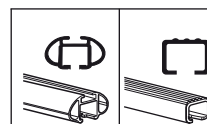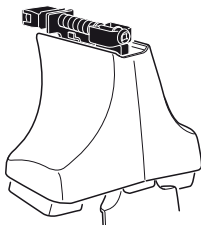  

THULE[®]
SWEDEN

ISO 11154-E

xx kg
xx lbs

+

7 kg
15,4 lbs

=

Max.
75kg

Max.
165 lbs

80 km/h
50 Mph
130 km/h
80 Mph
40 km/h
25 Mph
0
km/h
Mph

+

instructions

Kit XXXX

THULE

x1

x4

x4

x4

480R/754

x1

x4

x4

x4

480

x1

x4

x4

750

x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x4	x4	x4	x4	x4

370

x4

15

x4

RR

 
 
 
 
 
FR

FL




RL

x1



Kit

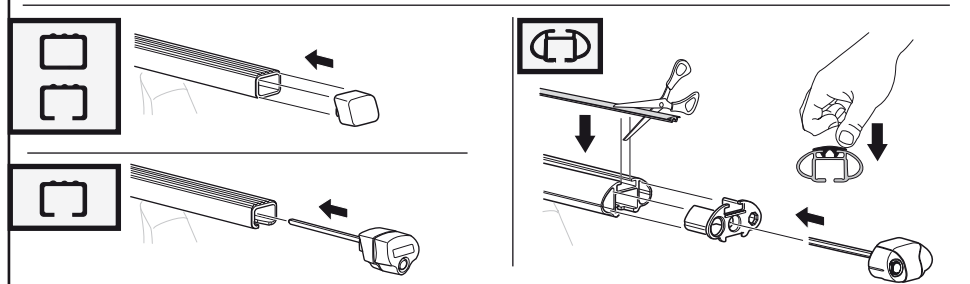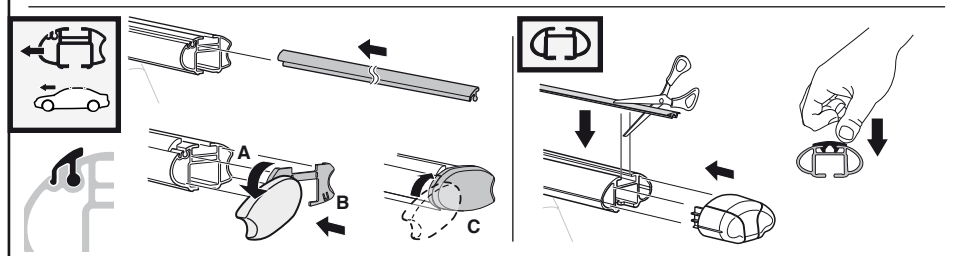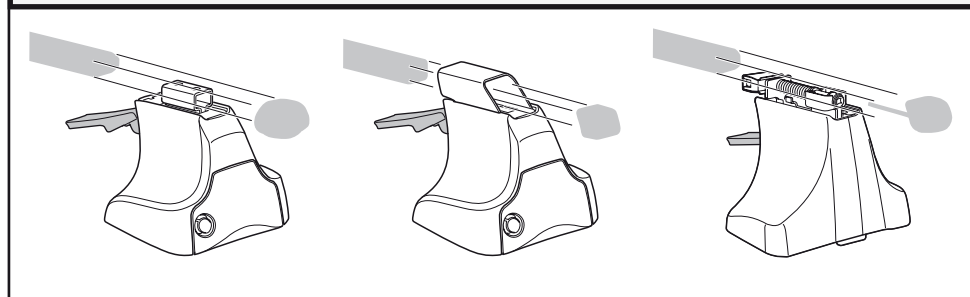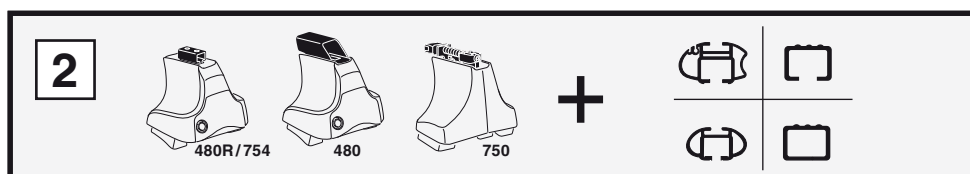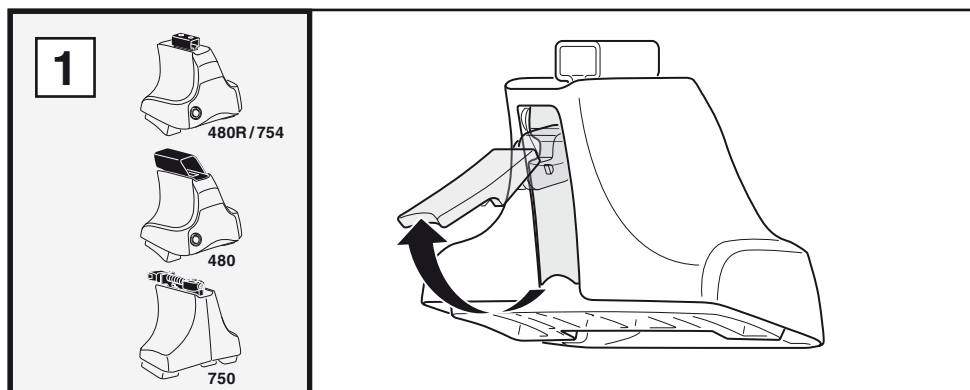

3

   

1

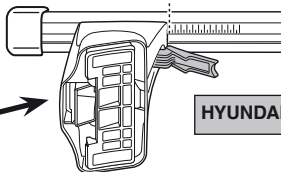  

2

 


HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08

X

45

1

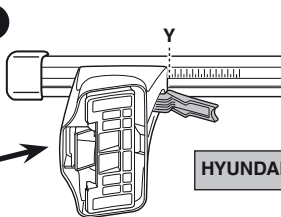

2



HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08

Y

43

 


480R




480

1



X inch/mm

 2



HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08

 
X inch

X mm

43 $\frac{3}{8}$ "


1101 mm

1



Y inch/mm

 2



HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08

Y inch

 
 
 
 
 
 
 
 
 
 
 
 
 
Y mm

42 $\frac{1}{2}$ "


1081 mm

4




HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08

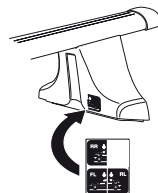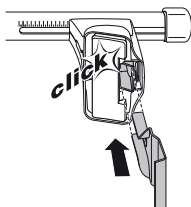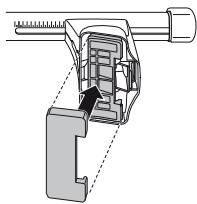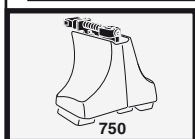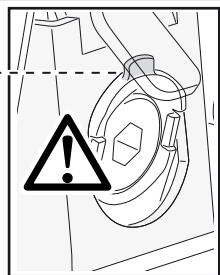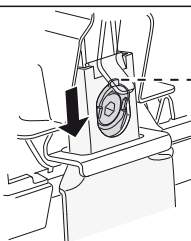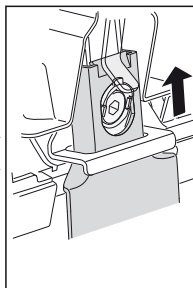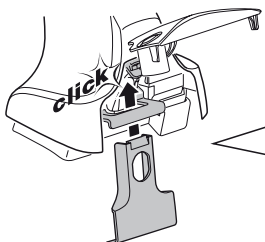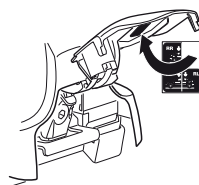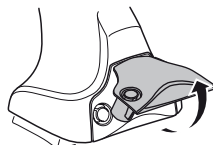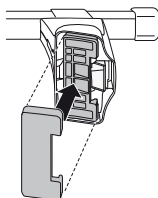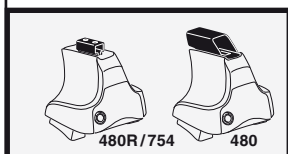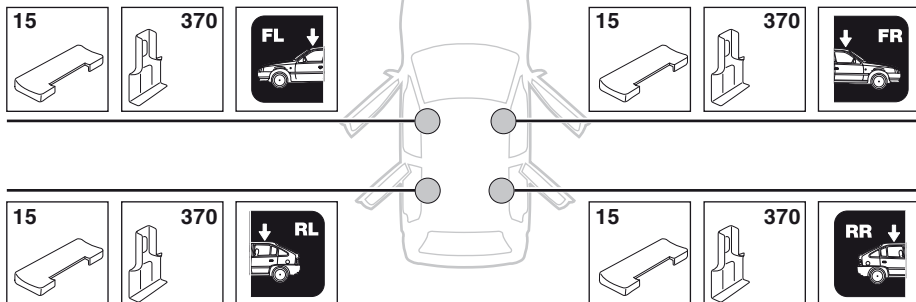

5

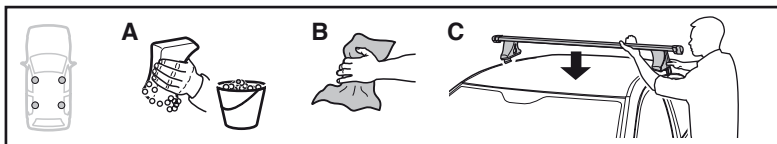 

	X mm	Y mm	X inch	Y inch
HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08	370 mm	700 mm	14 ⁵ / ₈ "	27 ¹ / ₂ "

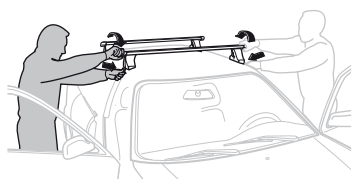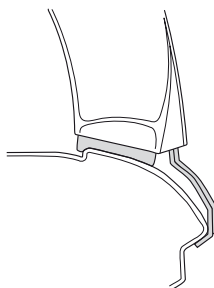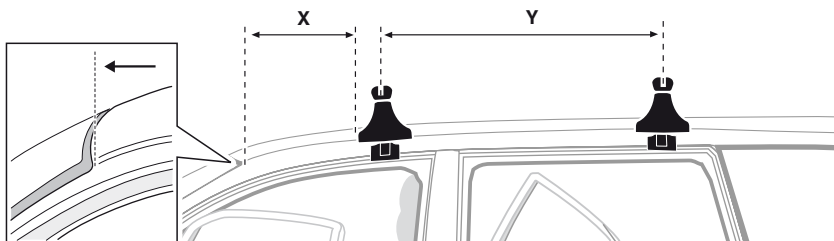   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte bagážníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól fűggetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

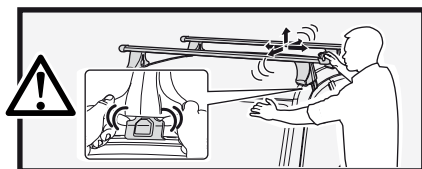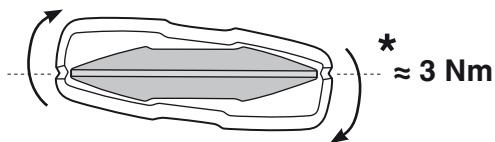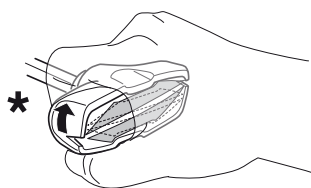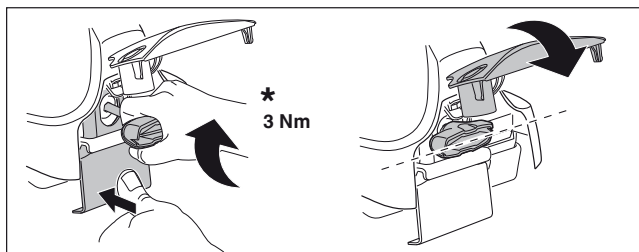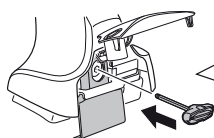

750

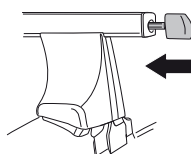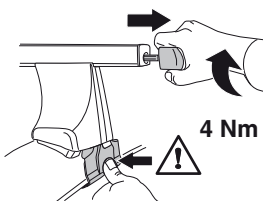  


i




1



 
2

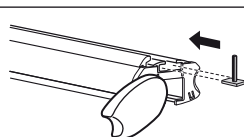


i

 


1

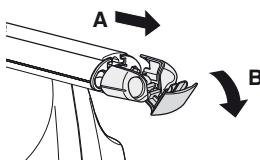 


2

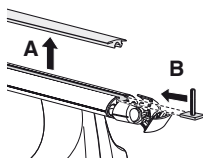 


i





 


1

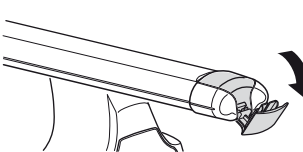 

2

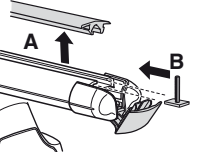 

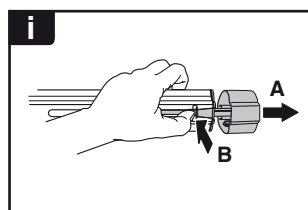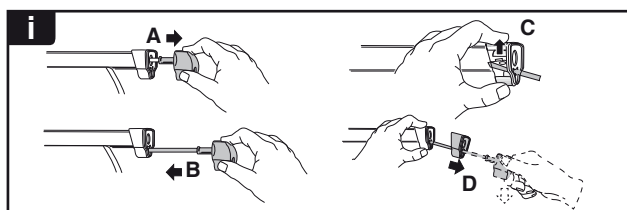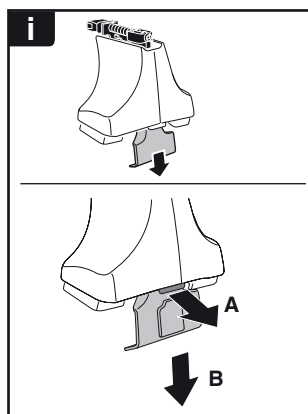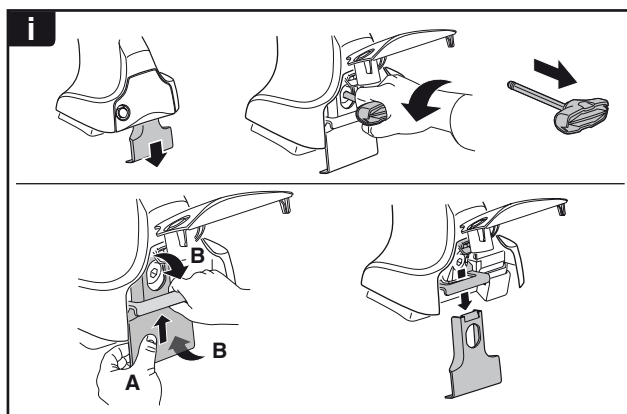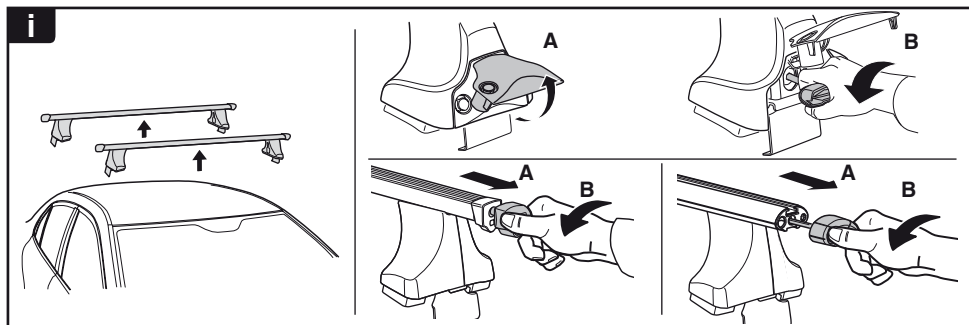     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA