



Kit 1231

TOYOTA Avensis Verso, 5-dr MPV, 01-06


TOYOTA Ipsum, 5-dr MPV, 01-06

TOYOTA PicNic, 5-dr MPV, 01-06

 
 
**480R
754**

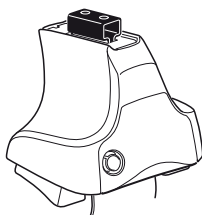

480




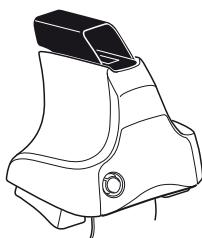 







750

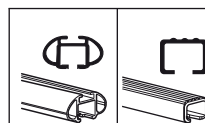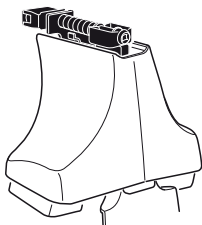  




THULE[®]
SWEDEN

         ISO 11154-E

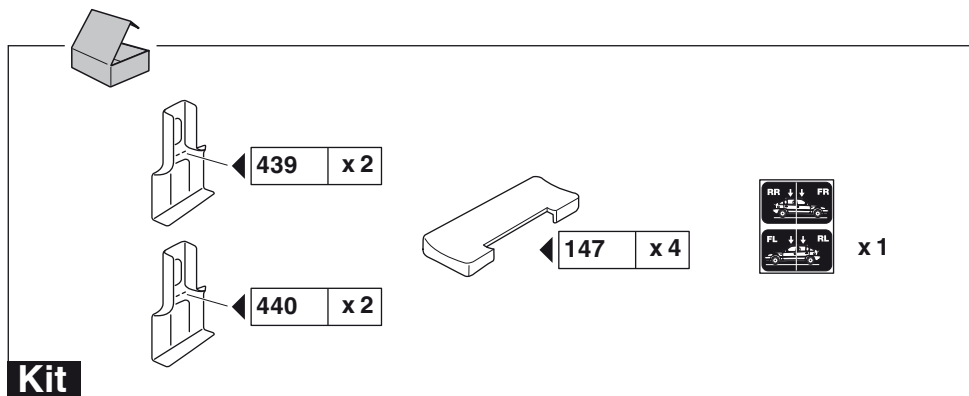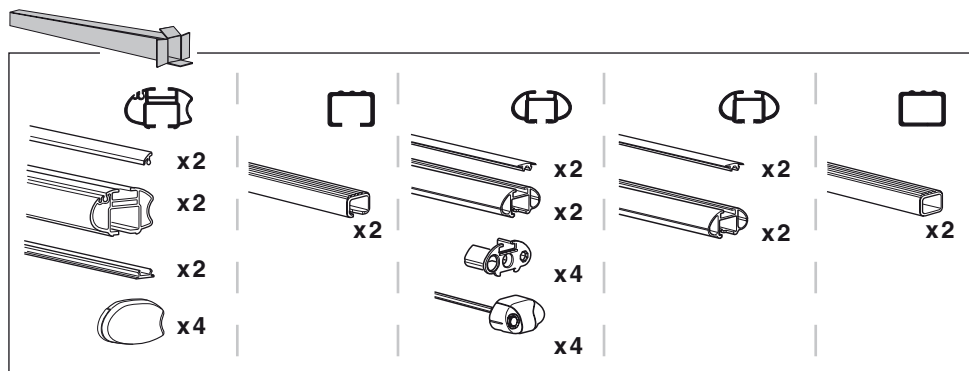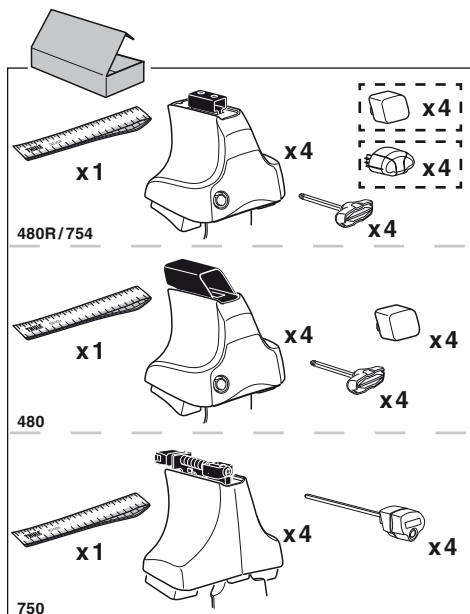
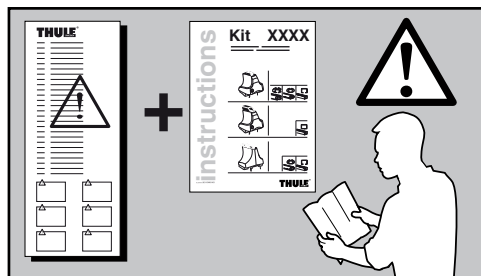


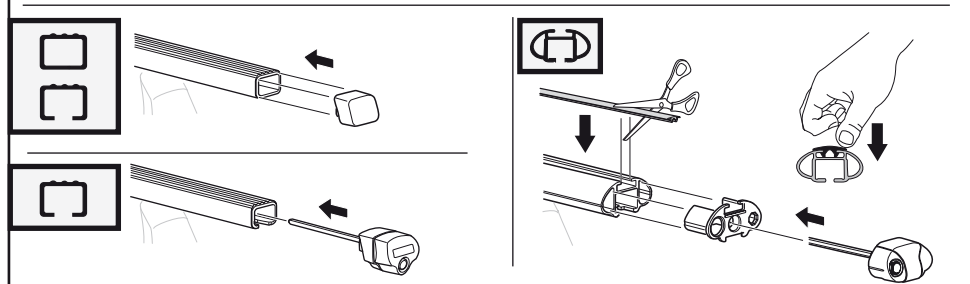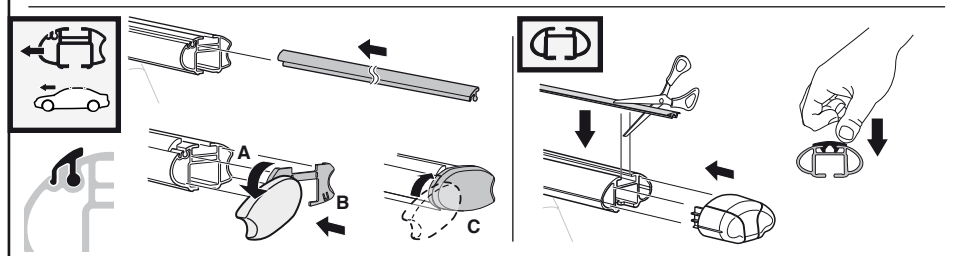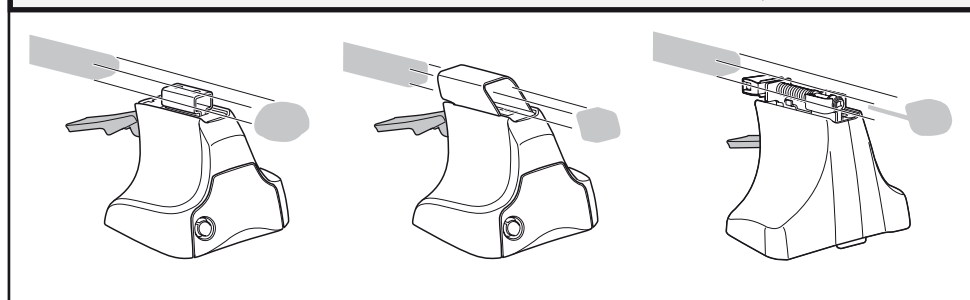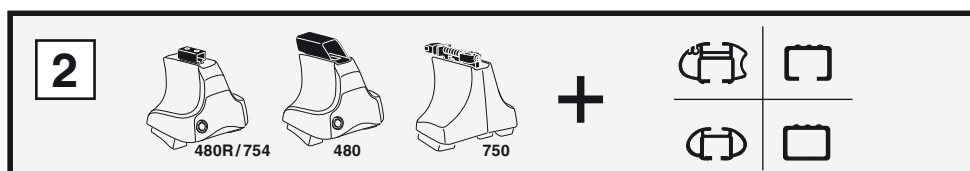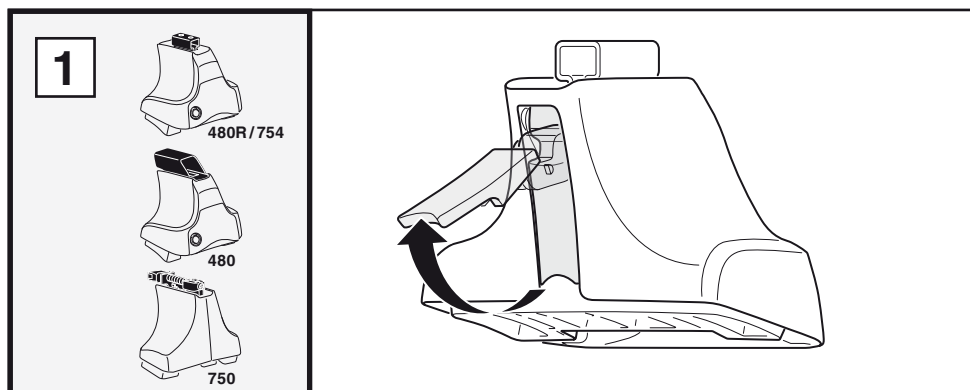


3

   

1

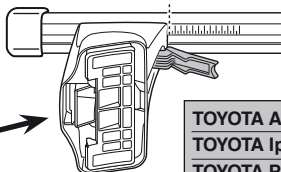  


2

 


X	
TOYOTA Avensis Verso, 5-dr MPV, 01-06	38,5
TOYOTA Ipsum, 5-dr MPV, 01-06	38,5
TOYOTA PicNic, 5-dr MPV, 01-06	38,5

 1

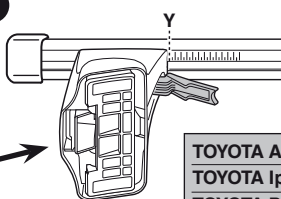

2

 

Y	
TOYOTA Avensis Verso, 5-dr MPV, 01-06	36,5
TOYOTA Ipsum, 5-dr MPV, 01-06	36,5
TOYOTA PicNic, 5-dr MPV, 01-06	36,5

 


480R




480

1




2

 


	X inch	X mm
TOYOTA Avensis Verso, 5-dr MPV, 01-06	40 ³ / ₄ "	1036 mm
TOYOTA Ipsum, 5-dr MPV, 01-06	40 ³ / ₄ "	1036 mm
TOYOTA PicNic, 5-dr MPV, 01-06	40 ³ / ₄ "	1036 mm

 1



2

 








	Y inch	Y mm
TOYOTA Avensis Verso, 5-dr MPV, 01-06	40 "	1016 mm
TOYOTA Ipsum, 5-dr MPV, 01-06	40 "	1016 mm
TOYOTA PicNic, 5-dr MPV, 01-06	40 "	1016 mm

4


TOYOTA Avensis Verso, 5-dr MPV, 01-06

TOYOTA Ipsum, 5-dr MPV, 01-06

     
 
 
TOYOTA PicNic, 5-dr MPV, 01-06

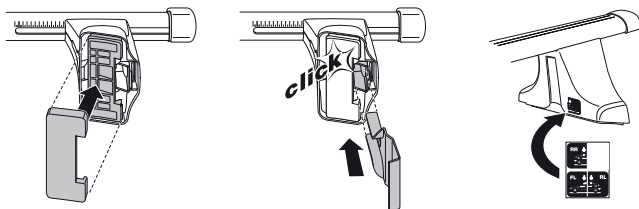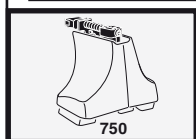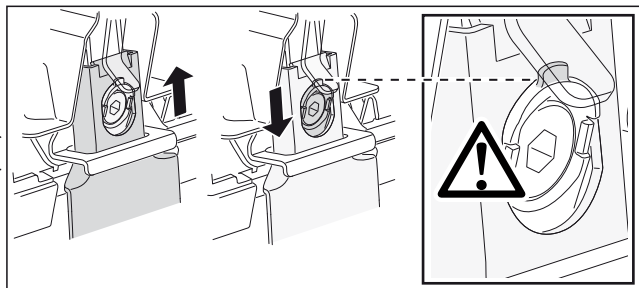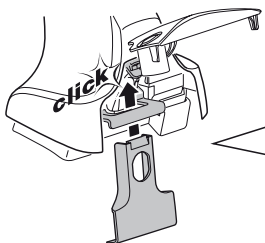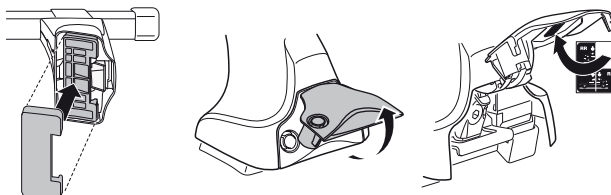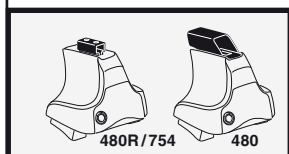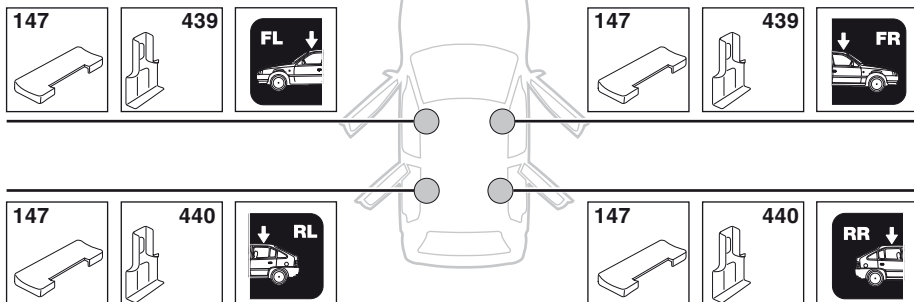

5

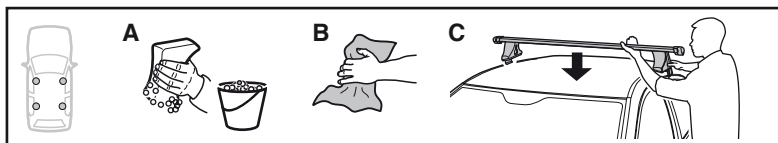 

	X mm	Y mm	X inch	Y inch
TOYOTA Avensis Verso, 5-dr MPV, 01-06	395 mm	714 mm	15 1/2"	28 1/8"
TOYOTA Ipsum, 5-dr MPV, 01-06	395 mm	714 mm	15 1/2"	28 1/8"
TOYOTA PicNic, 5-dr MPV, 01-06	395 mm	714 mm	15 1/2"	28 1/8"

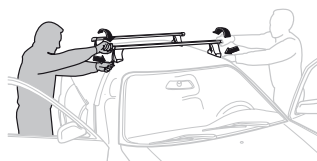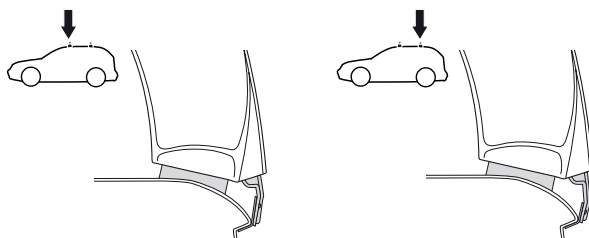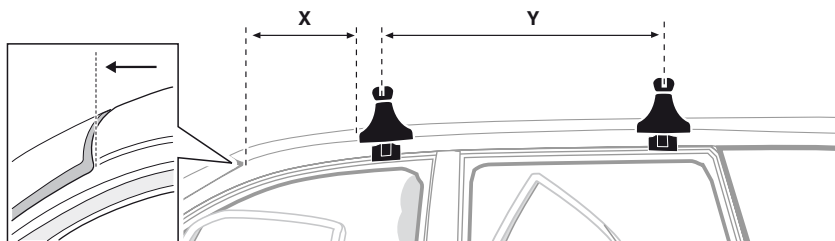   


GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egyarástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้นในแบบสลับ

 
6







480R/754








 480

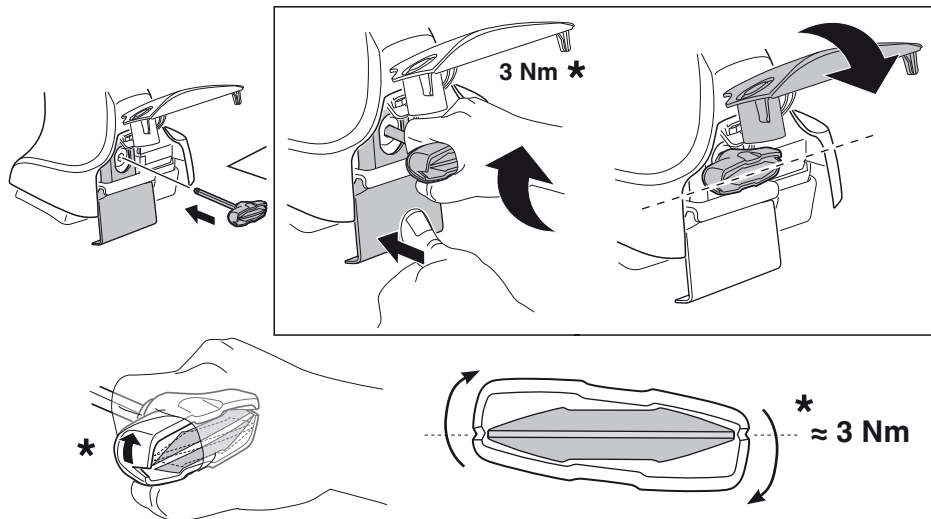

750

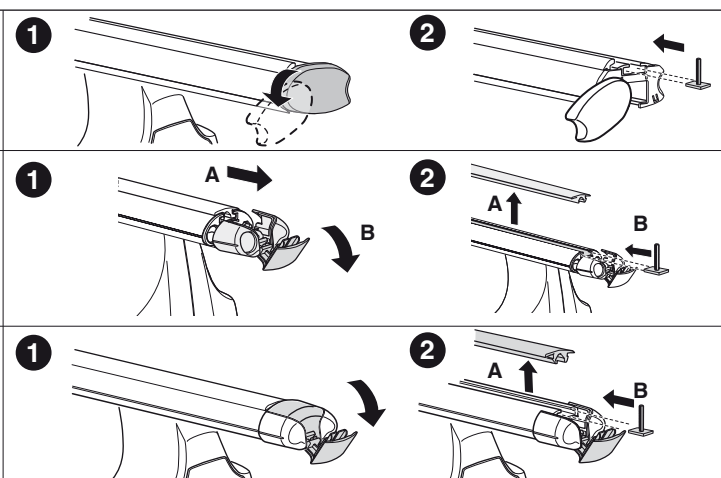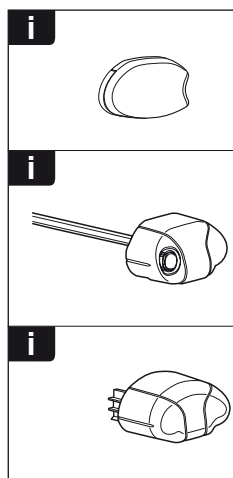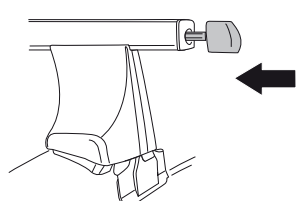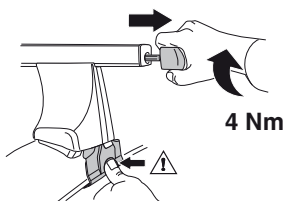    

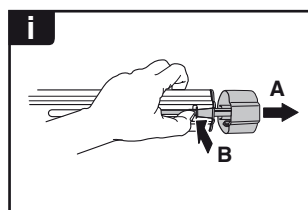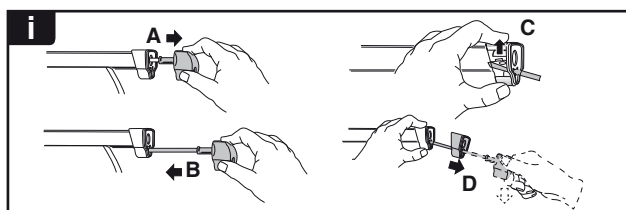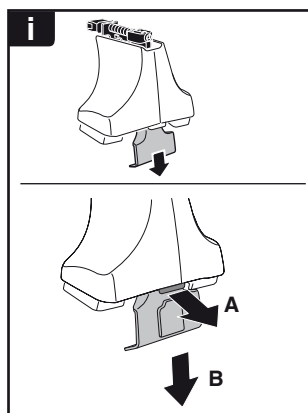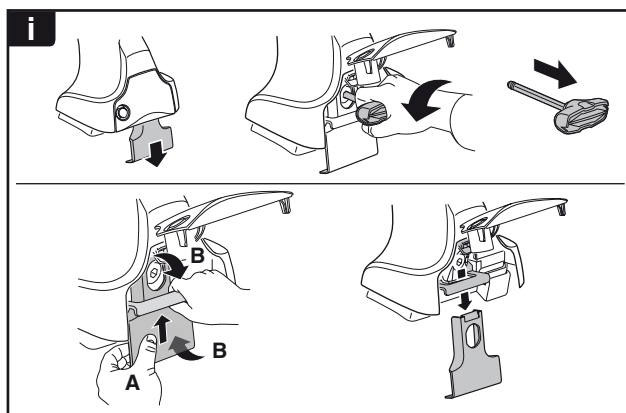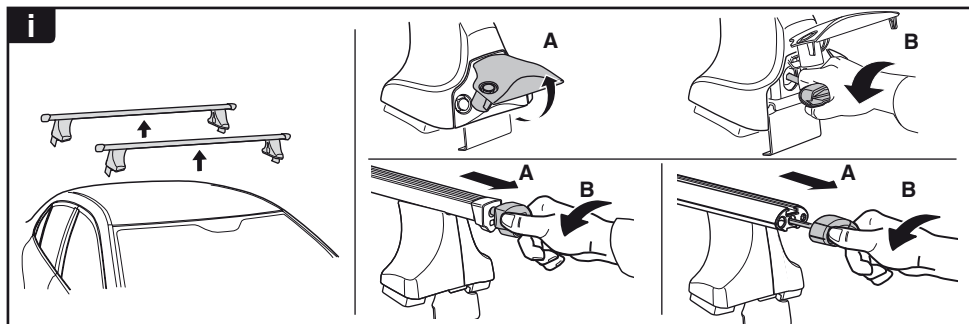     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA