 
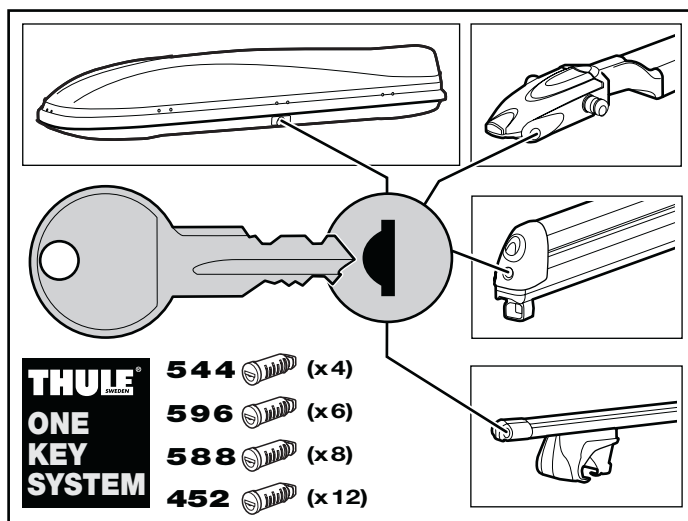 
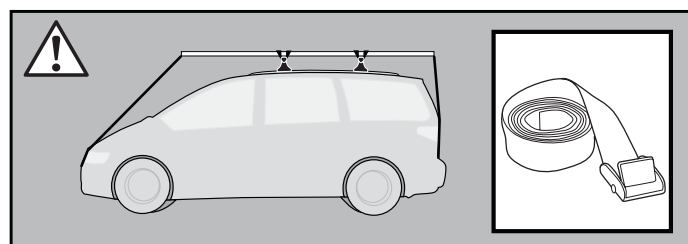 
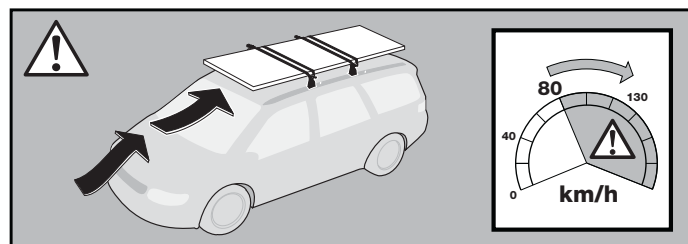 


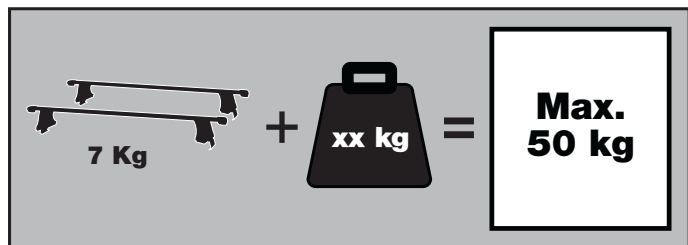

THULE®

SWEDEN

- GB Fitting instructions
- D Montageanleitung
- F Instructions de montage
- NL Montage-instructies
- I Istruzioni per il montaggio
- E Instrucciones de montaje
- PT Instruções de Montagem
- S Monteringsanvisning
- FIN Asennusohje
- EST Paigaldusjuhend
- LAT Stiprināšanas instrukcija
- LIT Pritvirtinimo instrukcijos
- PL Instrukcja montażu
- RU Инструкции по установке
- CZ Návod na montáž
- SK Návod na montáž
- SLO Navodila za pritrjevanje
- HR Uputa za sastavljanje
- HU A felszerelés módja
- GR Οδηγίες συναρμολόγησης
- TR Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

MITSUBISHI Airtrek, 5-dr SUV, 01-05
MITSUBISHI Outlander, 5-dr SUV, 01-05

RAPID SYSTEM

Kit 1259



Follow me...

 
 
 
 
 
 
 
 
THULE SWEDEN
 Box 69, 330 33 Hillerstorp, SWEDEN
 www.thule.com

842•A/501-1259-03












THULE



GB Security regulations
D Sicherheits-Vorschriften
F Instructions importantes
NL Veiligheidsvoorschriften
I Norme di sicurezza
E Regles de securitat
PT Normas de seguranca
S Sakerhetsfreskrifter
FIN Turvallisuusohjeet
EST Ohutusnõuanded
LAT Drošības noteikumi
LIT Saugumo taisyklės
PL Warunki bezpieczeństwa
RU Инструкции по безопасности
CZ Návod na montáž
SK Bezpečnostné predpisy
SLO Varostni predpisi
HR Pravila sigurnosti
HU Biztonsági előírások
GR Κανονισμοί Ασφαλείας
TR Güvenlik kuralları
中文 安全规范
印地語 安全规范
ไทย ระเบียบการติดตั้งบนยานพาหนะ

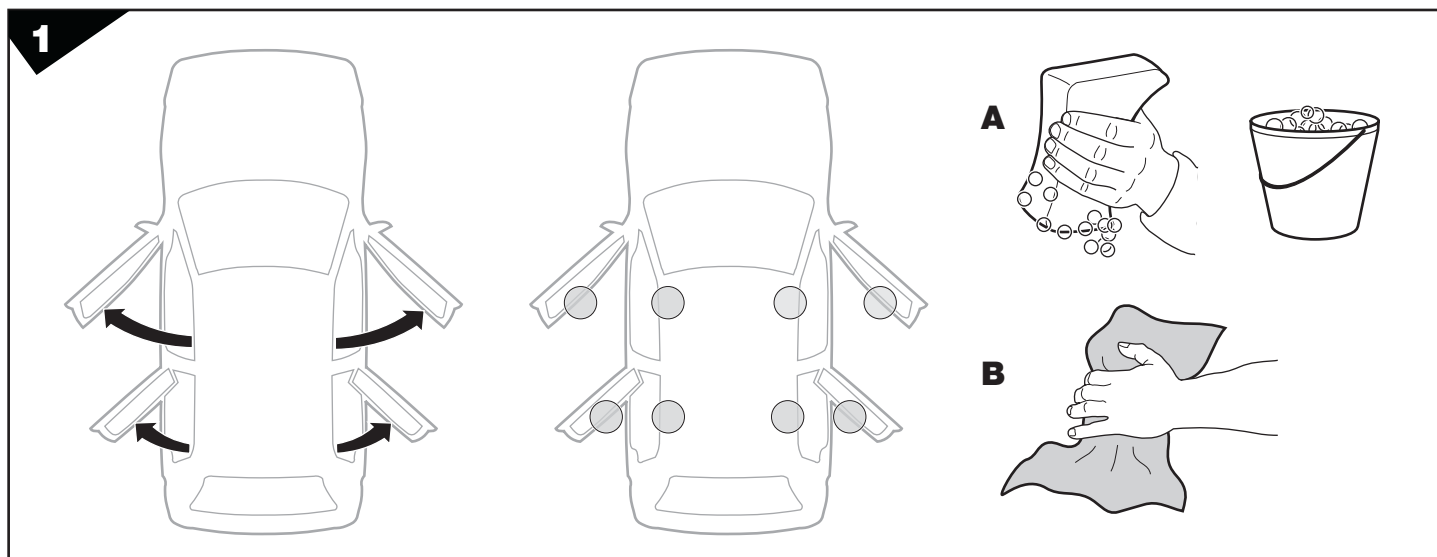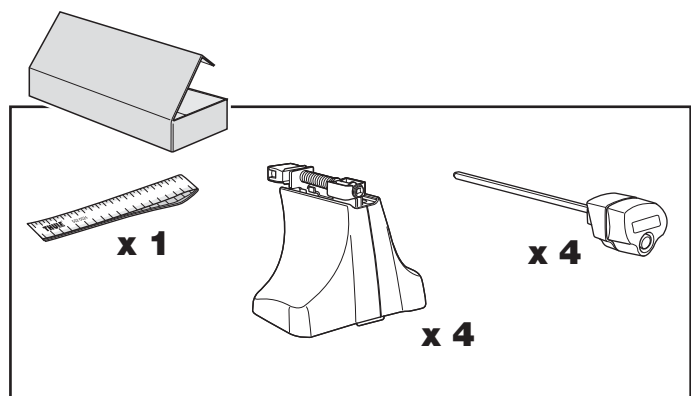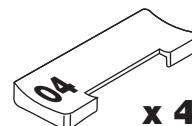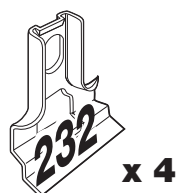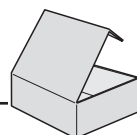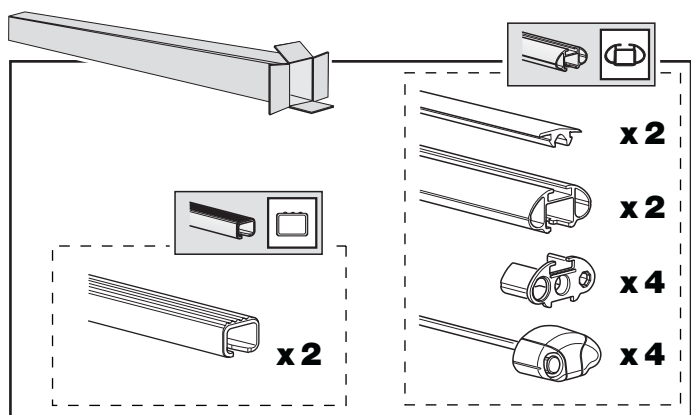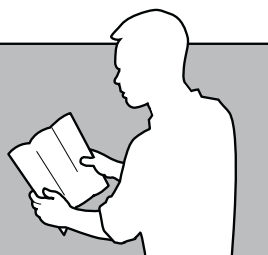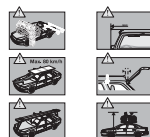



2

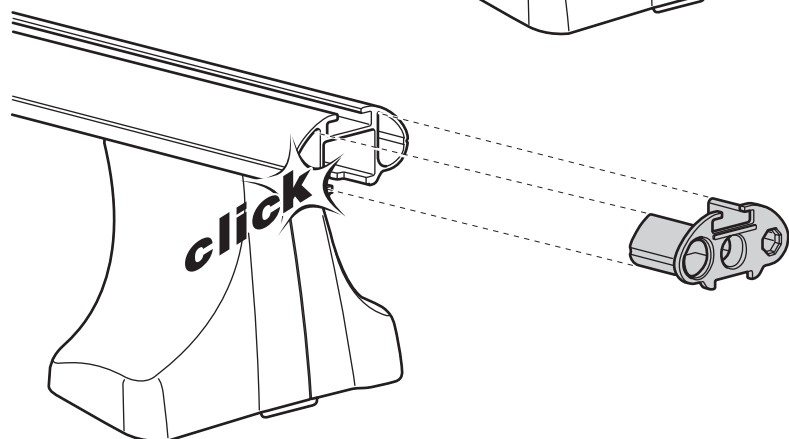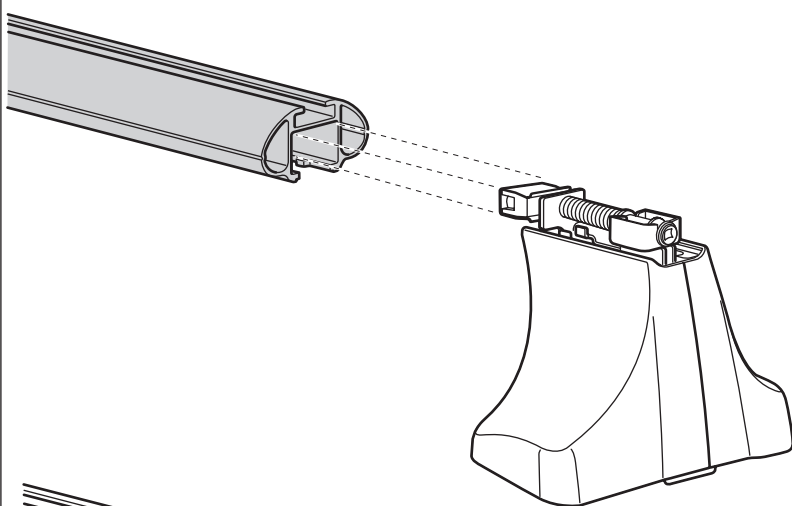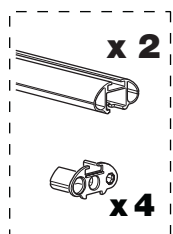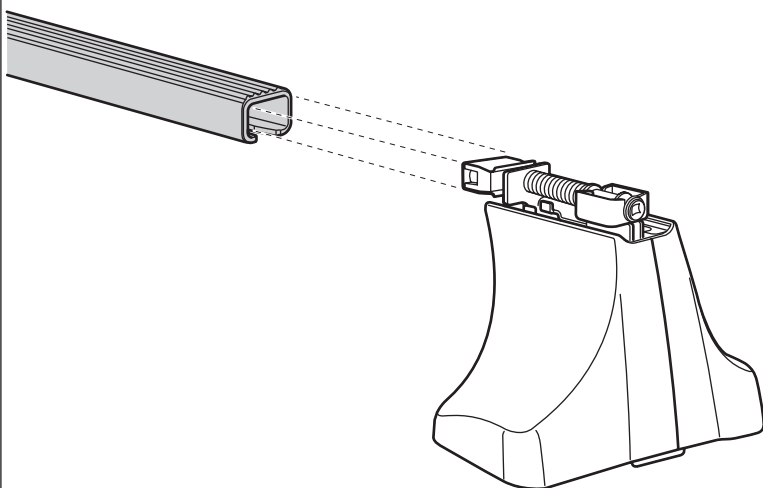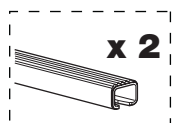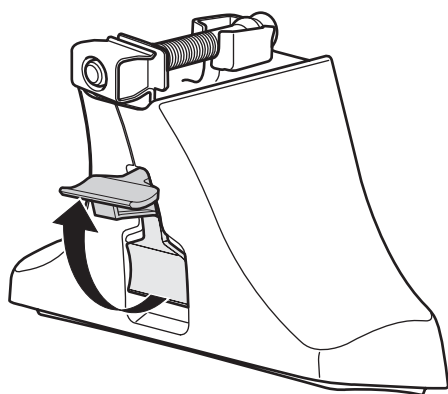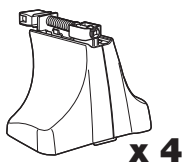         

3






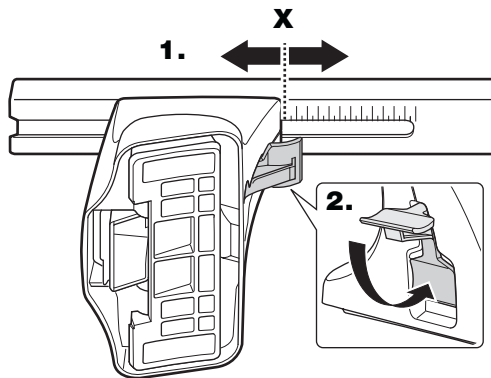 
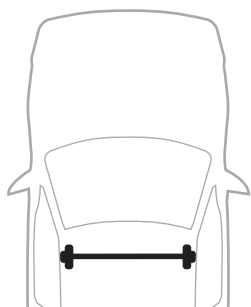 





	X
MITSUBISHI Airtrek, 5-dr SUV, 01-05	39,5
MITSUBISHI Outlander, 5-dr SUV, 01-05	39,5

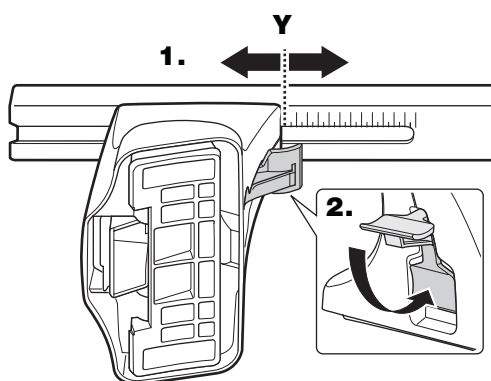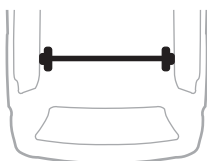  


	Y
MITSUBISHI Airtrek, 5-dr SUV, 01-05	36,5
MITSUBISHI Outlander, 5-dr SUV, 01-05	36,5

          
4

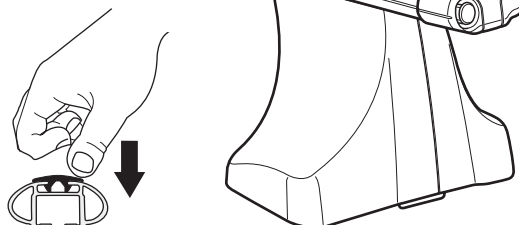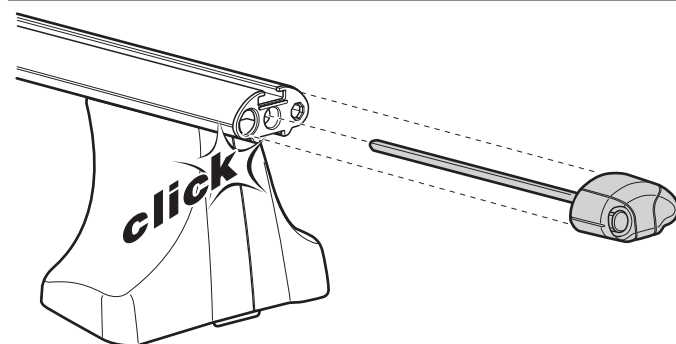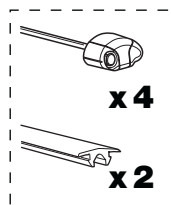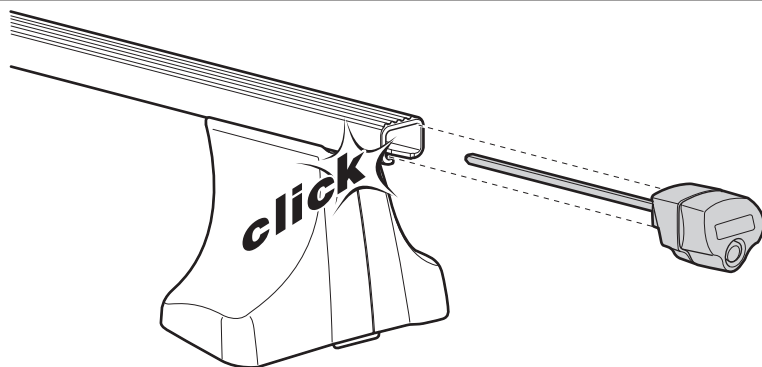

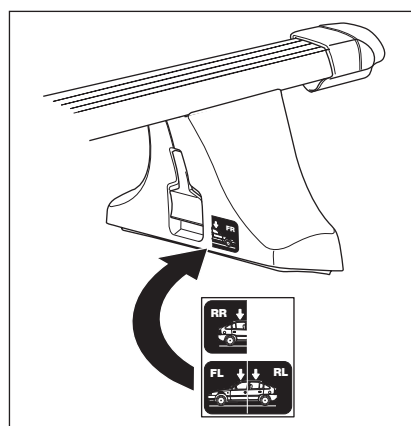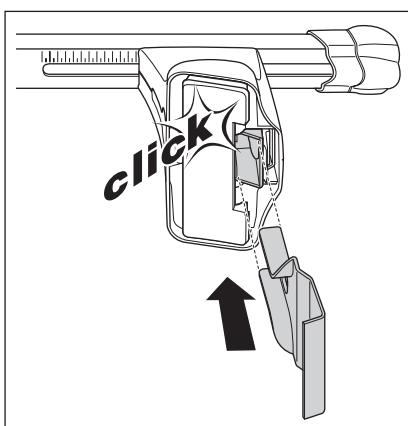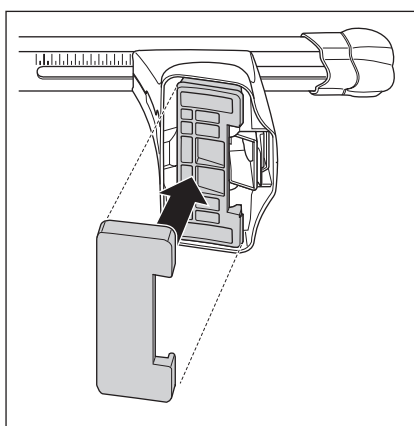


 
 
MITSUBISHI Airtrek, 5-dr SUV, 01-05
MITSUBISHI Outlander, 5-dr SUV, 01-05

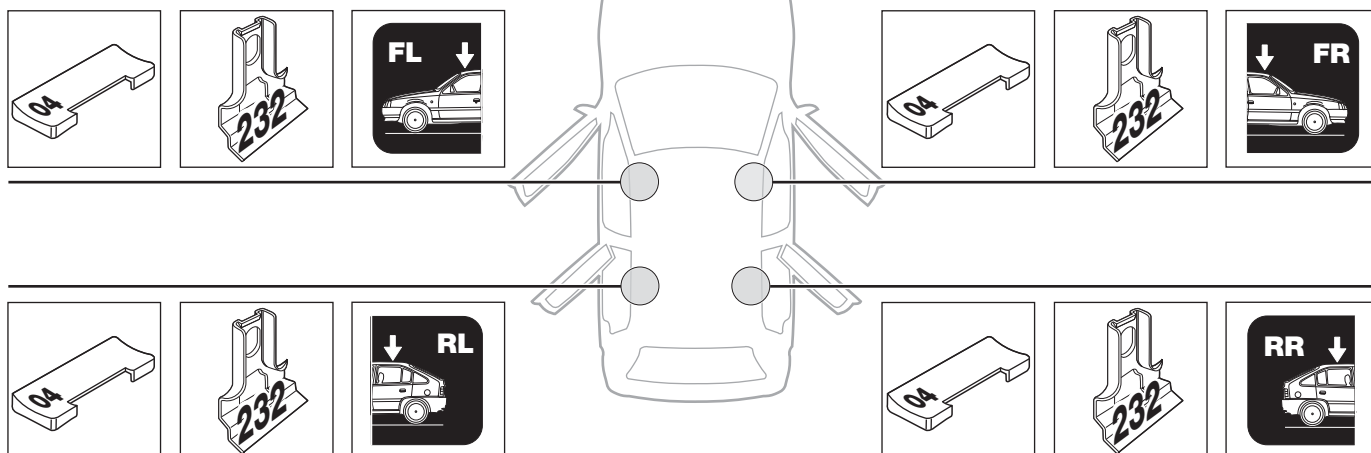

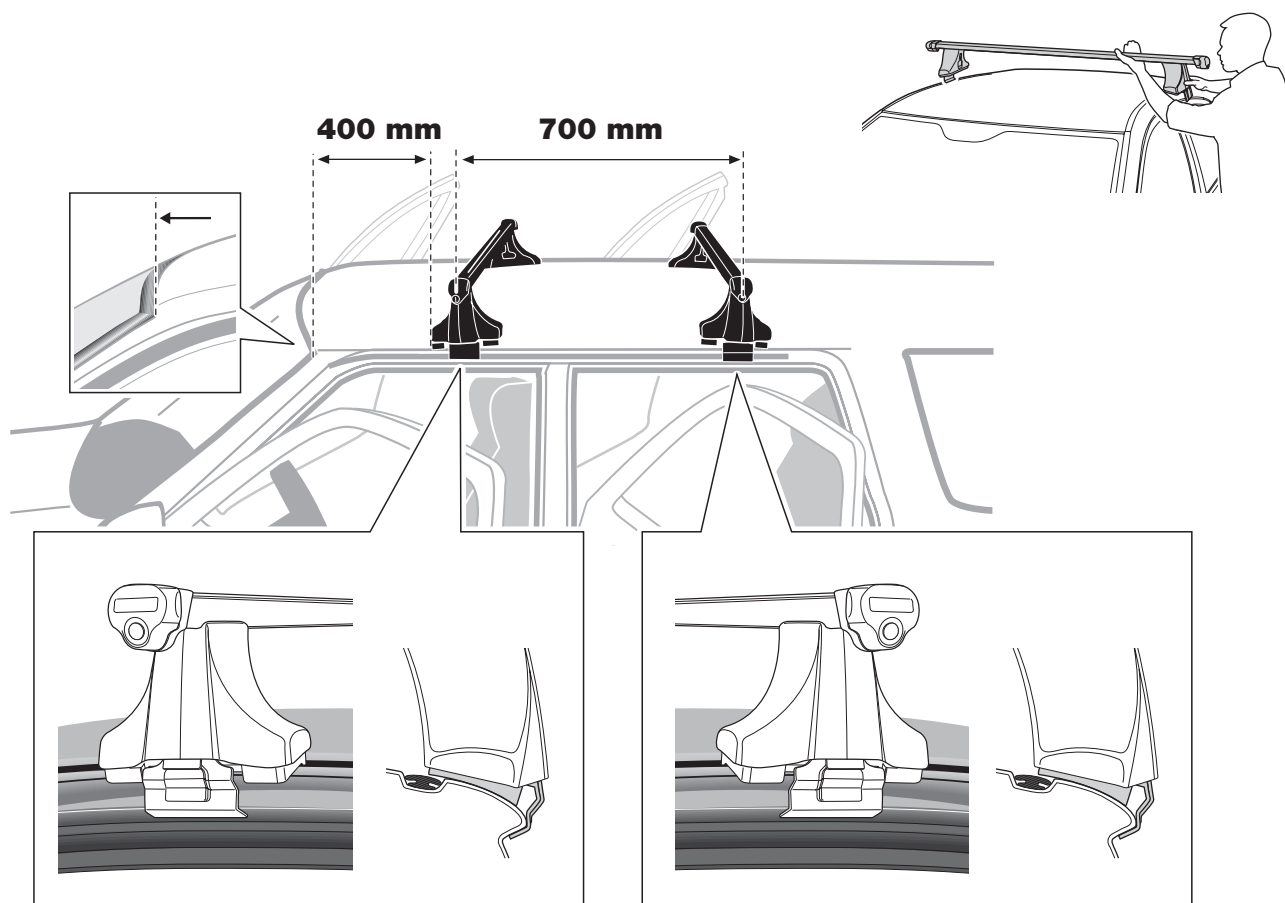

- GB** Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Serrare alternativamente
E Alternare il serraggio delle viti
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciet pamišus
LIT Užsukinėkite pakaitomis

   - PL** Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
CZ Pokrétla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ

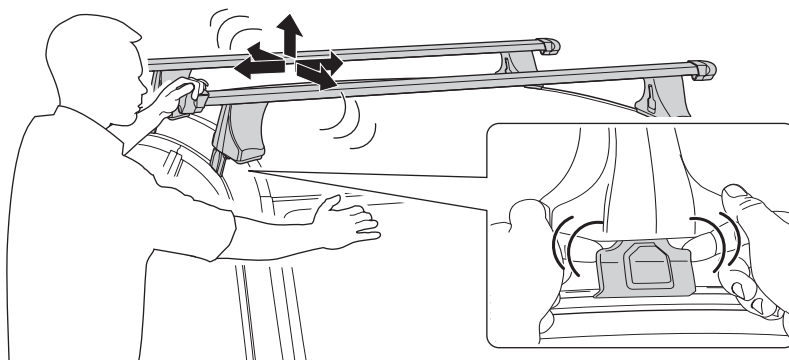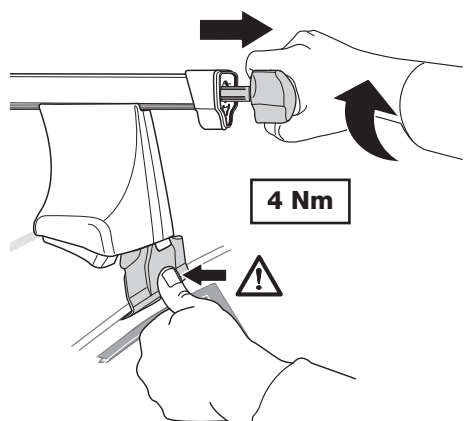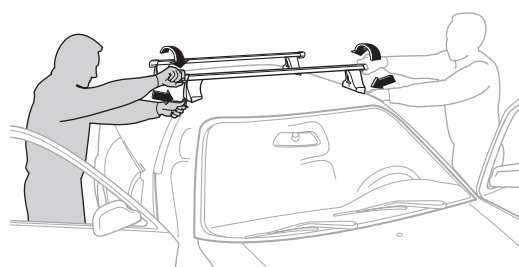




GB Removal
D Demontieren
F Démontage
NL Demontage
I Rimozione

E Desmontaje
PT Remoção
S Demonerer
FIN Irrotus
EST Eemaldamine




LAT Noņemšana
LIT Nuėmimas
PL Wymontowywanie
RU Снятие
CZ Odmontování

SK Demontáž
SLO Odstranjevanje
HR Uklanjanje
HU Leszerelés
GR Αφαίρεση

   TR Sökme
中文 拆除
日本語 取り外し
한국어 분리
ไทย การถอด

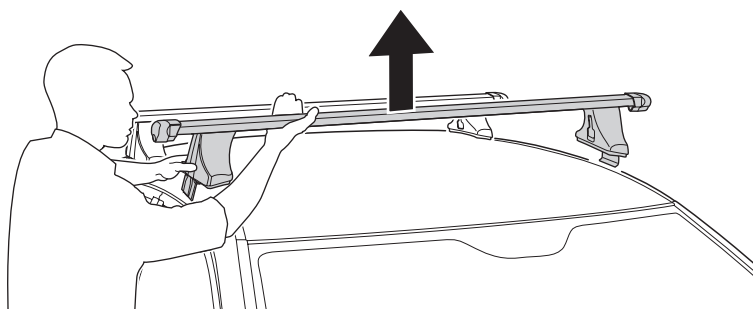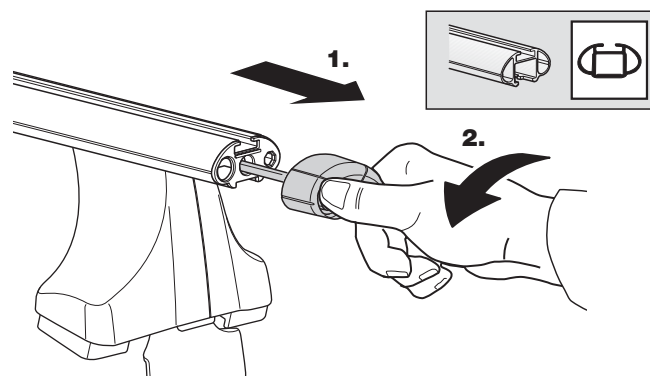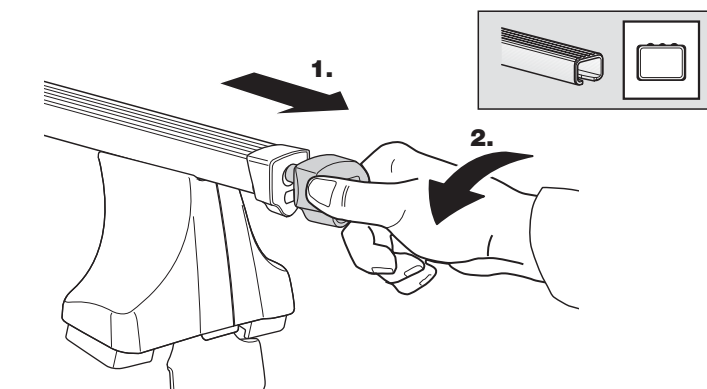

Fit Tips!

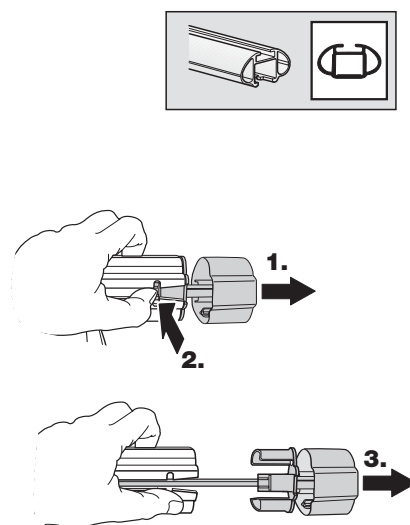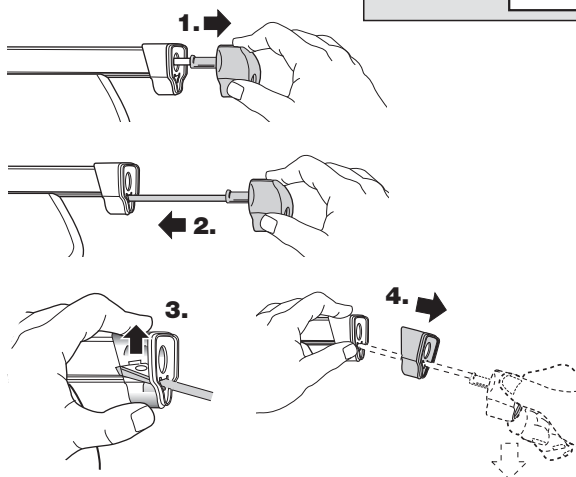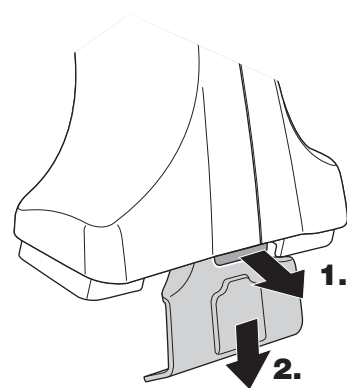   

THULE
ONE
KEY
SYSTEM

