 
 




Kit 1410

PROTON Savvy, 5-dr Hatchback, 05–



480R
754

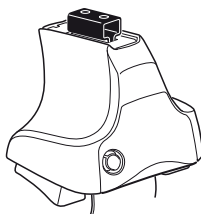

  
480

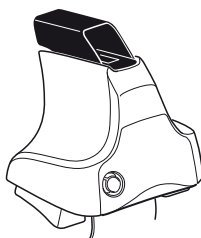


750

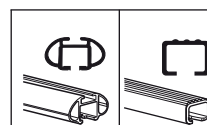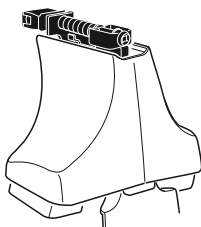  


 
 

 $\begin{matrix} \text{xx kg} \\ \text{xx lbs} \end{matrix} + \begin{matrix} \text{7 kg} \\ \text{15,4 lbs} \end{matrix} = \begin{matrix} \text{Max.} \\ \text{60kg} \\ \text{Max.} \\ \text{132 lbs} \end{matrix}$






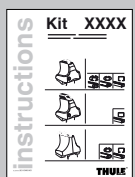



 x1
  x4
  x4
  x4

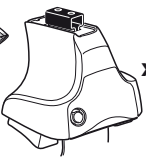   
480R/754




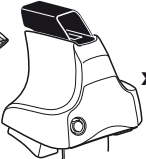 
 x1
  x4
  x4
  x4

 480



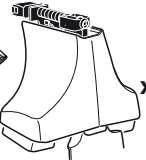
 x1
  x4
  x4

     750








 x2  x2  x2  x4	 x2  x2	 x2  x2  x2  x4  x4	 x2  x2  x2	 x2  x2
--	--	---	--	--

 
 
 


 308 x2	 07 x2	 206 x1
 807 x2	 204 x1	 x1

    
 
Kit

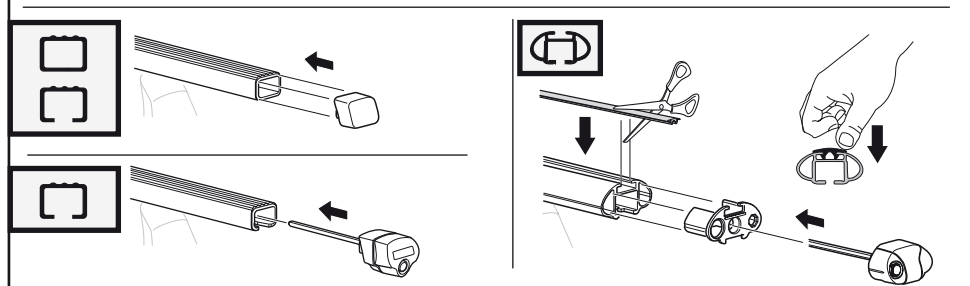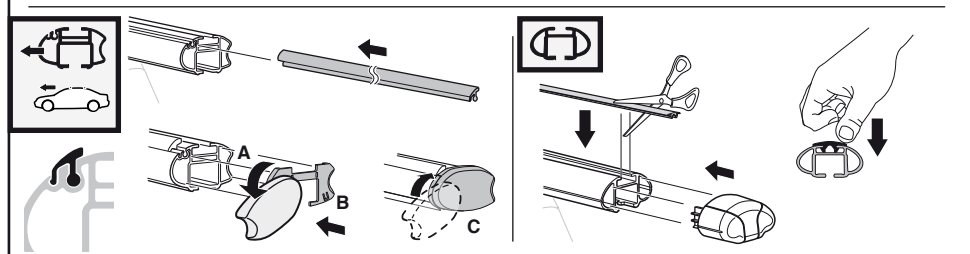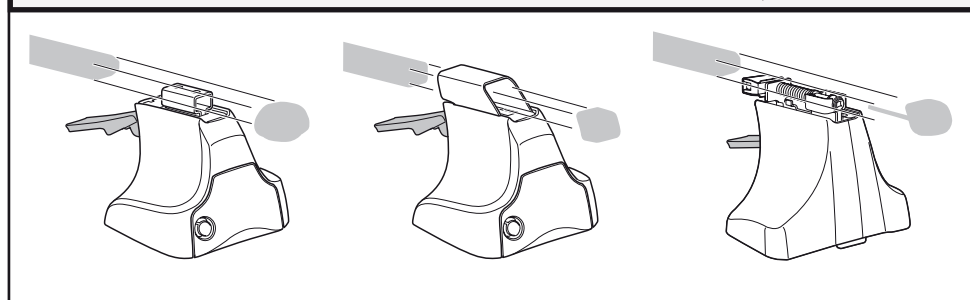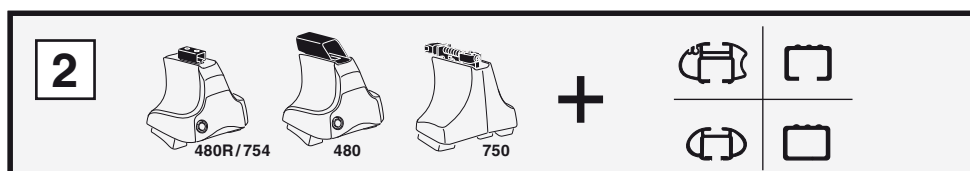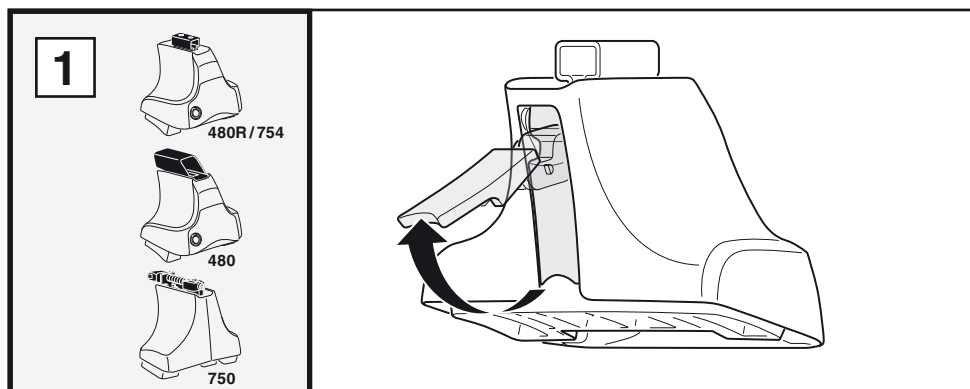


3

   

1

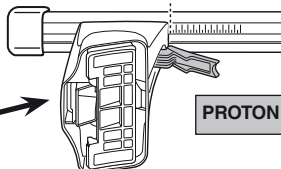  


2

 

PROTON Savvy, 5-dr Hatchback, 05-

X
32,5

 1

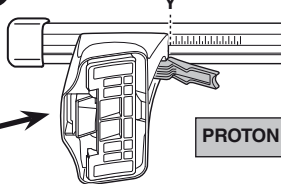

2



PROTON Savvy, 5-dr Hatchback, 05-

Y
31

 


480R




480

1



2

 


PROTON Savvy, 5-dr Hatchback, 05-

X inch
38 3/8"

X mm
976 mm

 1



2



 
 
 
 
 
 
 
 
 
 
 
 
 
PROTON Savvy, 5-dr Hatchback, 05-

Y inch
37 7/8"


Y mm
961 mm

4







PROTON Savvy, 5-dr Hatchback, 05–

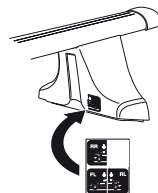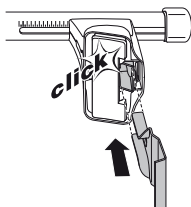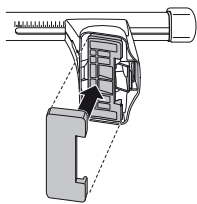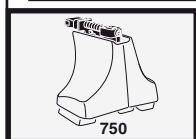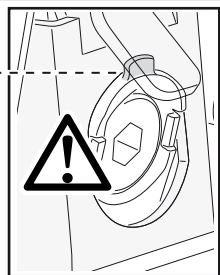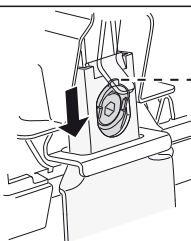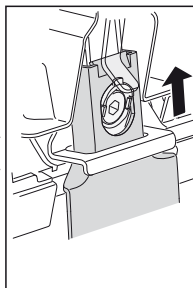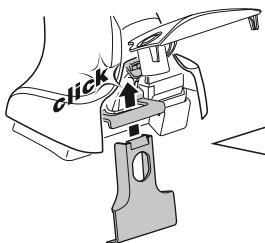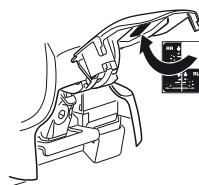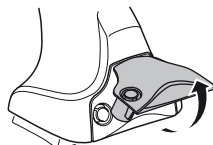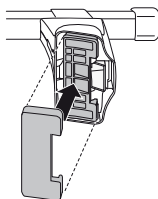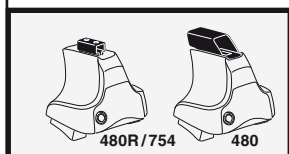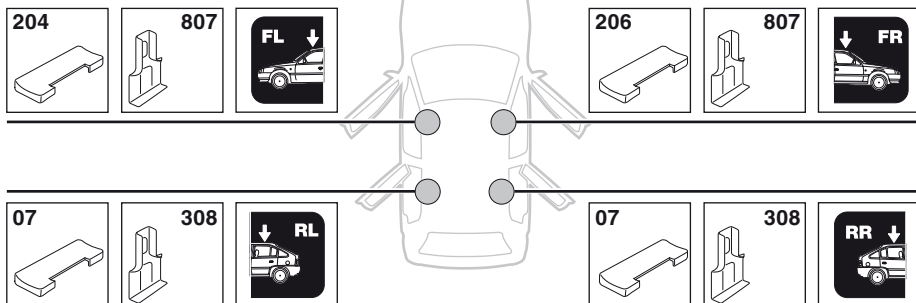

5

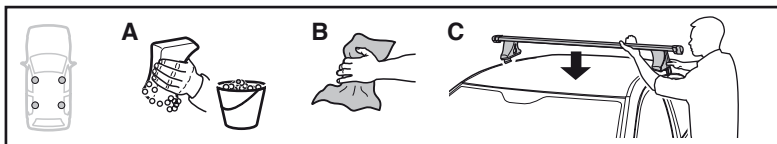 

	X mm	Y mm	X inch	Y inch
PROTON Savvy, 5-dr Hatchback, 05	300 mm	680 mm	11 3/4"	26 3/4"

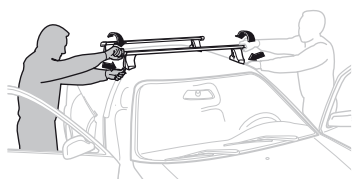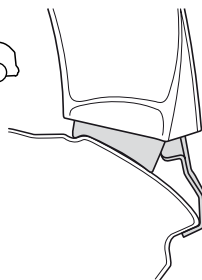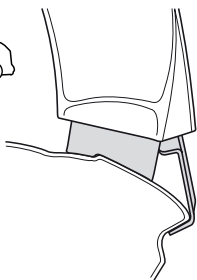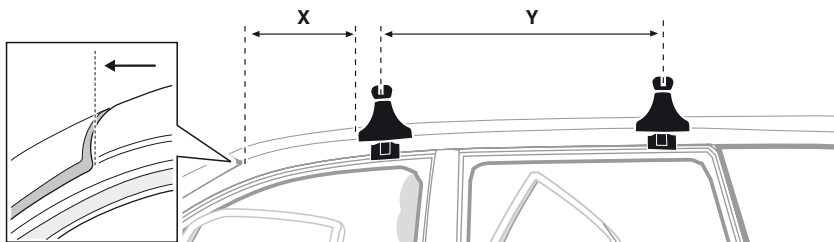      

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta bagażníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

 
 
 
 
 
6





480R/754



480

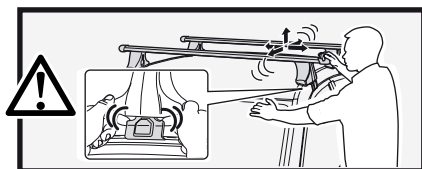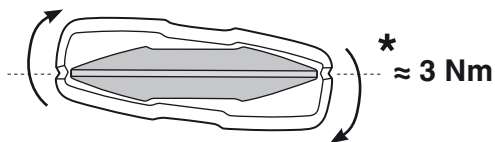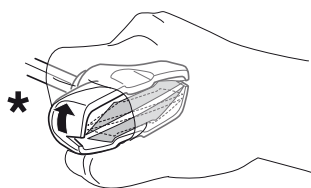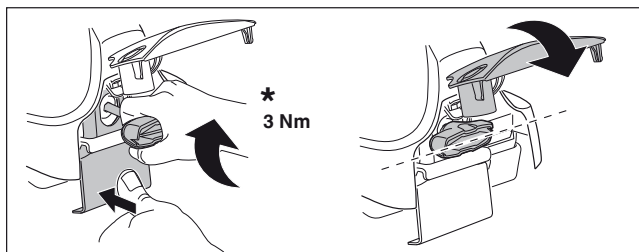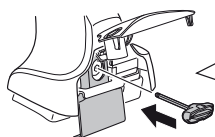

750

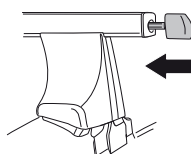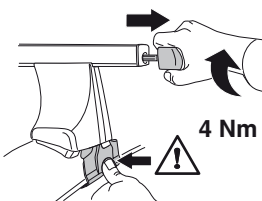  


i




1



 
2

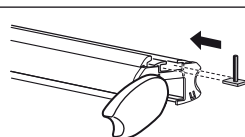


i

 

1

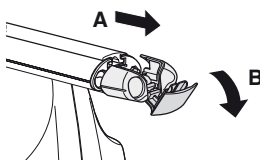 


2

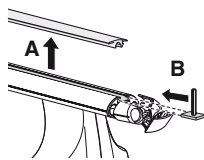 


i








 1

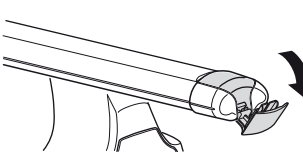

2

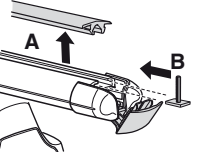 

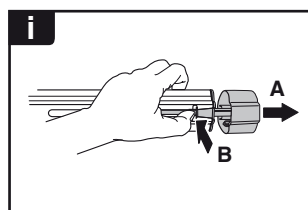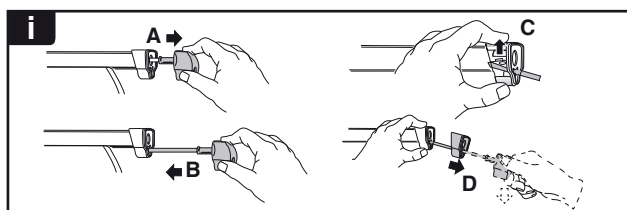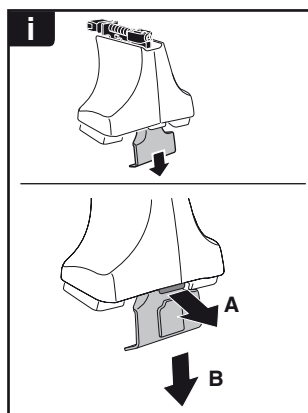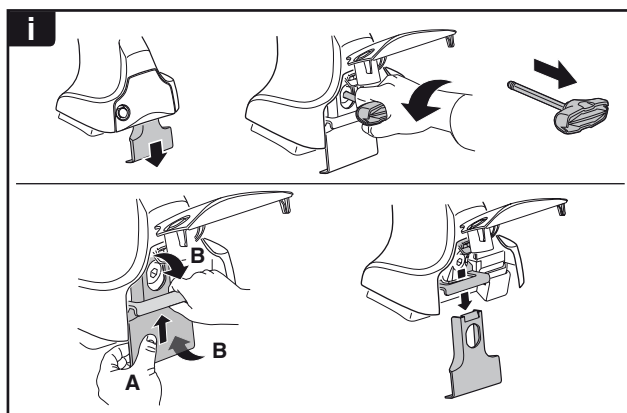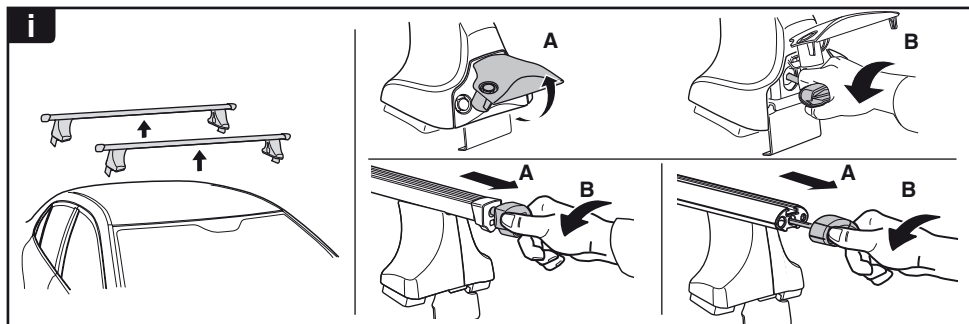     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA