 
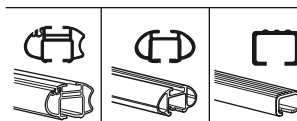 




Kit 1429

CHEVROLET Epica, 4-dr Sedan, 06–



480R
754

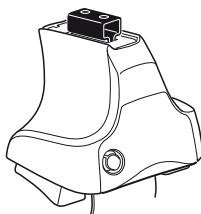

  480

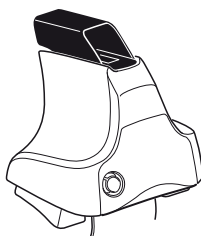

750

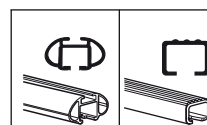 
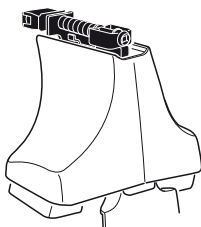 


THULE[®]
SWEDEN

ISO 11154-E

The diagram illustrates the assembly process. It shows a 'THULE' box, a plus sign, a box labeled 'instructions' with a 'Kit XXXX' and a table of parts, a warning triangle, and a person reading the instructions.

  Kit XXXX	

Exploded view diagram of the front panel assembly. The components and their quantities are:

- 918 x 2 (Two vertical support brackets)
- 919 x 2 (Two vertical support brackets)
- 179 x 2 (Two horizontal support brackets)
- 181 x 2 (Two horizontal support brackets)
- Front Panel (x 1) (The main front panel with four directional buttons: RR, FR, FL, RL)

1



 
480R/754



480



750

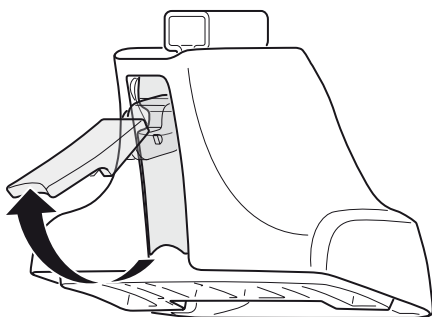

2



480R/754

 
 
 
 
 
 
 
 
 
 
 


480






750



+

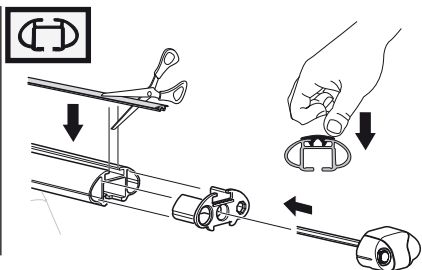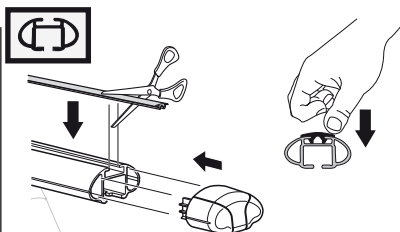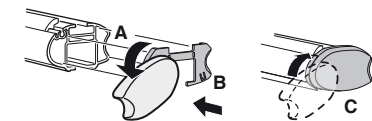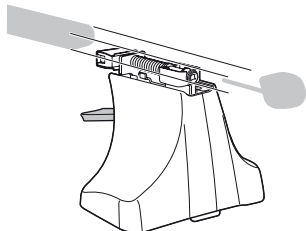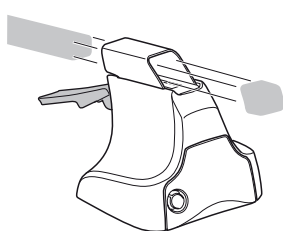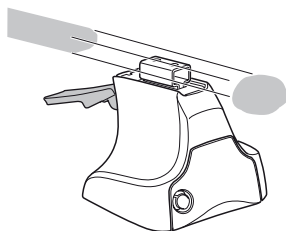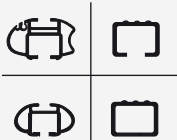

3

   

1

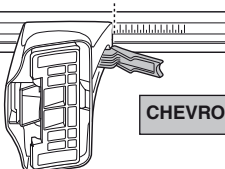  


2



CHEVROLET Epica, 4-dr Sedan, 06–

X
32,5

 1

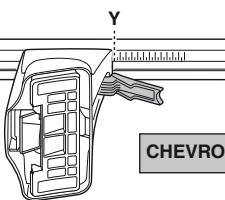

2



CHEVROLET Epica, 4-dr Sedan, 06–

Y
30,5

 


480R



480

1



2

 


CHEVROLET Epica, 4-dr Sedan, 06–

X inch
38 ³/₈ "

X mm
976 mm

1



2



 
 
 
 
 
 
 
 
 
 
 
 
 
CHEVROLET Epica, 4-dr Sedan, 06–

Y inch
37 ⁵/₈ "


Y mm
956 mm

4





CHEVROLET Epica, 4-dr Sedan, 06–

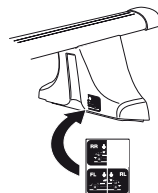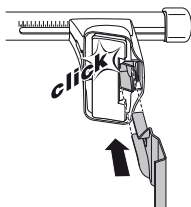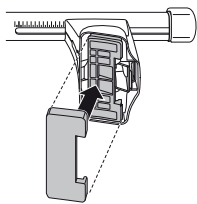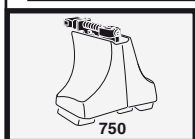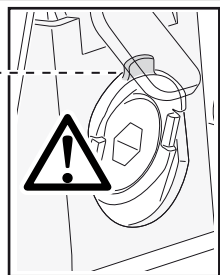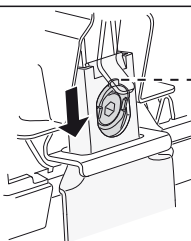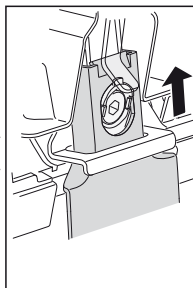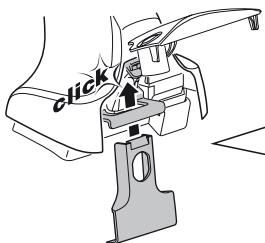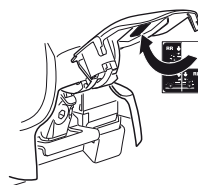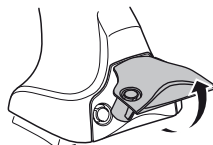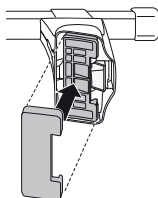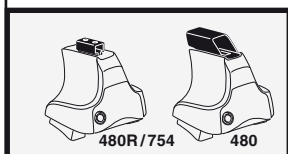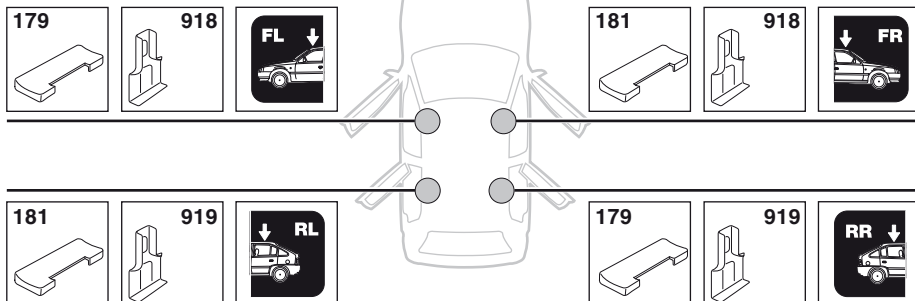

5

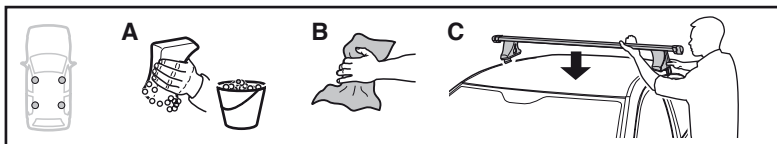 

	X mm	Y mm	X inch	Y inch
CHEVROLET Epica, 4-dr Sedan, 06–	315 mm	650 mm	12 ³ / ₄ "	25 ⁵ / ₈ "

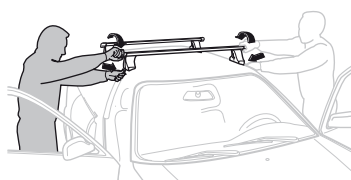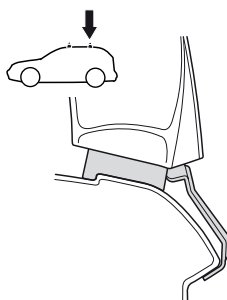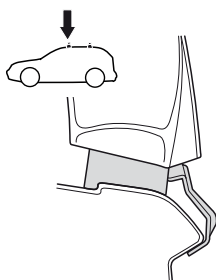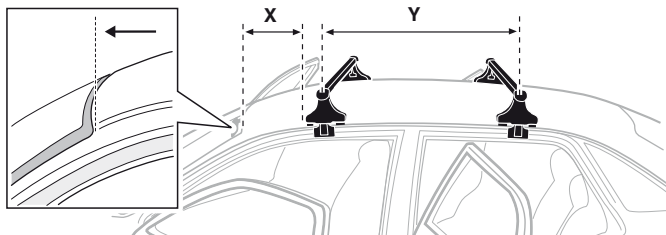    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apertar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte bagážníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ






6





480R/754



     480

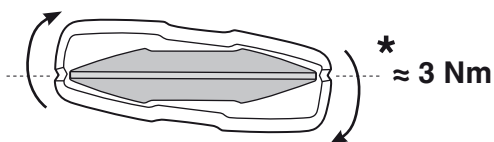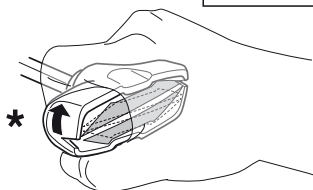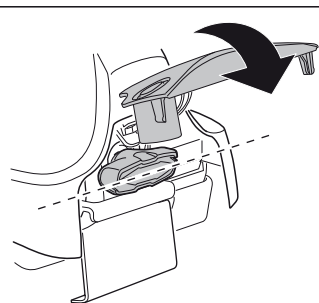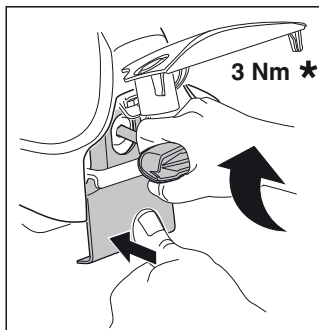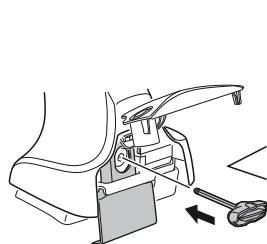


750

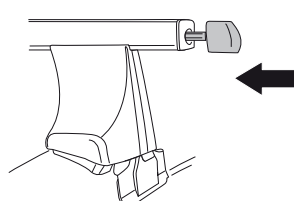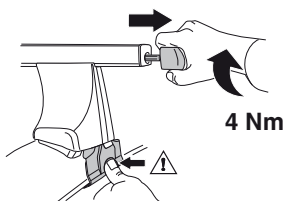  


i



 
1

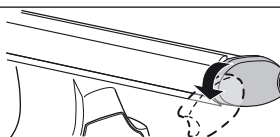


2

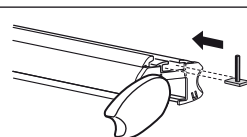 


i

 

1

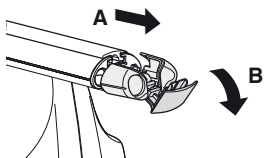 


2

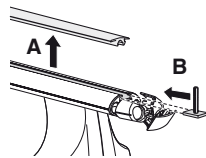 


i








 1

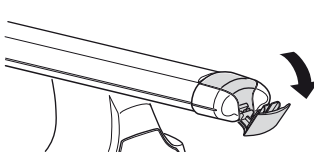

2

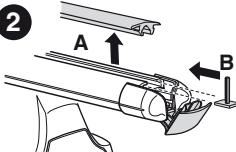 

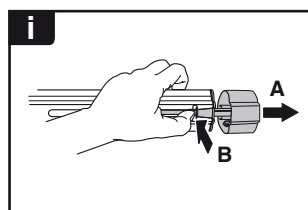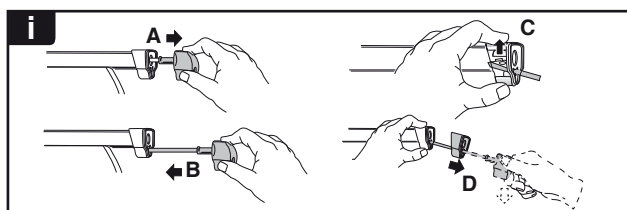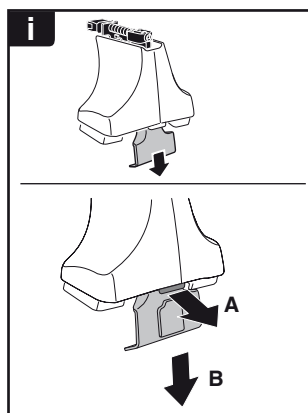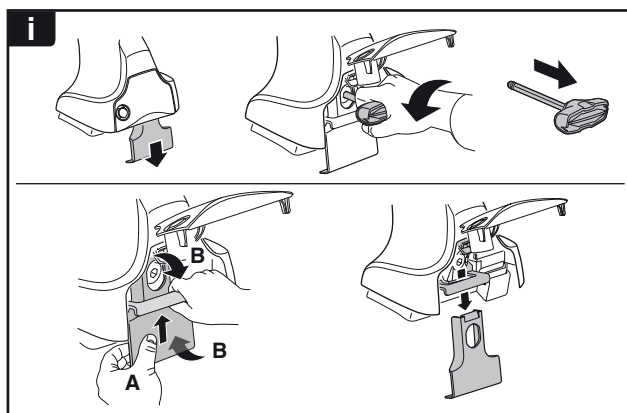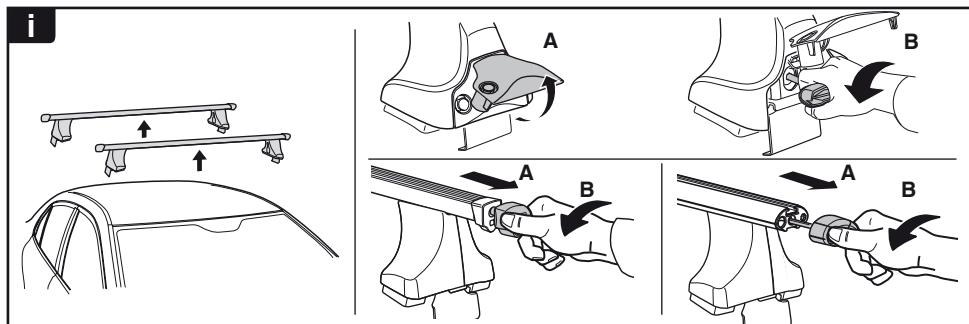     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		