 
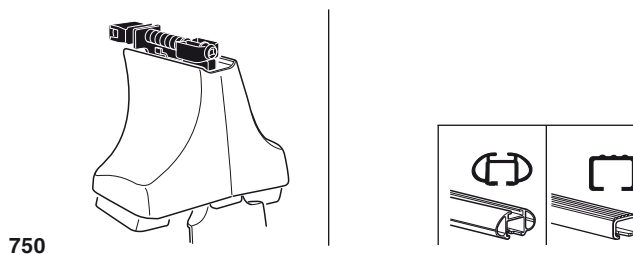 
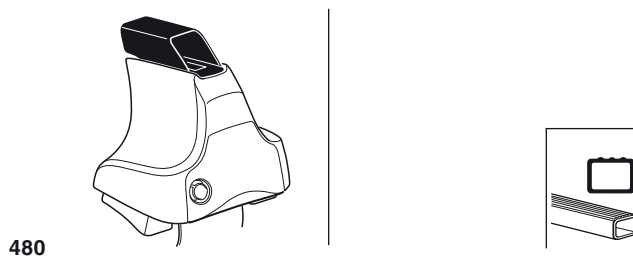 


Kit 1437

SUZUKI SX4, 5-dr Hatchback, 06–





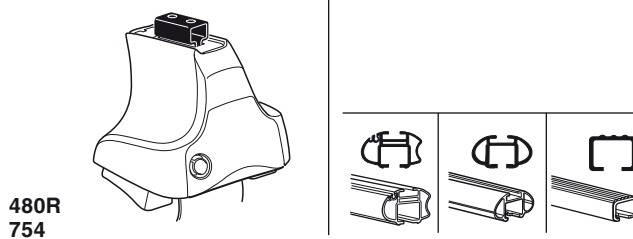


ISO 11154-E




THULE[®]
SWEDEN

The diagram illustrates the importance of reading instructions. It features a box on the left labeled "THULE" with a warning symbol (a triangle with an exclamation mark) and a plus sign next to it. To the right of the plus sign is a box labeled "Kit XXXX" containing a list of items: "1x", "2x", "3x", "4x", "5x", "6x", "7x", "8x", "9x", "10x", "11x", "12x", "13x", "14x", "15x", "16x", "17x", "18x", "19x", "20x", "21x", "22x", "23x", "24x", "25x", "26x", "27x", "28x", "29x", "30x", "31x", "32x", "33x", "34x", "35x", "36x", "37x", "38x", "39x", "40x", "41x", "42x", "43x", "44x", "45x", "46x", "47x", "48x", "49x", "50x", "51x", "52x", "53x", "54x", "55x", "56x", "57x", "58x", "59x", "60x", "61x", "62x", "63x", "64x", "65x", "66x", "67x", "68x", "69x", "70x", "71x", "72x", "73x", "74x", "75x", "76x", "77x", "78x", "79x", "80x", "81x", "82x", "83x", "84x", "85x", "86x", "87x", "88x", "89x", "90x", "91x", "92x", "93x", "94x", "95x", "96x", "97x", "98x", "99x", "100x". Below the list is a warning symbol (a triangle with an exclamation mark). To the right of the warning symbol is a large warning symbol (a triangle with an exclamation mark). A person is shown reading the instructions.



					
					
					
					
					
					
					
					
					
					
					
					
					
					
					
					

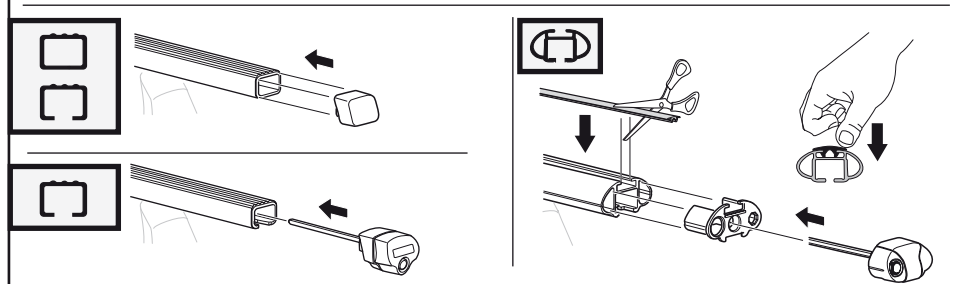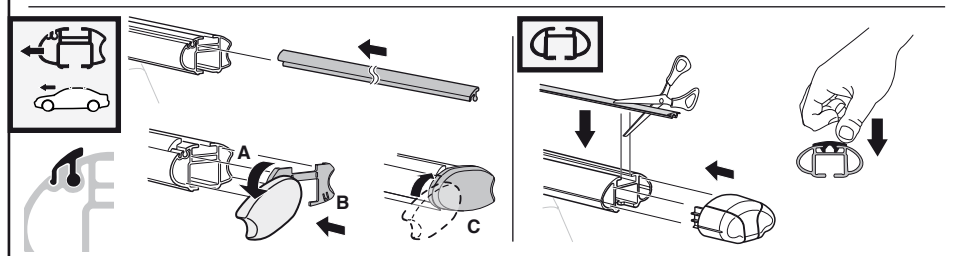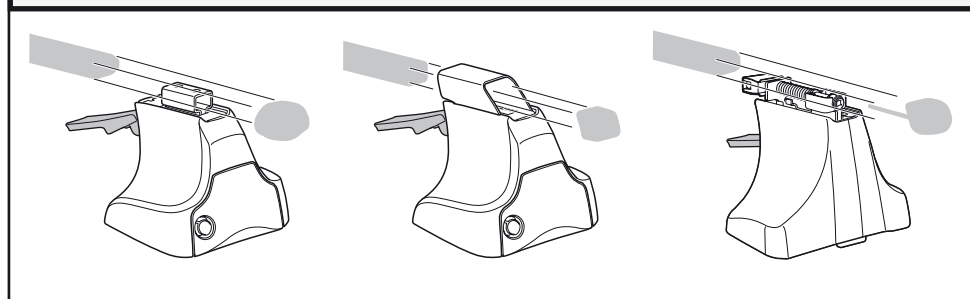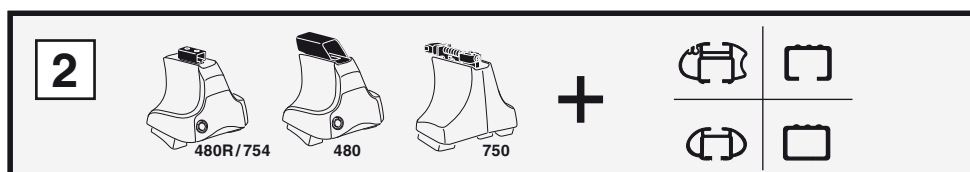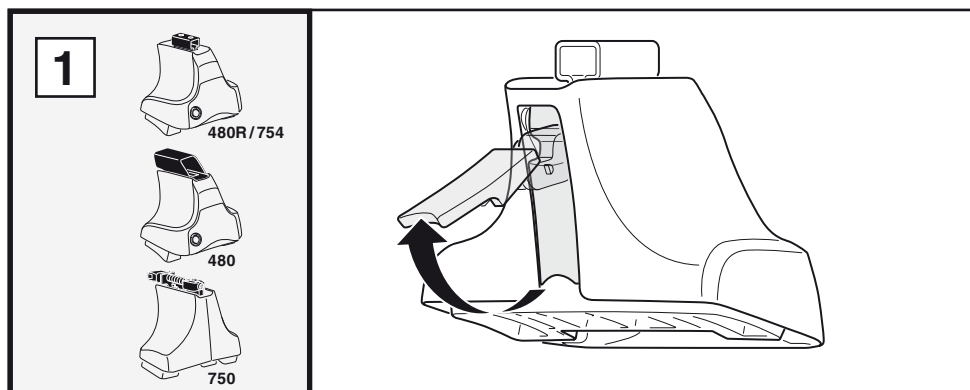     


3

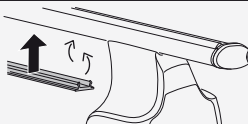   

1

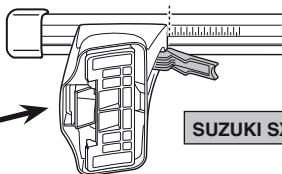  

2

 


SUZUKI SX4, 5-dr Hatchback, 06-

X

13

 1

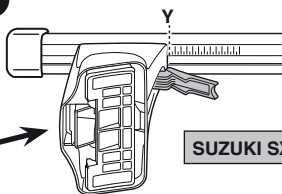

2



SUZUKI SX4, 5-dr Hatchback, 06-

Y

10

 


480R




480

1



2

 

SUZUKI SX4, 5-dr Hatchback, 06-

 
X inch

X mm

30 3/4"

781 mm

1



2



SUZUKI SX4, 5-dr Hatchback, 06-

 
 
 
 
 
 
 
 
 
 
 
 
Y inch

Y mm


29 5/8"

751 mm



4

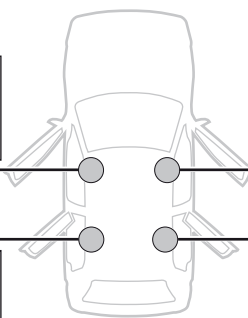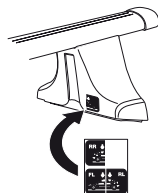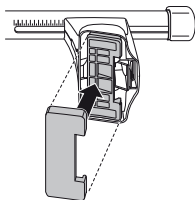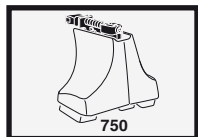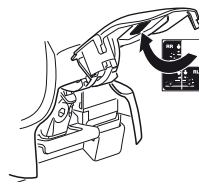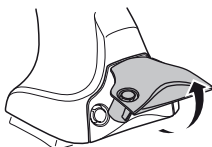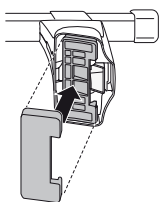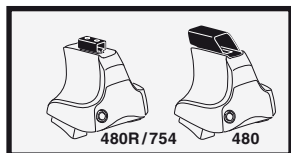







5

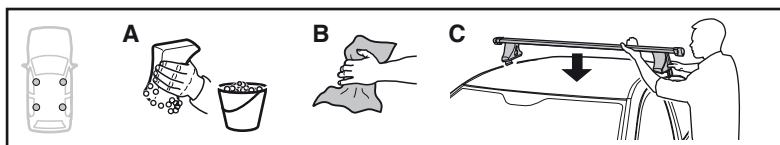 

871 x 4

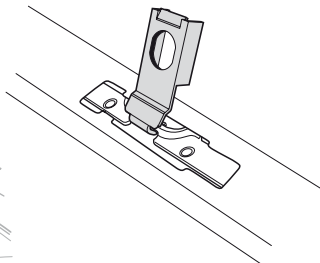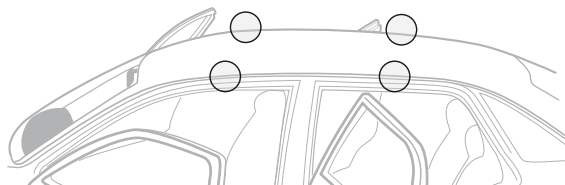  

6

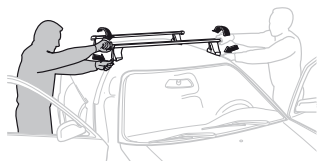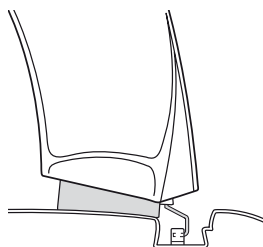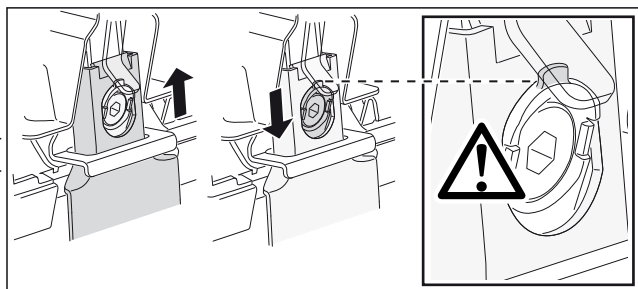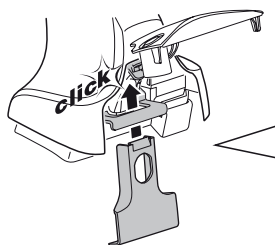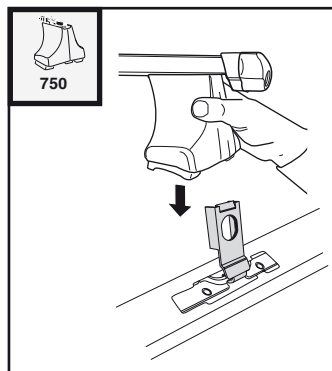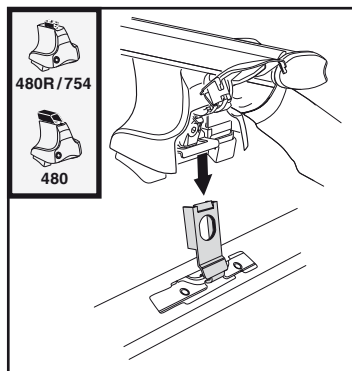      

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขั้วในแบบสลับ

 
 
7







480R/754








480

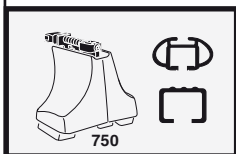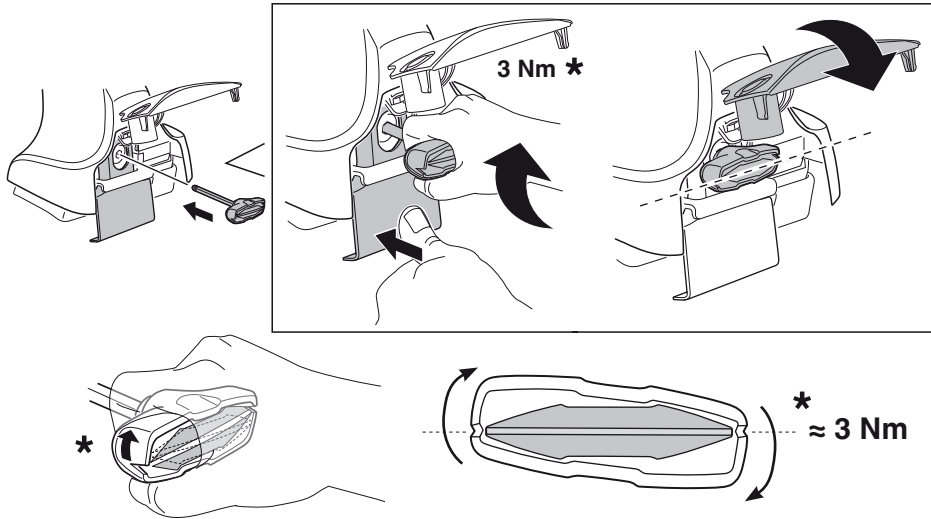

750

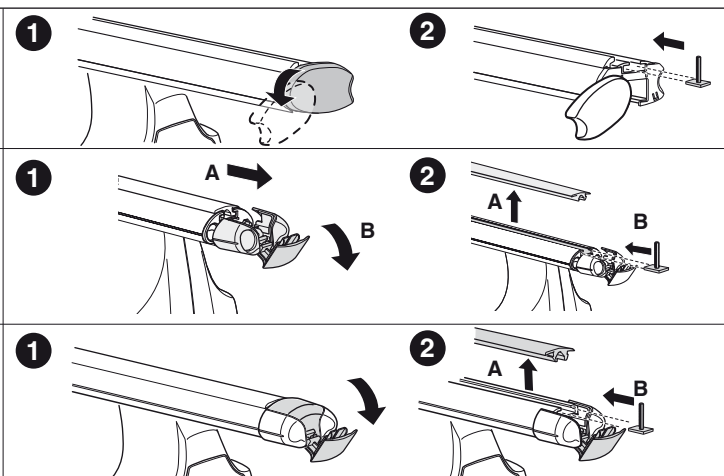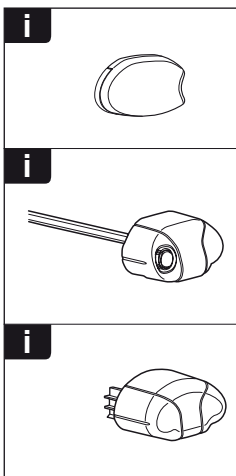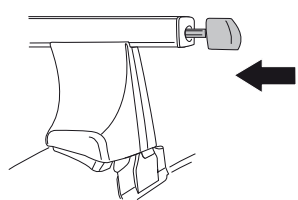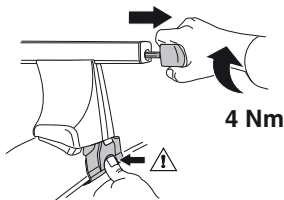    

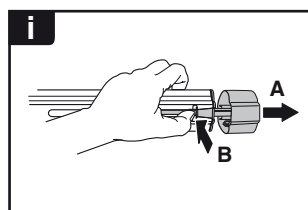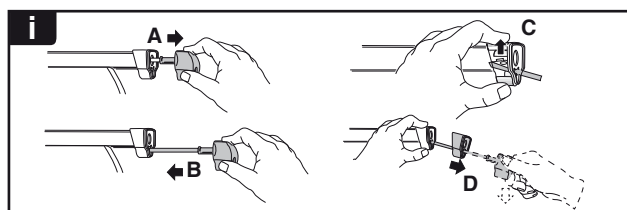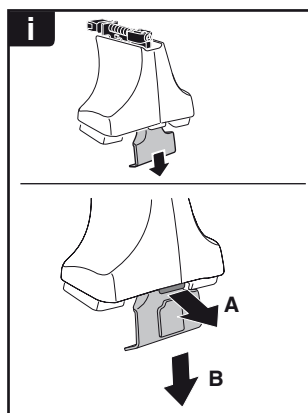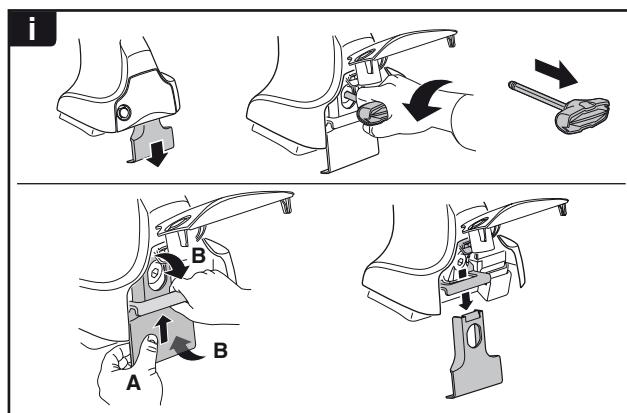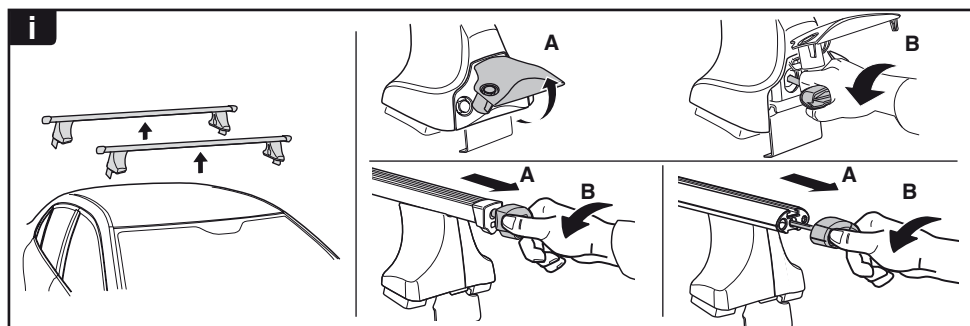     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		