






CROSSBAR IDENTIFICATION



VA crossbar



EURO crossbar



HD crossbar

Vehicle	Date	Crossbar	FRONT CROSSBAR					REAR CROSSBAR						
			Front Right Pad/Clamp	Front Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/Clamp	Rear Left Pad/Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Renault Megane 3dr (incl. RS)	10-	1260mm	M775 SUB0637	M774 SUB0637	177mm	64m	1002mm / 39,29/64"	OUT	M366 SUB0638	M366 SUB0638	170mm	57mm	988mm / 38,29/32"	OUT
			Pad Arrow Out						Pad Arrow Forward					



Rhino Rack 2500 Series - DK433 instruction

CONTROLLED





Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.





Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

Front. a. Swivel the two piece bracket so it locates correctly against the body. b. Follow instructions and place the front rack onto the vehicle. Locate the upper bracket centrally inside the leg. c. Press the clamp against the vehicle body before too much tension is applied to the M8 centre screw. Tension brackets evenly each side of the vehicle making sure they locate against the bevelled edge of the body.

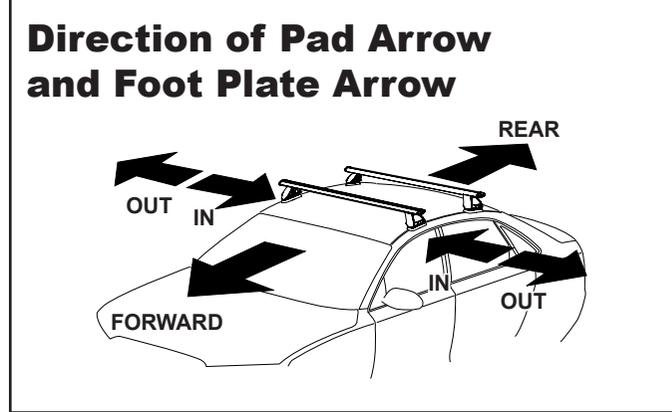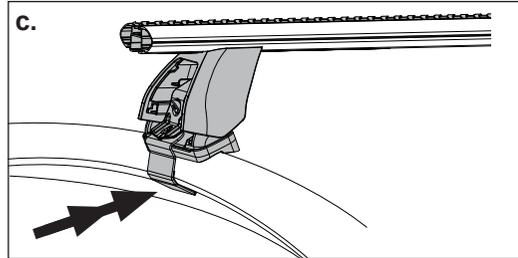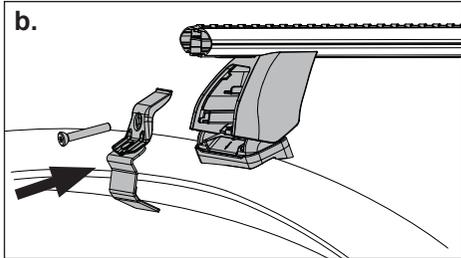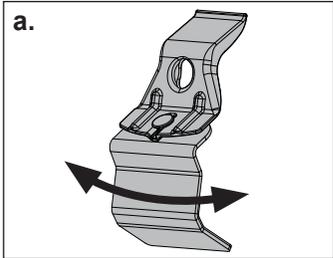

Rear: a. Swivel the two piece bracket so it locates correctly against the body. b. Follow instructions and place the rear rack onto the vehicle. Peel the top of the quarter window rubber back and hook the bracket in. c. Press the bracket against the vehicle body before too much tension is applied to the M8 centre screw. Tension brackets evenly each side of the vehicle making sure they locate against the bevelled edge of the body.

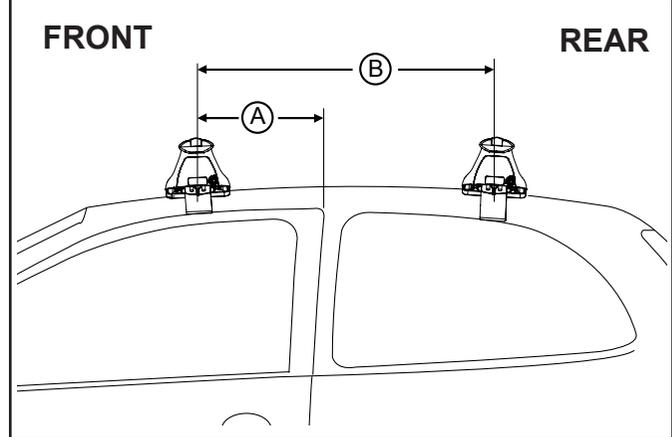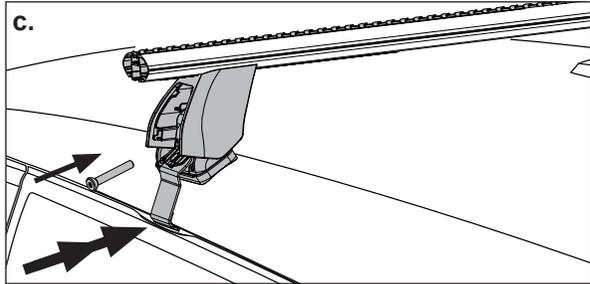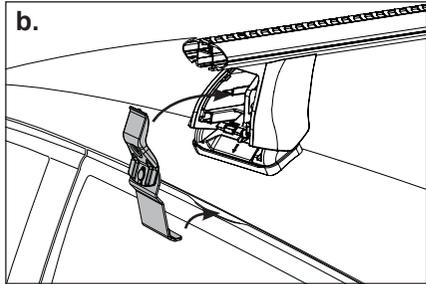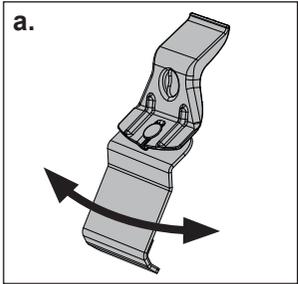

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Renault Megane 3dr (incl. RS)	10-	500mm / 19,11/16"	760mm / 29,59/64"	75kg / 165lbs