


SPECIFICATION SHEET RSS99F

VEHICLE BRAND	FORD AU FALCON
VEHICLE TYPE	UTILITY
YEAR MODEL	1999
LOAD RATING	20KG

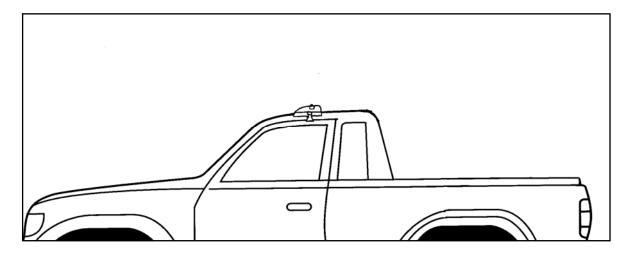

SPECIAL FITTING TIPS

Clean roof to remove all dirt and grease. Observe parts supplied in the kit. Open both doors and remove the bottom door seal and fit clamps as shown in picture below. Assemble the racks to the roof as shown in the diagrams. Tighten all bolts and refit the bottom door seal. Check that the racks are square to the centerline of the vehicle and parallel to each other. Close all doors and check strap fit. Ensure that all doors close correctly.

SPECIFICATIONS: Front Bar – 920mm

Manufactured By Rhino-Rack 3 Pike St Rydalmere, NSW 2116, Australia (Ph) 02 9638 4744 (Fax) 02 9638 4822

