

Thule Rapid System Kit 1051





> Instructions

VOLKSWAGEN Bora, 4-dr Sedan, 99-04

VOLKSWAGEN Golf IV, 5-dr Hatchback, 98-03 / *99-06

VOLKSWAGEN Jetta IV, 5-dr Hatchback, 99-04 / *99-05

*North America

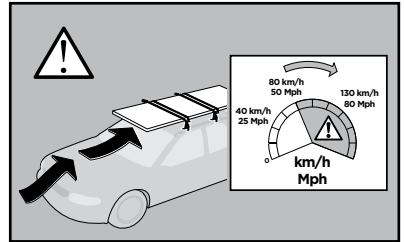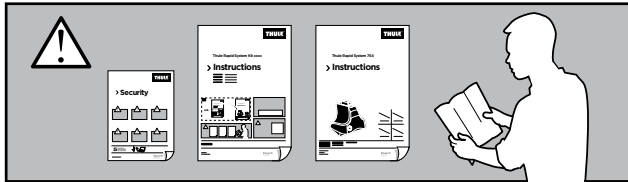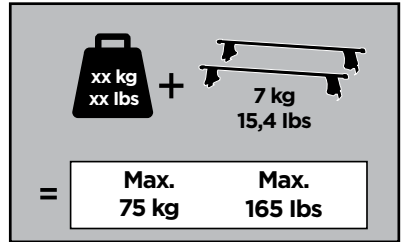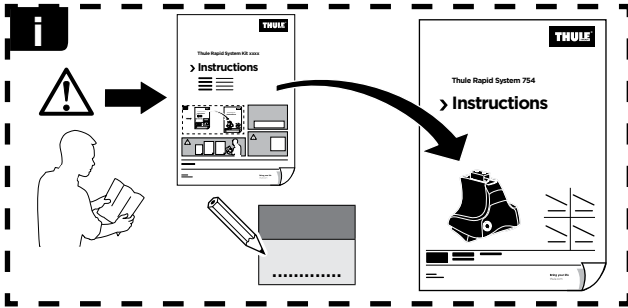

ISO 11154-E

141051


C.20120525
519-1051-02

Bring your life


thule.com




20 x1



21 x1




22 x2



98 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Bora , 4-dr Sedan, 99-04	27	921	36 ¹ / ₄
VOLKSWAGEN Golf IV , 5-dr Hatchback, 98-03 / *99-06	27	921	36 ¹ / ₄
VOLKSWAGEN Jetta IV , 5-dr Hatchback, 99-04 / *99-05	27	921	36 ¹ / ₄

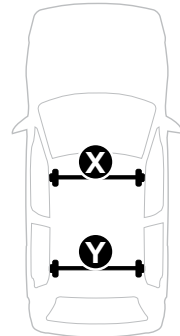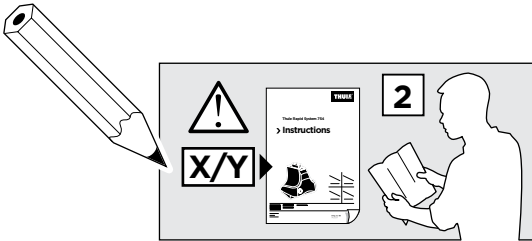



	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Bora , 4-dr Sedan, 99-04	21	861	33 ⁷ / ₈
VOLKSWAGEN Golf IV , 5-dr Hatchback, 98-03 / *99-06	21	861	33 ⁷ / ₈
VOLKSWAGEN Jetta IV , 5-dr Hatchback, 99-04 / *99-05	21	861	33 ⁷ / ₈

2

VOLKSWAGEN Bora, 4-dr Sedan, 99-04

VOLKSWAGEN Golf IV, 5-dr Hatchback, 98-03 / *99-06

VOLKSWAGEN Jetta IV, 5-dr Hatchback, 99-04 / *99-05

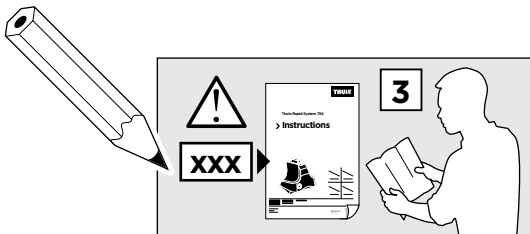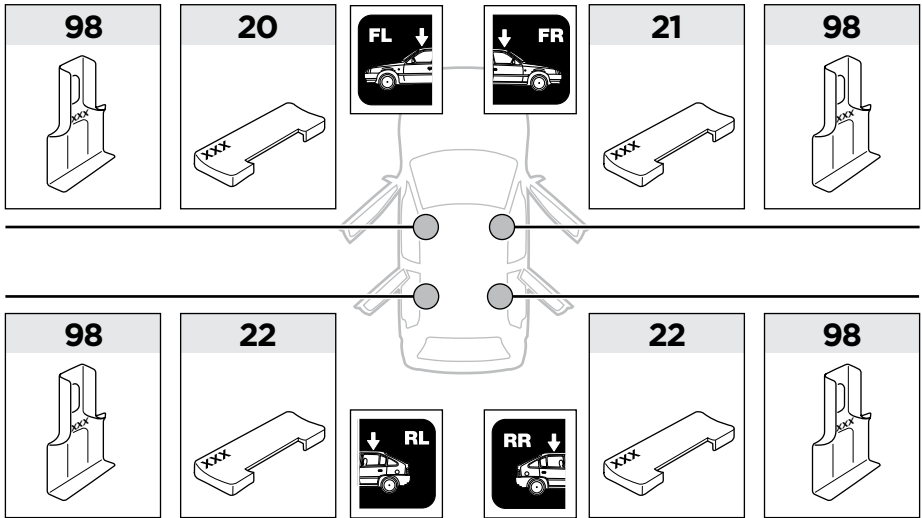

3

