

Kit 1184






CITROËN Berlingo, 3-dr Van, 97-02, 03-08

CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06*

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08






PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

* without sunroof

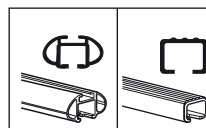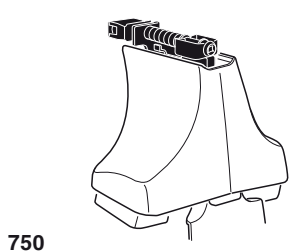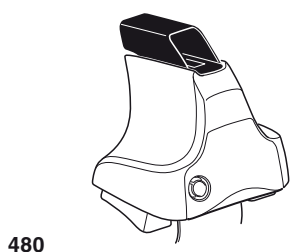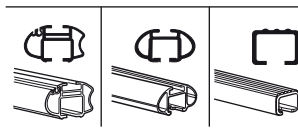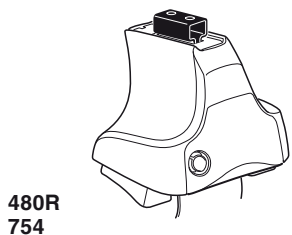


THULE[®]
SWEDEN



ISO 11154-E

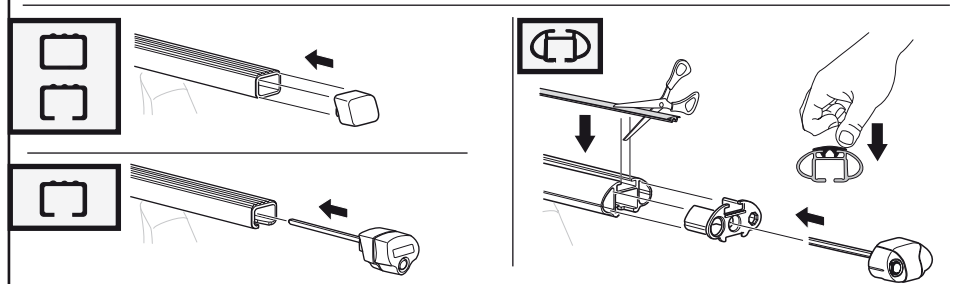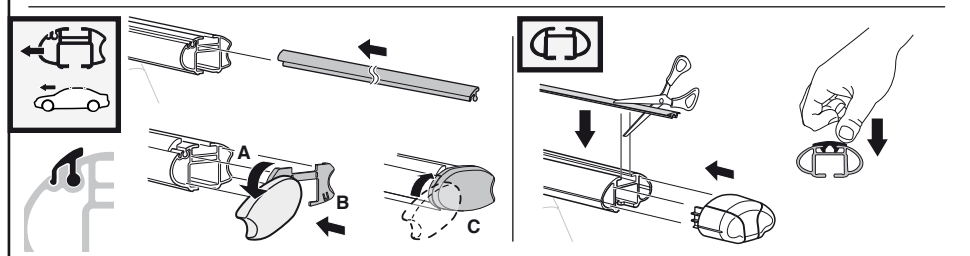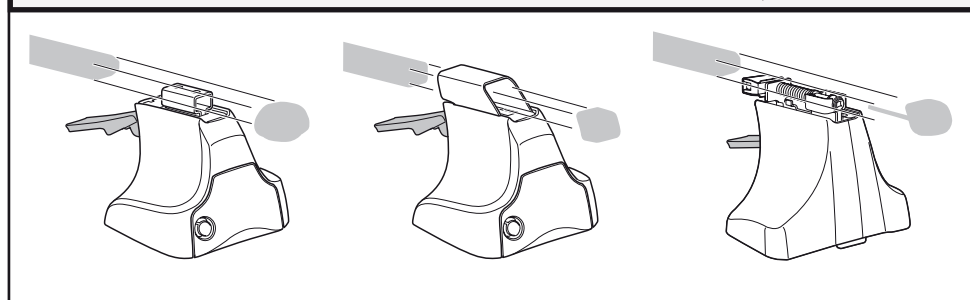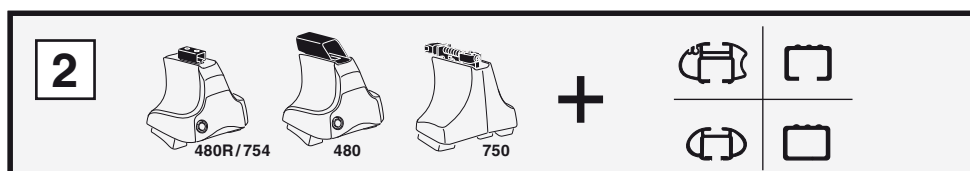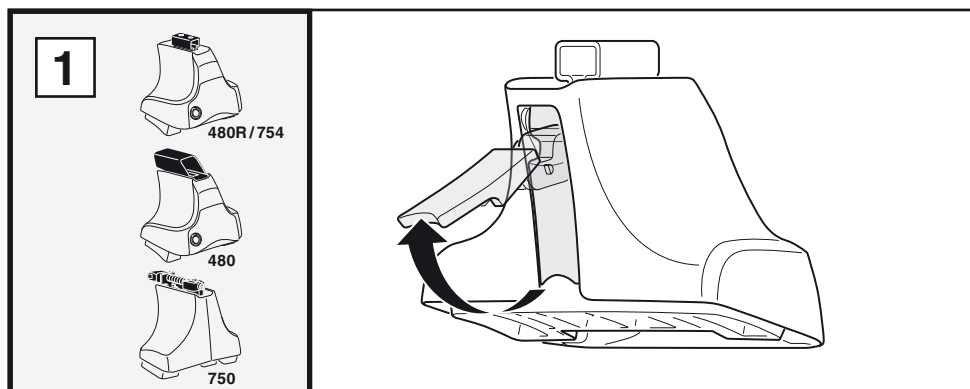

3





754



750



1

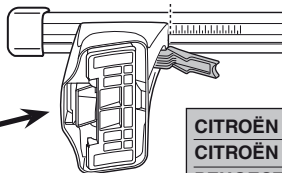


2



X

CITROËN Berlingo , 3-dr Van, 97-02, 03-08	23,5
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	21
PEUGEOT Partner , 3/4/5-dr Van, 97-02, 03-08	23,5
PEUGEOT Ranch , 3/4/5-dr Van, 97-02, 03-08	23,5

1

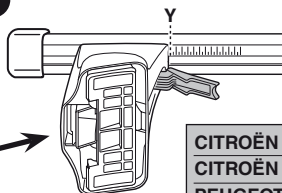

2



Y

CITROËN Berlingo , 3-dr Van, 97-02, 03-08	24
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	20
PEUGEOT Partner , 3/4/5-dr Van, 97-02, 03-08	24
PEUGEOT Ranch , 3/4/5-dr Van, 97-02, 03-08	24




480R




480

1




2



X inch X mm

CITROËN Berlingo , 3-dr Van, 97-02, 03-08	34 ⁷ / ₈ "	886 mm
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	33 ⁷ / ₈ "	861 mm
PEUGEOT Partner , 3/4/5-dr Van, 97-02, 03-08	34 ⁷ / ₈ "	886 mm
PEUGEOT Ranch , 3/4/5-dr Van, 97-02, 03-08	34 ⁷ / ₈ "	886 mm

1



2



Y inch Y mm

CITROËN Berlingo , 3-dr Van, 97-02, 03-08	35 ¹ / ₈ "	891 mm
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	33 ¹ / ₂ "	851 mm
PEUGEOT Partner , 3/4/5-dr Van, 97-02, 03-08	35 ¹ / ₈ "	891 mm
PEUGEOT Ranch , 3/4/5-dr Van, 97-02, 03-08	35 ¹ / ₈ "	891 mm














4

CITROËN Berlingo, 3-dr Van, 97-02, 03-08


CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06

PEUGEOT Partner, 3/4/5-dr Van, 97-02, 03-08





PEUGEOT Ranch, 3/4/5-dr Van, 97-02, 03-08

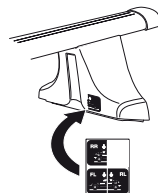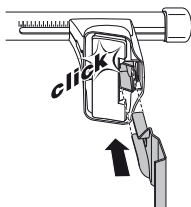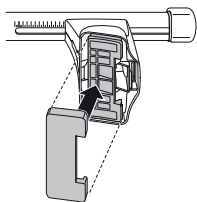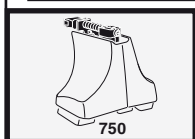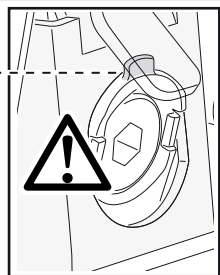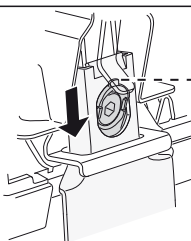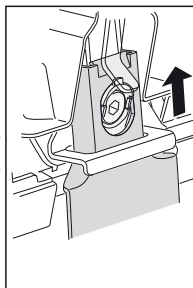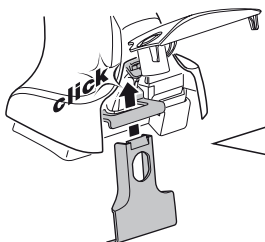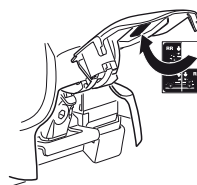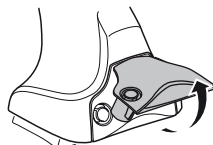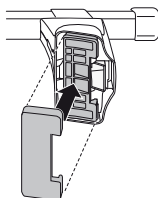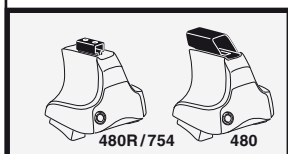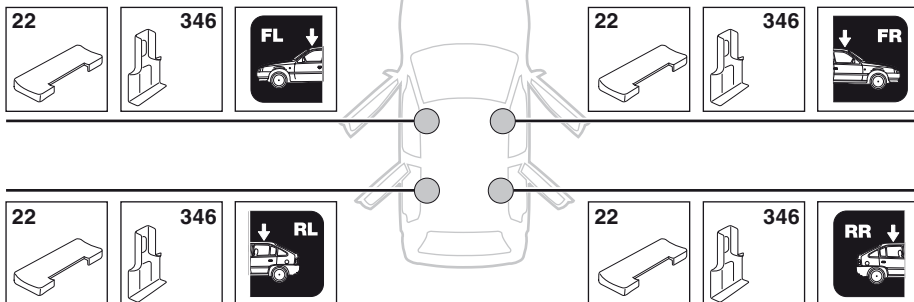

5

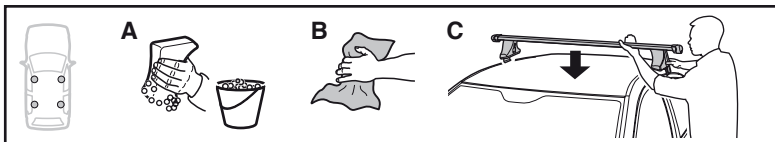


	X mm	Y mm	X inch	Y inch
CITROËN Berlingo , 3-dr Van, 97-02, 03-08	770 mm	600 mm	30 ³ / ₈ "	23 ⁵ / ₈ "
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12 ⁵ / ₈ "	27 ¹ / ₂ "
PEUGEOT Partner , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 ³ / ₈ "	23 ⁵ / ₈ "
PEUGEOT Ranch , 3/4/5-dr Van, 97-02, 03-08	770 mm	600 mm	30 ³ / ₈ "	23 ⁵ / ₈ "

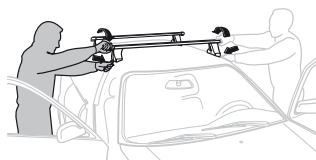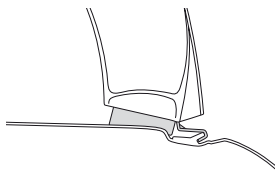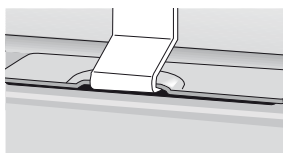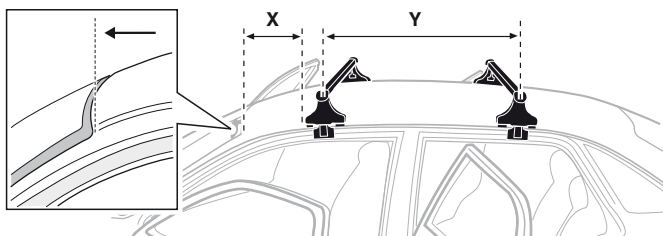

GB/US	Tighten alternately	CZ	Pokřetla багажника dokřećaj dokřećaj napřezmiennie.
D	Die Schrauben abwechselnd anziehen	SK	Dofahujie striedavo
F	Serrer alternativement chaque côté	SLO	Privijajte izmienićno.
NL	Afwisselend aan de linker- en de rechterkant aandraaien	HR	Naizmjenićno zategnite
I	Alternare il serraggio delle viti	HU	Egymástól függetlenül szorítandó
E	Apretar alternativamente	GR	Σφιγγετε εναλάξ
PT	Aperte alternadamente	TR	Dönüşümlü sıkın
S	Dra åt växelvis	中文	交替拧紧
FIN	Kierrä vuorotellen	한국어	번갈아 가며 조이십시오.
EST	Pinguldage vaheldumisi	日本語	交互に締め付けてください。
LAT	Pielvelciet pamišus	ไทย	ขันในแบบสลับ
LIT	Užsukinėkite pakaitomis		
PL	Śruby dokřećaj napřezmiennie		
RU	Затягивайте попеременно		






6





480R/754



480

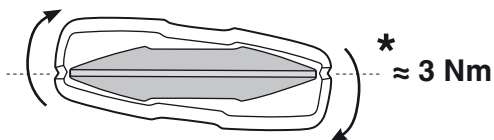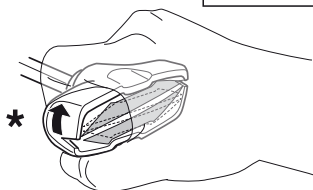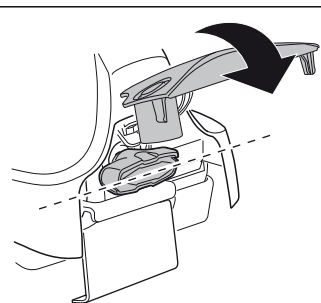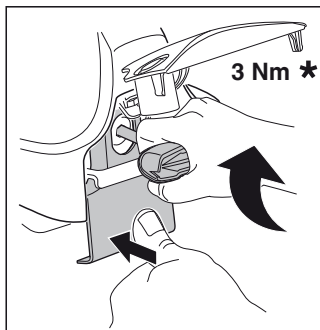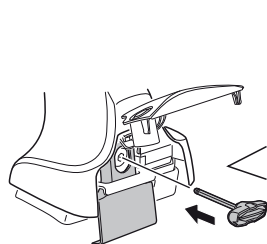

750

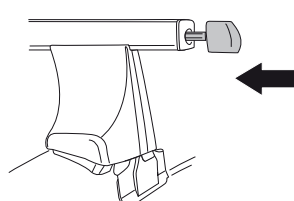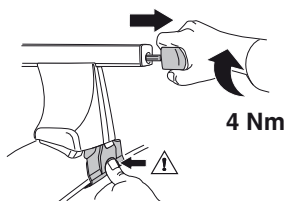


i




1




2

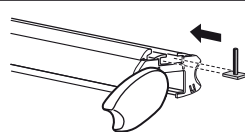


i




1

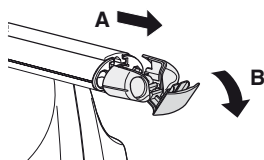


2

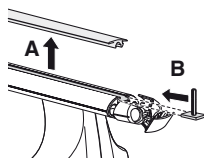


i








1

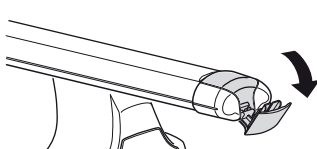

2

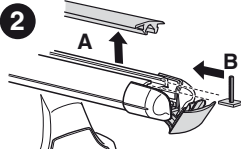


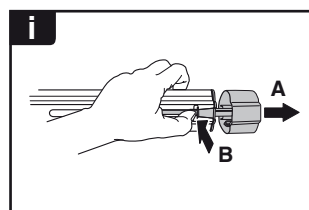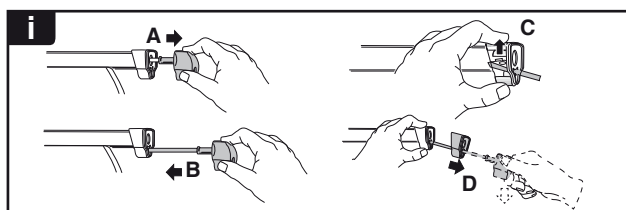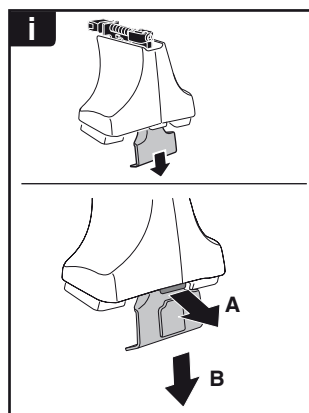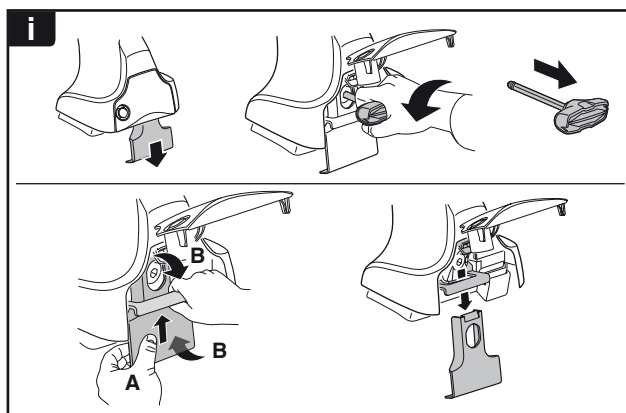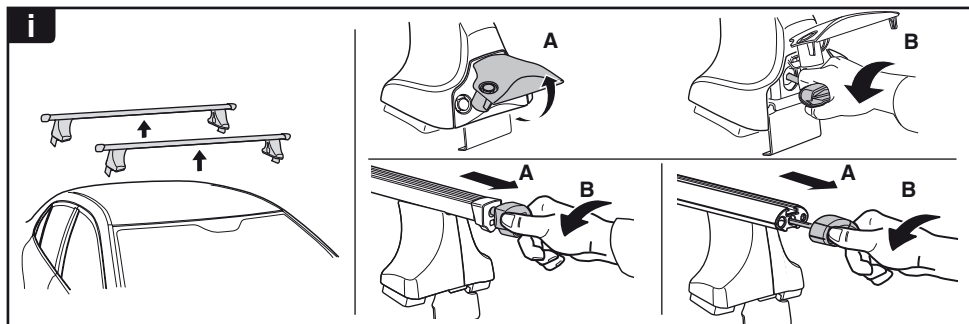

THULE®
SWEDEN




**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		

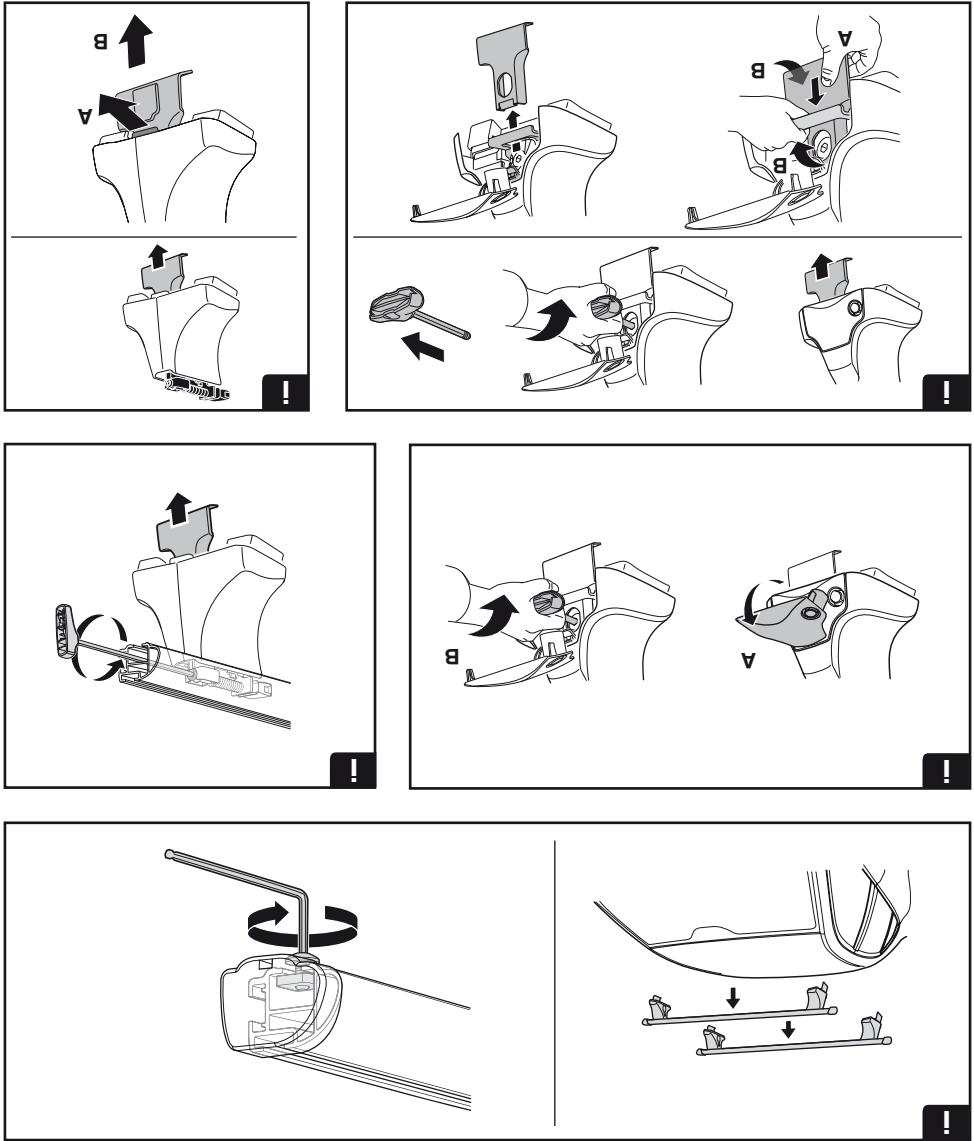


Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
 Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA




www.thuleprofessional.com
info@thule.com
customer.service@thule.com

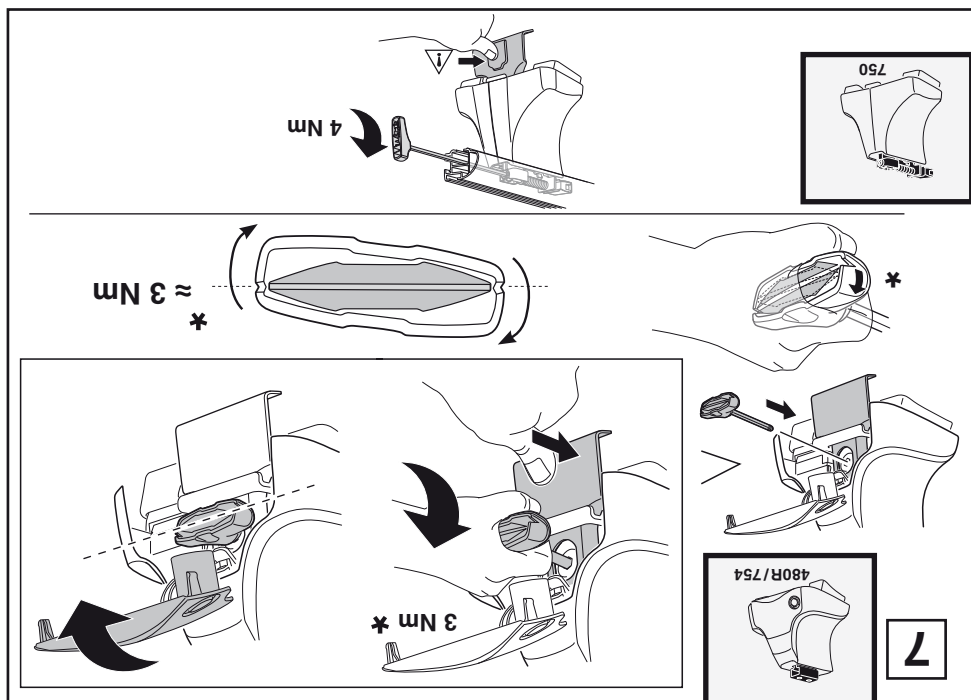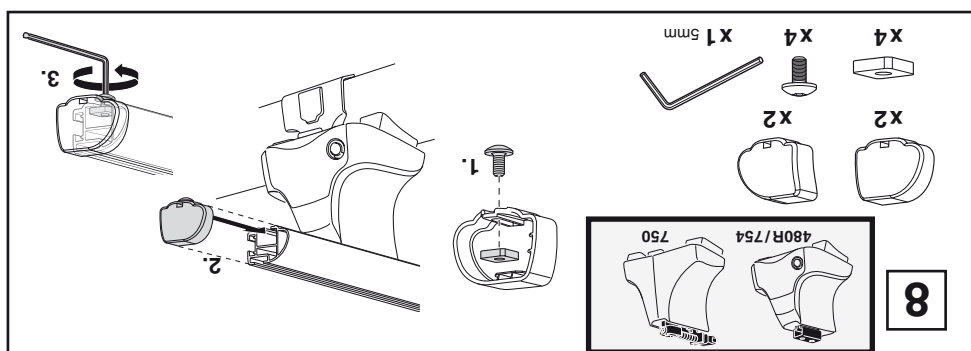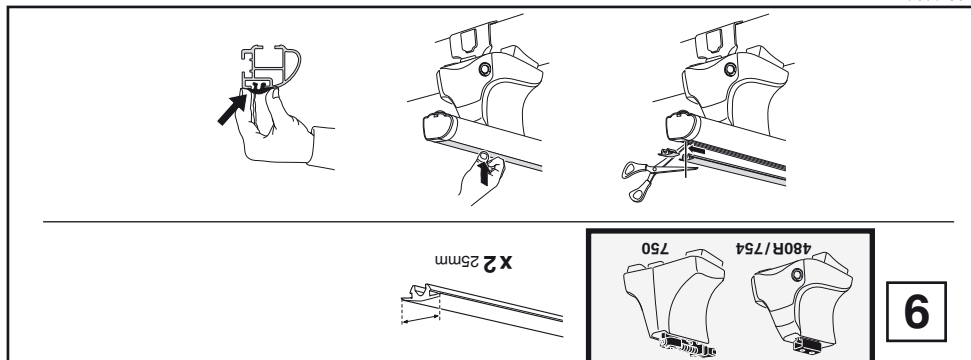














Uitgeniet alternatiewely	天眞の楽しみ
tyden alternatiewely	日替り
Die Schatpen abwechselnd anziehen	襦袢を交互に着る
Serret alternatiewemot chaque rechterkant aandraaien	右の鎖を交互に締める
Altetras il serraggio delle viti	ボルトを交互に締める
Aperte alternatadamente	開閉交互
Dra at valvulus	弁を交互に開く
Kiertä vuorotellen	交互に開く
Fingulidage valvulidumisi	指を交互に開く
Pleviciset pamisus	胸を交互に開く
Utsukikette rakatsumis	肋骨を交互に開く
Syly dokcega narpezeniemno	肋骨を交互に開く
Zatryvaykite porpezeniemno	肋骨を交互に開く

中文	交替拧紧
CZ	Pokrétla bagazazníka dokrécáj
SK	Dokrécájle srtiedavo
SLO	Privijajte izmenično.
HR	Naizmenično zategnite
HU	Egymásztól fűggetlenül
GR	szortlandó
TR	Zfilyetere evaalā,
	Dönüşümlü sıkın






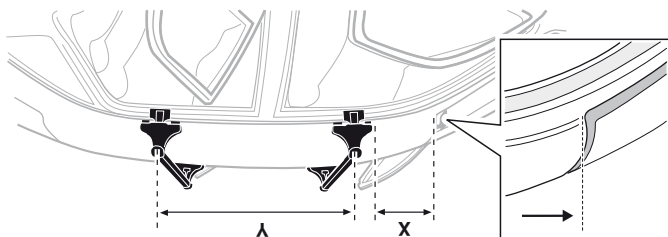
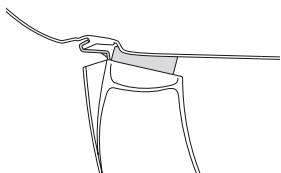


CITROËN Berlingo , 3-dr Van., 97-02, 03-08	770 mm	600 mm	30^{5/8"}	Y inch
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-06	320 mm	700 mm	12^{5/8"}	Z inch
PEUGEOT Partner , 3/4-5-dr Van., 97-02, 03-08	770 mm	600 mm	30^{5/8"}	X inch
PEUGEOT Ranch , 3/4-5-dr Van., 97-02, 03-08	770 mm	600 mm	30^{5/8"}	Y inch


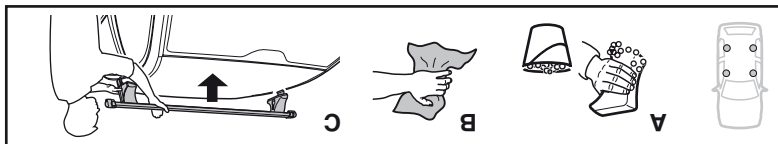


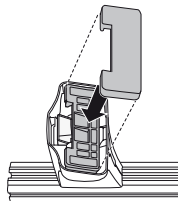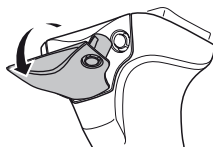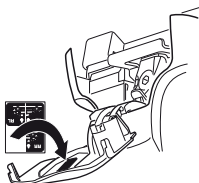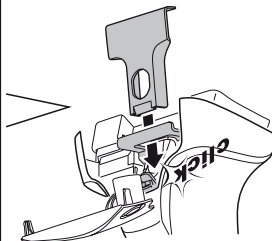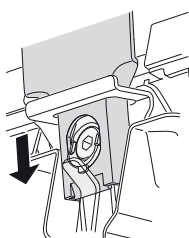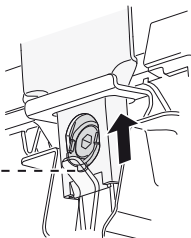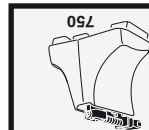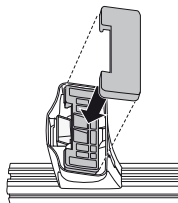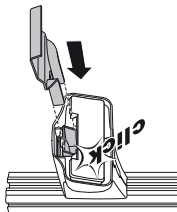
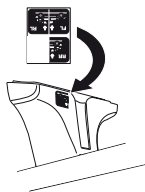


480R/754




CITROËN Berlingo, 3-dr Van, 97-02, 03-08
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06
PEUGEOT Partner, 3/4-5-dr Van, 97-02, 03-08
PEUGEOT Ranch, 3/4-5-dr Van, 97-02, 03-08





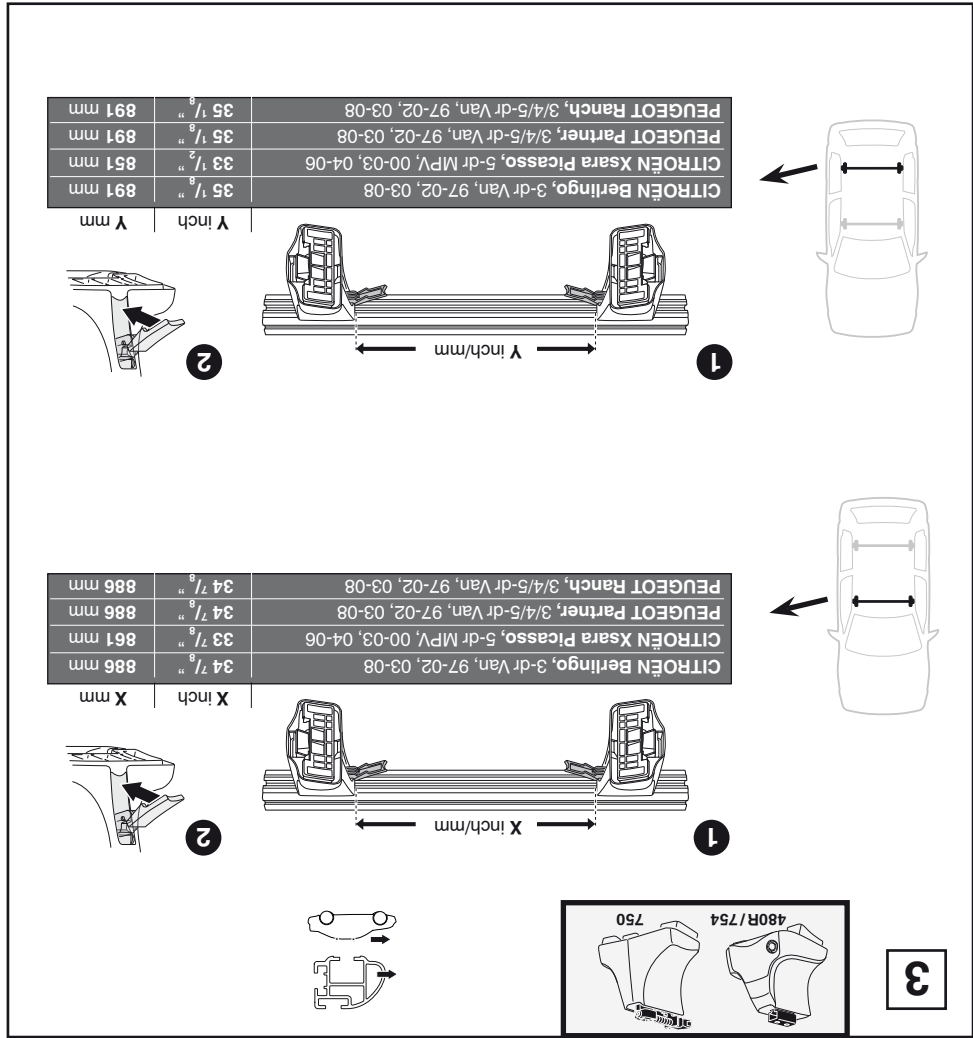
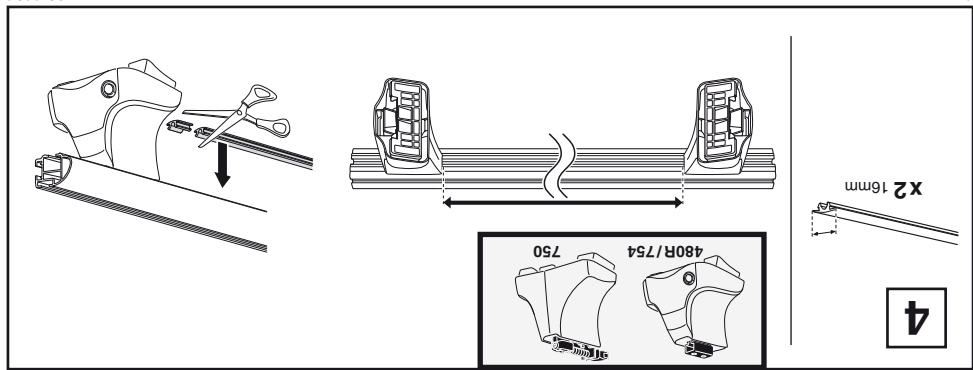


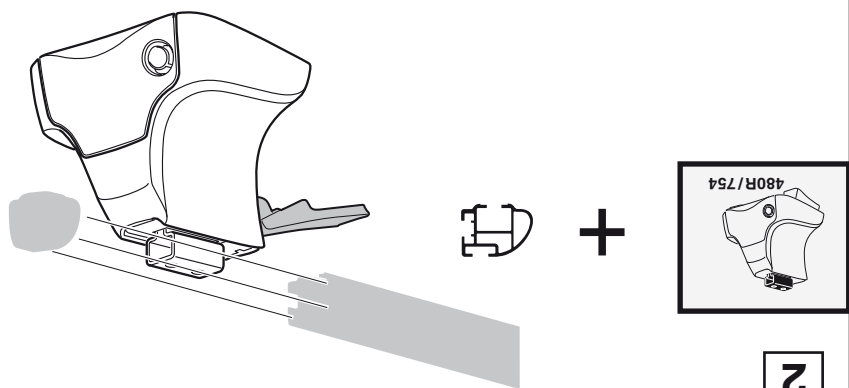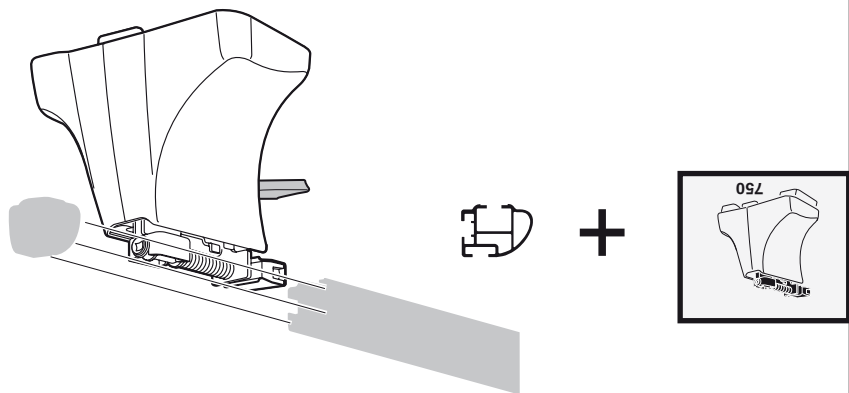

2

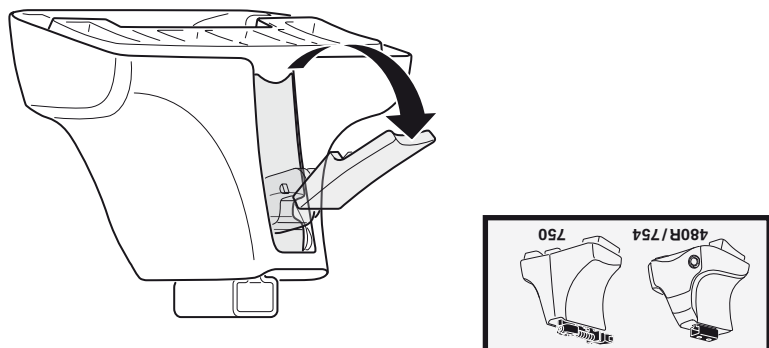

1

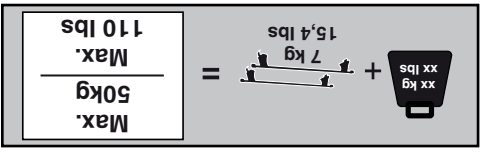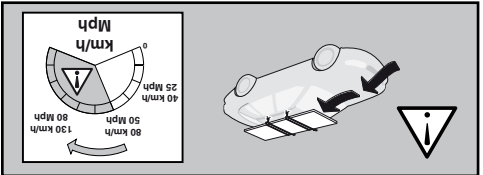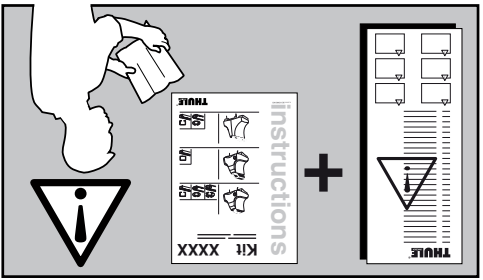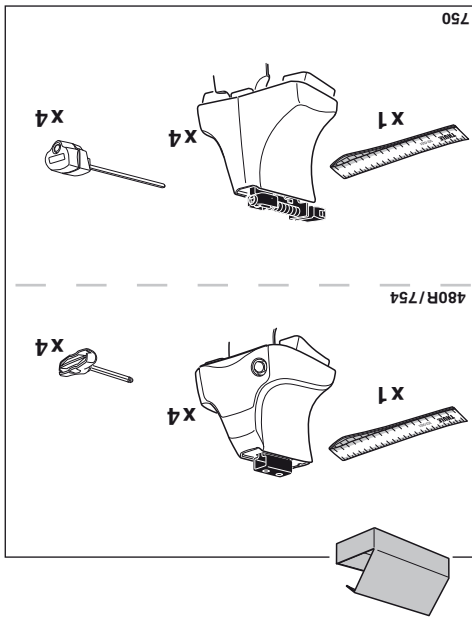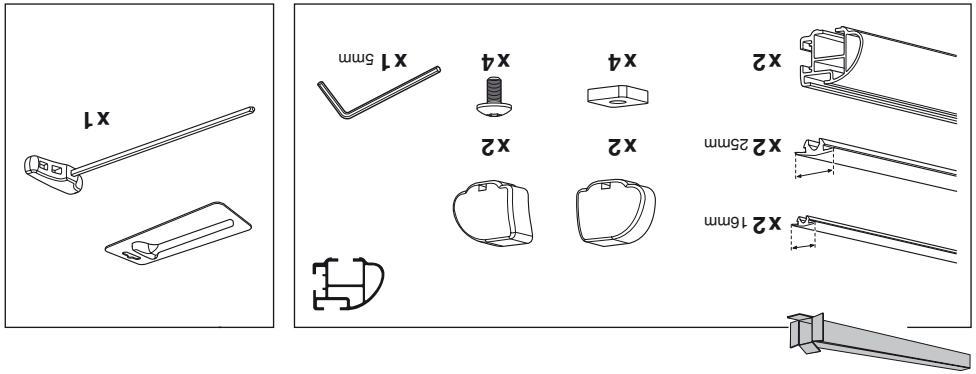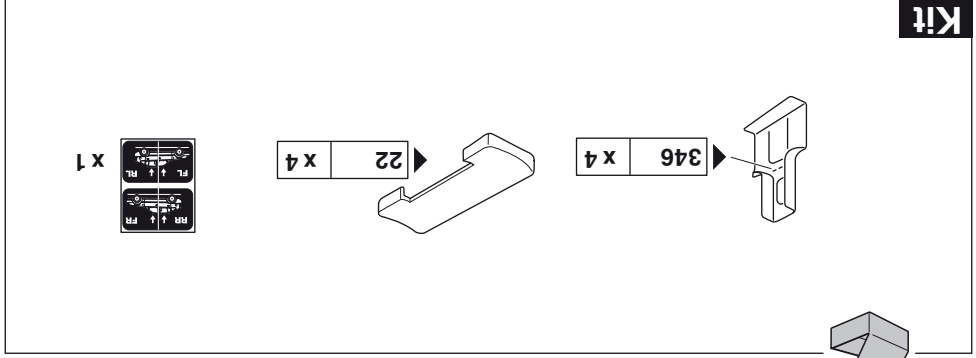


instructions

© 20090713; 503-1184

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN®

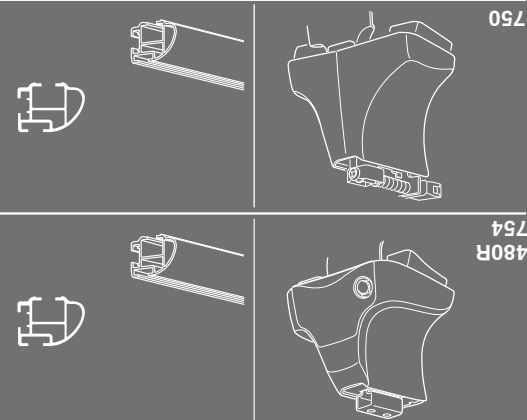

* without sunroof

CITROËN Berlingo, 3-dr Van, 97-02, 03-08
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-06*
PEUGEOT Partner, 3/4-5-dr Van, 97-02, 03-08
PEUGEOT Ranch, 3/4-5-dr Van, 97-02, 03-08

Kit 1184