





Thule Rapid System Kit 1287

> Instructions

TOYOTA Landcruiser Prado, 5-dr SUV, 02-09

TOYOTA Landcruiser 90, 5-dr SUV, 02-03

TOYOTA Landcruiser (120), 5-dr SUV, 04-09

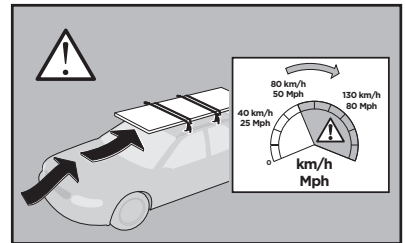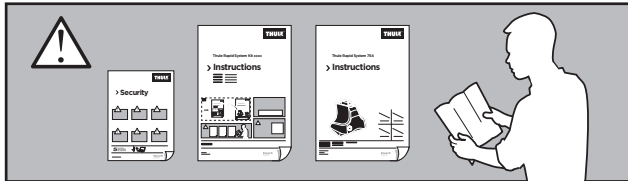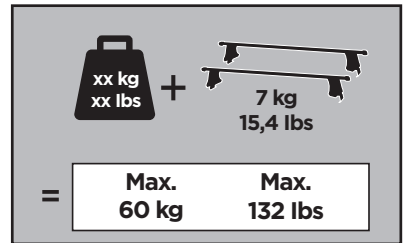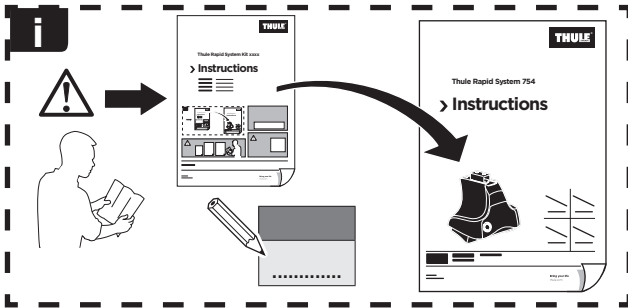

ISO 11154-E



111 x2




477 x2




x1

113 x2





551 x2



x1

1

| | X (scale) | X (mm) | X (inch) |
|---|-----------|--------|----------|
| TOYOTA Landcruiser Prado , 5-dr SUV, 02-09 | 48 | 1131 | 44 1/2 |
| TOYOTA Landcruiser 90 , 5-dr SUV, 02-03 | 48 | 1131 | 44 1/2 |
| TOYOTA Landcruiser (120) , 5-dr SUV, 04-09 | 48 | 1131 | 44 1/2 |

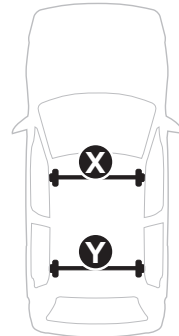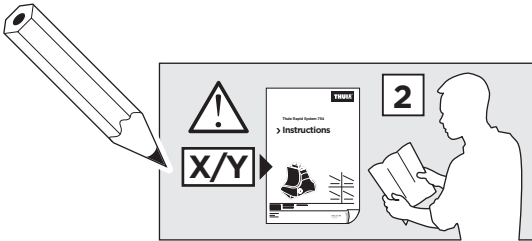



| | Y (scale) | Y (mm) | Y (inch) |
|---|-----------|--------|----------|
| TOYOTA Landcruiser Prado , 5-dr SUV, 02-09 | 44 | 1091 | 43 |
| TOYOTA Landcruiser 90 , 5-dr SUV, 02-03 | 44 | 1091 | 43 |
| TOYOTA Landcruiser (120) , 5-dr SUV, 04-09 | 44 | 1091 | 43 |


2

TOYOTA Landcruiser Prado, 5-dr SUV, 02-09

TOYOTA Landcruiser 90, 5-dr SUV, 02-03

TOYOTA Landcruiser (120), 5-dr SUV, 04-09

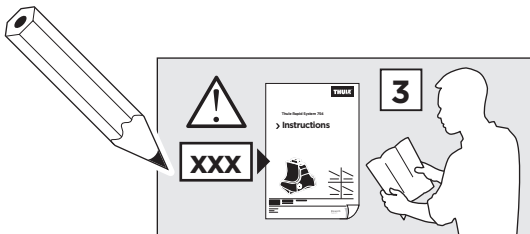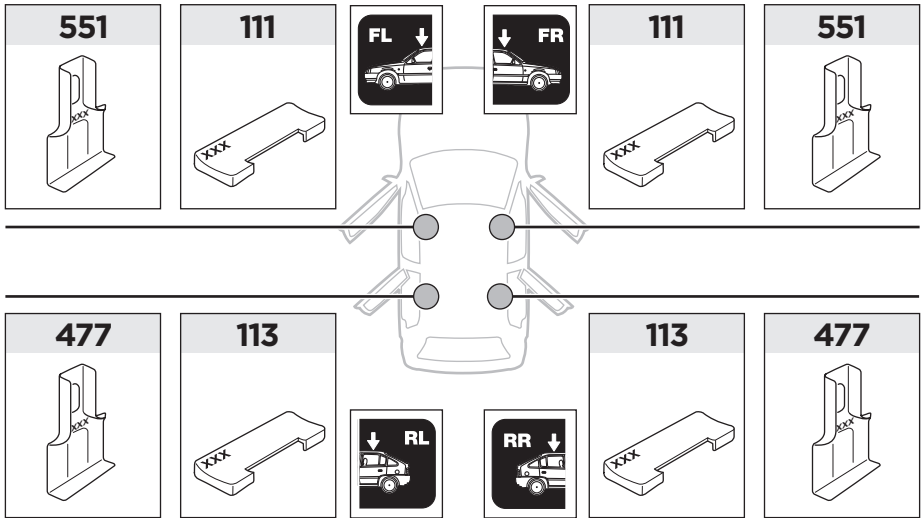

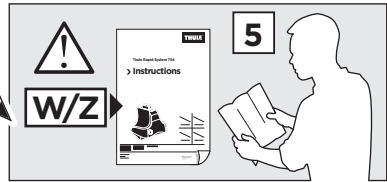3

| | W (mm) | Z (mm) | W (inch) | Z (inch) |
|---|------------|------------|-----------|-----------|
| TOYOTA Landcruiser Prado , 5-dr SUV, 02-09 | 355 | 710 | 14 | 28 |
| TOYOTA Landcruiser 90 , 5-dr SUV, 02-03 | 355 | 710 | 14 | 28 |
| TOYOTA Landcruiser (120) , 5-dr SUV, 04-09 | 355 | 710 | 14 | 28 |

