
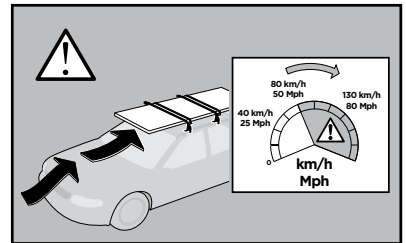
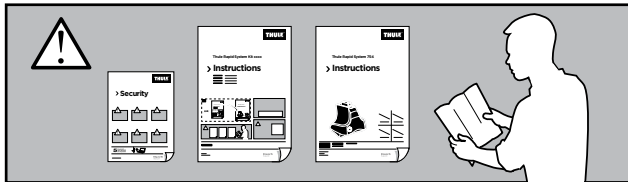
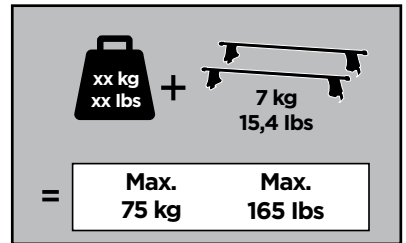


Thule Rapid System Kit 1449

> Instructions

FORD Mondeo, 5-dr Estate, 07-*

* without railing


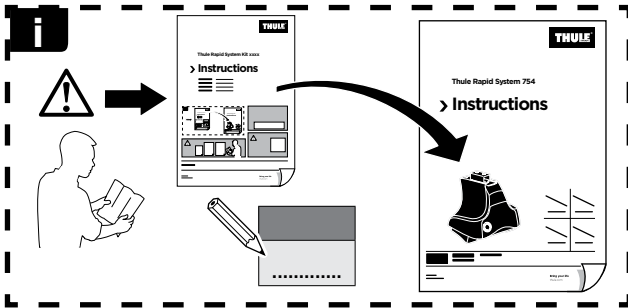


ISO 11154-E


141449

C.20120525
519-1449-01

Bring your life
thule.com

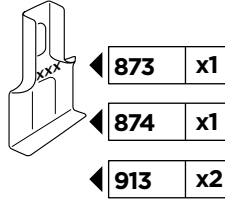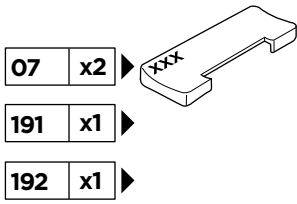



x1



x1

1


	X (scale)	X (mm)	X (inch)
FORD Mondeo, 5-dr Estate, 07-	41	1061	41 ³/₄

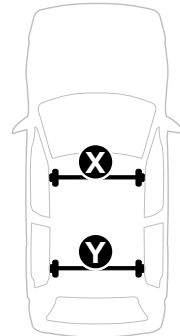
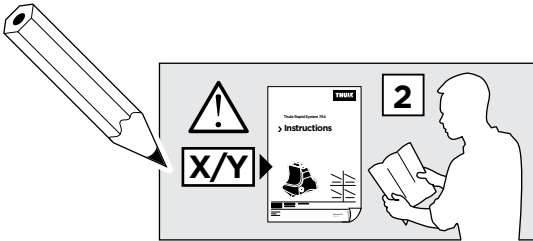


	Y (scale)	Y (mm)	Y (inch)
FORD Mondeo, 5-dr Estate, 07-	35	1001	39 ³/₈

2

FORD Mondeo, 5-dr Estate, 07-

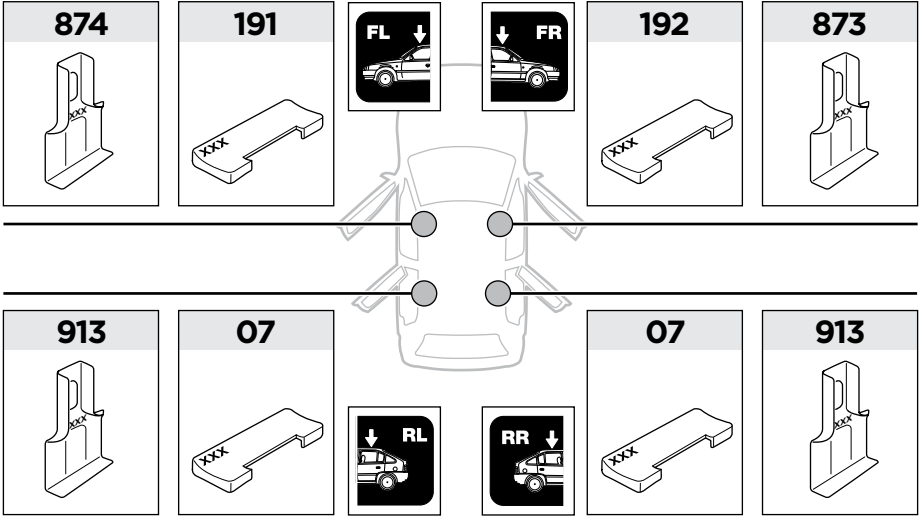

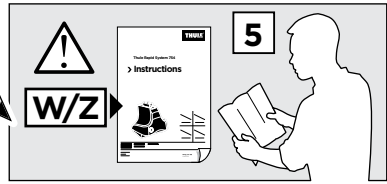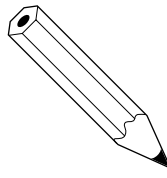3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Mondeo, 5-dr Estate, 07-	270	810	10 ⁵/₈	31 ⁷/₈

