
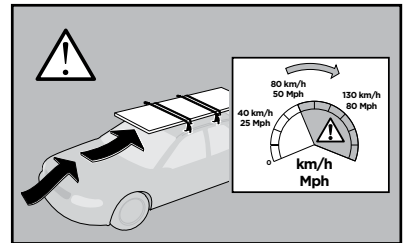
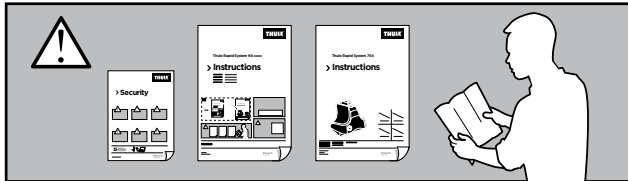
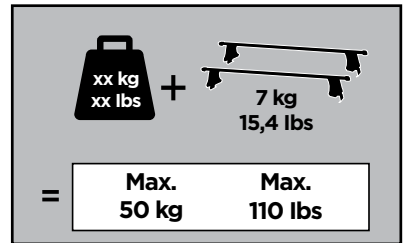


Thule Rapid System Kit 1602

> Instructions

BMW X1, 5-dr SUV, 10- (Without railing)





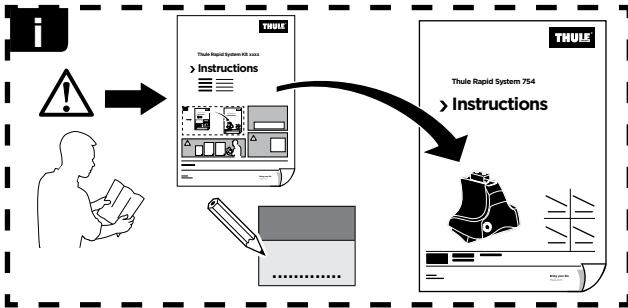


ISO 11154-E

141602



C.20120920
519-1602-01

Bring your life
thule.com

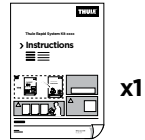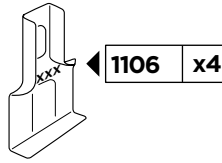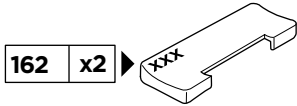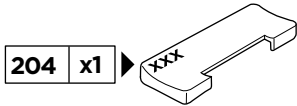

1


	X (scale)	X (mm)	X (inch)
BMW X1, 5-dr SUV, 10- (Without railing)	41,5	1066	42

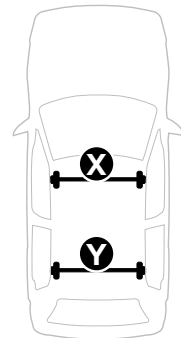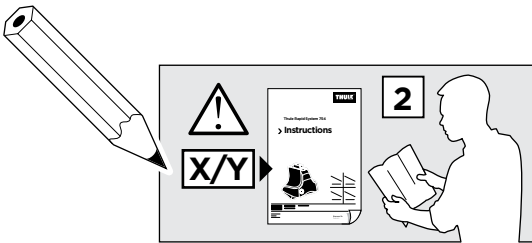


	Y (scale)	Y (mm)	Y (inch)
BMW X1, 5-dr SUV, 10- (Without railing)	40,5	1056	41 ⁵/₈

2

BMW X1, 5-dr SUV, 10- (Without railing)

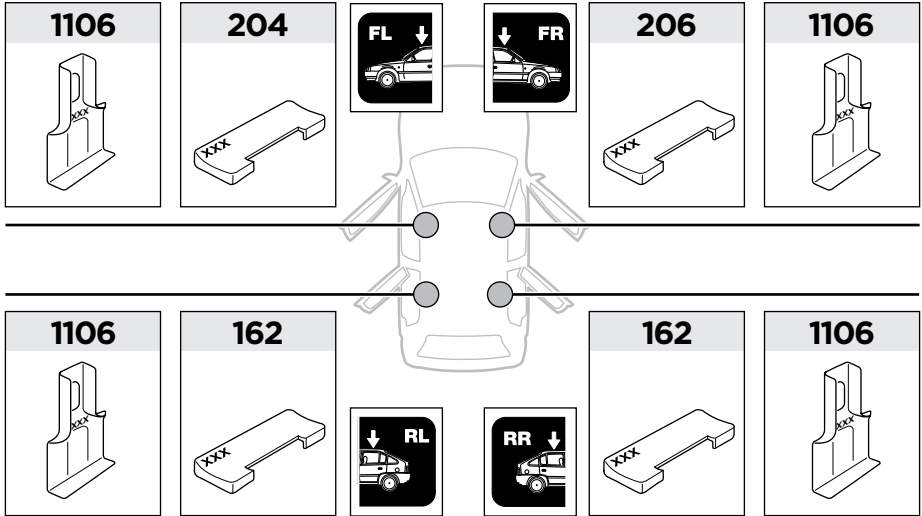

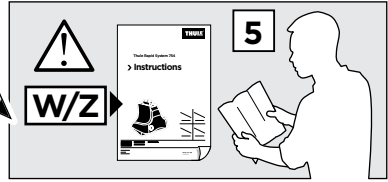3

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW X1, 5-dr SUV, 10- (Without railing)	310	700	12 1/4	27 1/2

