
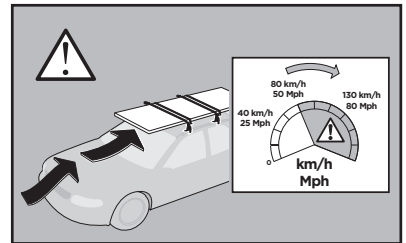
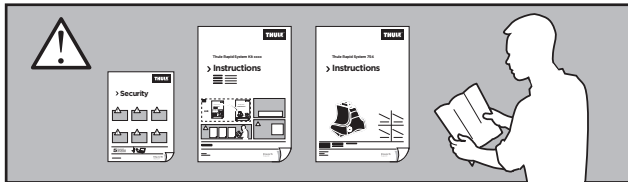
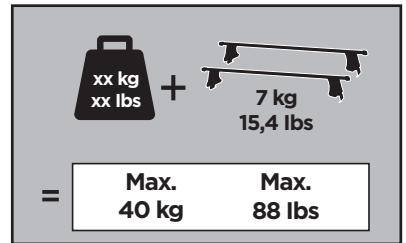


## Thule Rapid System Kit 1605

# > Instructions

CITROËN C3, 5-dr Hatchback, 02-09

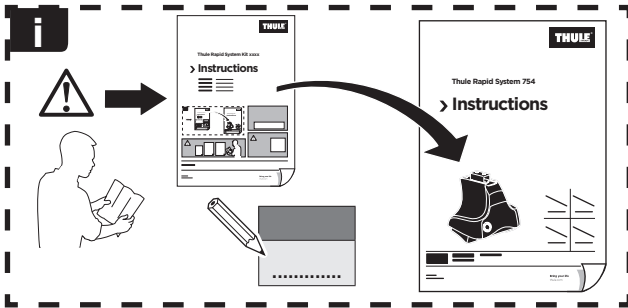

ISO 11154-E


141605

C.20130107  
519-1605-01

Bring your life  
thule.com



23 x1



24 x1

78 x1

79 x1




462 x2



1097 x2





x1



x1

# 1



	X (scale)	X (mm)	X (inch)
<b>CITROËN C3</b> , 5-dr Hatchback, 02-09	<b>33,5</b>	<b>986</b>	<b>38 <sup>7</sup>/<sub>8</sub></b>

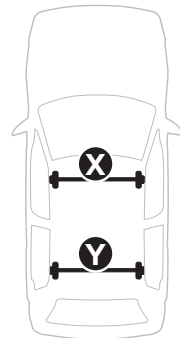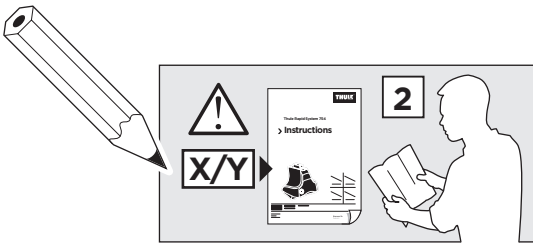


	Y (scale)	Y (mm)	Y (inch)
<b>CITROËN C3</b> , 5-dr Hatchback, 02-09	<b>29,5</b>	<b>946</b>	<b>37 <sup>1</sup>/<sub>4</sub></b>

**2**

**CITROËN C3, 5-dr Hatchback, 02-09**

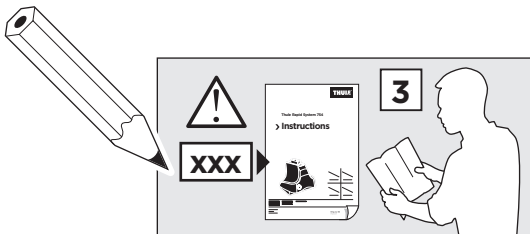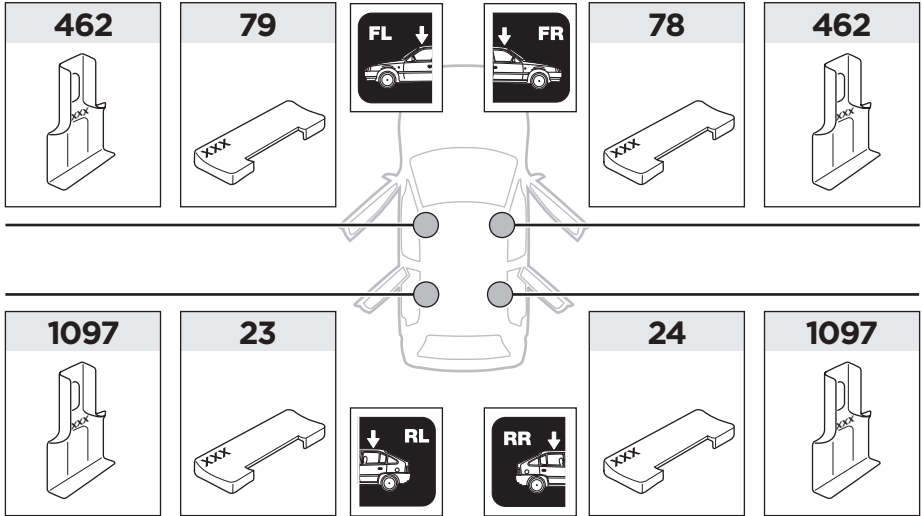

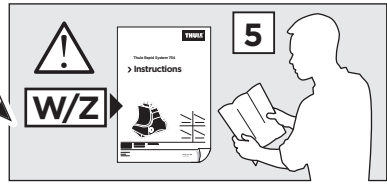**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>CITROËN C3</b> , 5-dr Hatchback, 02-09	<b>280</b>	<b>650</b>	<b>11</b>	<b>25 <sup>5</sup>/<sub>8</sub></b>

