

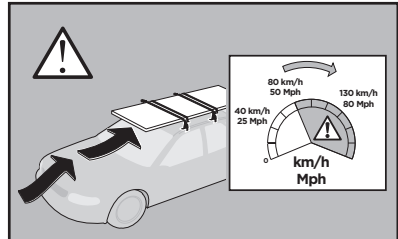
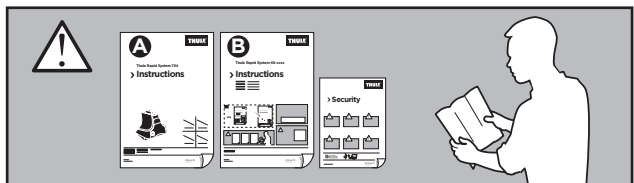


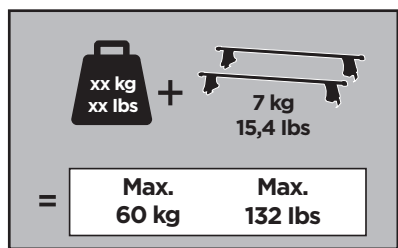

Thule Rapid System Kit 1734

> Instructions

RENAULT Captur, 5-dr SUV, 13-

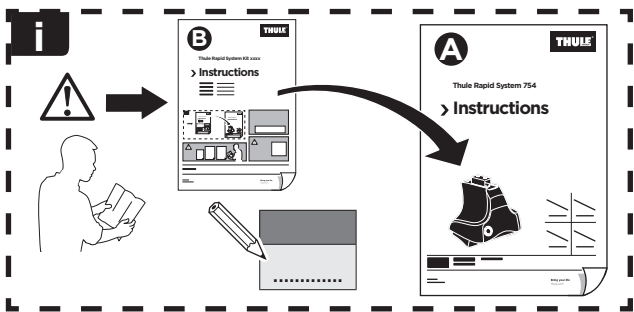

ISO 11154-E


141734

C.20130701
519-1734-01

Bring your life
thule.com




46 x2



163 x1



164 x1



1150 x2



1151 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Captur, 5-dr SUV, 13-	36	1011	39 ³ / ₄

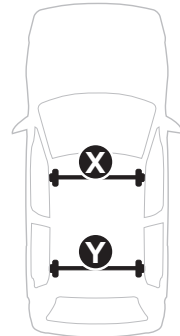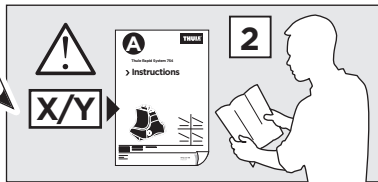
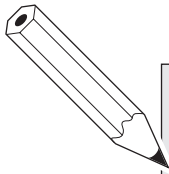


	Y (scale)	Y (mm)	Y (inch)
RENAULT Captur, 5-dr SUV, 13-	28,5	936	36 ⁷ / ₈

2

RENAULT Captur, 5-dr SUV, 13-

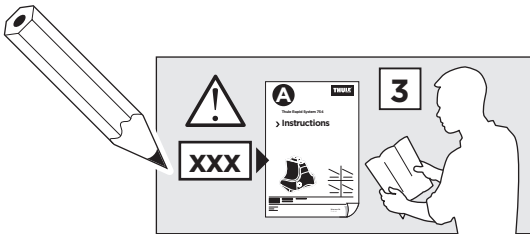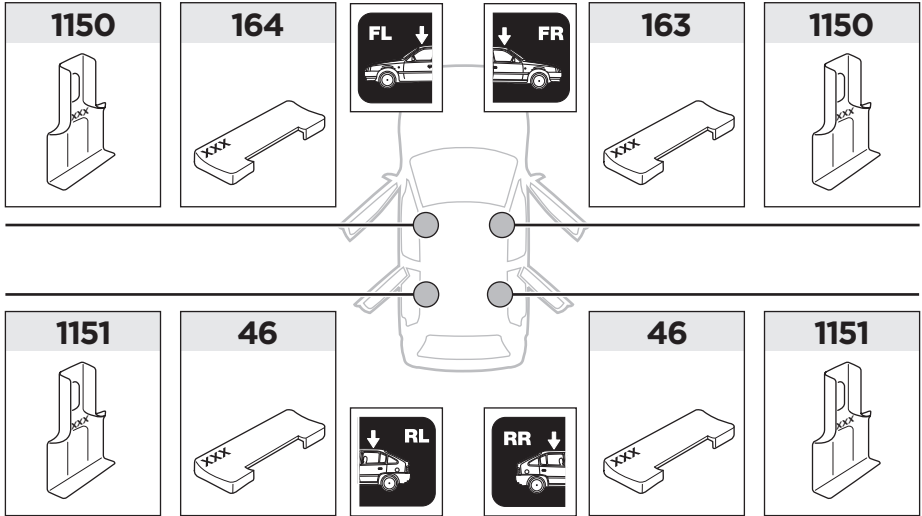

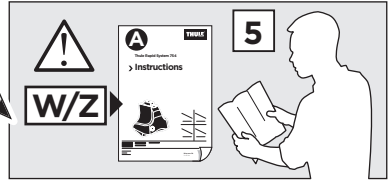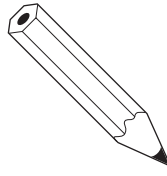3

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Captur , 5-dr SUV, 13-	215	725	8 ½	28 ½

