

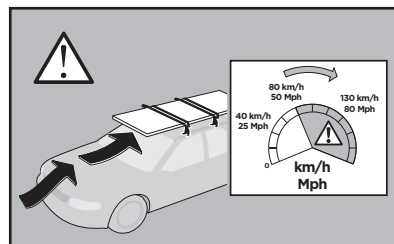
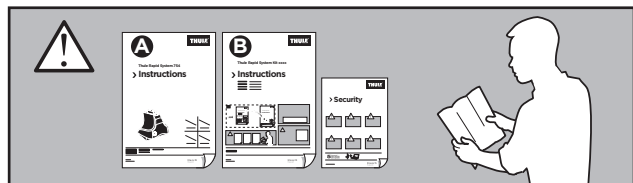


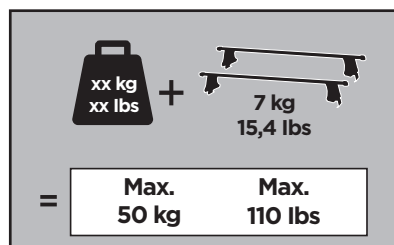

## Thule Rapid System Kit 1759

# > Instructions

FORD Kuga, 5-dr SUV, 13-

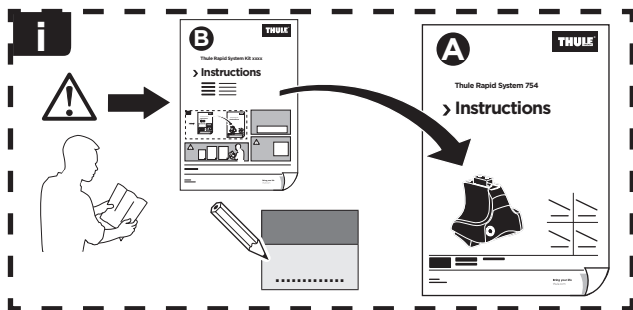

ISO 11154-E


141759

C.20140318  
519-1759-01


Bring your life  
thule.com




265 x2



326 x1



327 x1



1113 x2



1170 x2






x1



x1

# 1



	X (scale)	X (mm)	X (inch)
FORD Kuga, 5-dr SUV, 13-	46	1111	43 3/4

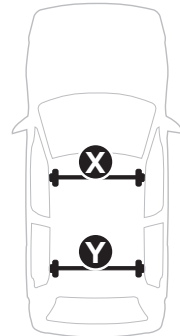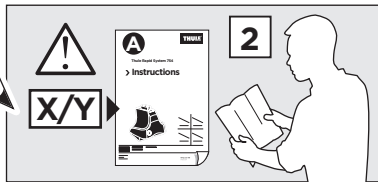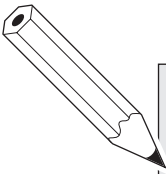


	Y (scale)	Y (mm)	Y (inch)
FORD Kuga, 5-dr SUV, 13-	39,5	1046	41 1/8

**2**

**FORD Kuga, 5-dr SUV, 13-**

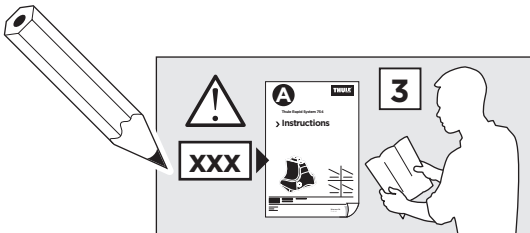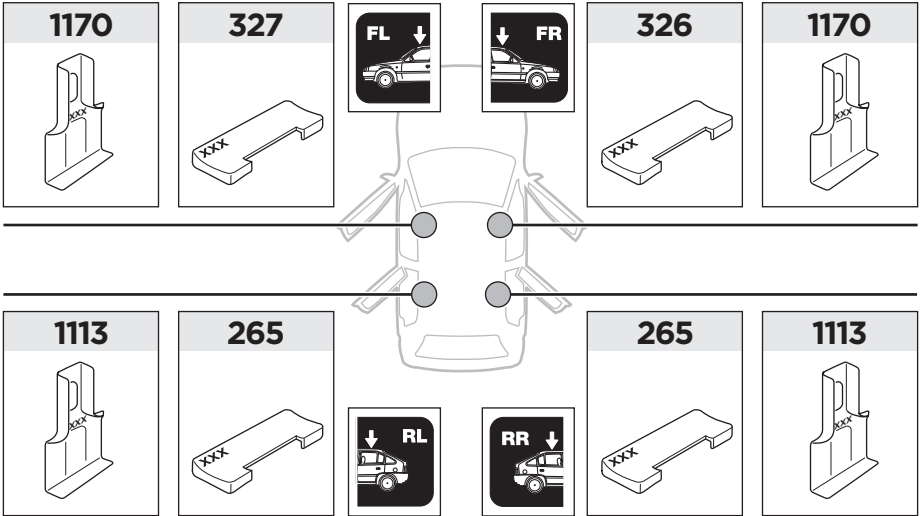

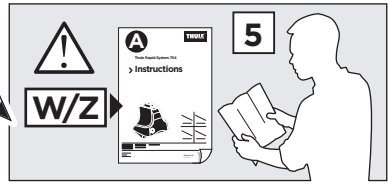**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>FORD Kuga, 5-dr SUV, 13-</b>	<b>300</b>	<b>700</b>	<b>11 3/4</b>	<b>27 1/2</b>

